TER RAC IN

SIP-Based Audio over IP

User Manual v5.06

Firmware Version

v3.0.4.1 v3.0.4.0 v3.0.3.6 v3.0.3.2 v3.0.3.1 v3.0.2.81 v3.0.2.67 v3.0.2.57 v3.0.2.44

© 2019 Terracom, a member of PAX ProAV Group.

Table of Contents	Page
About This Manual	6
1.1 Safety Instructions & Declaration	
1.2 Notice Signs	
	Q
System Overview	0
2.1 System Network	
2.2 Applications	
2.2.1 In-Store	
Quick Start	13
System Hardware	18
4.1 TERRA IP Audio Decoder	
4.1.1 TERRA-EX	
4.1.1.1 Front Panel	
4.1.1.2 Rear Panel	
4.1.2 TERRA-EXA	
4.1.2.1 Front Panel	
4.1.2.2 Rear Panel	
4.2 TERRA IP Encode/Decoder	
4.2.1 TERRA-IEX	
4.2.1.1 Front Panel	
4.2.1.2 Real Parlet	
4.2.2.1 Front Panel	24
4.2.2.2 Rear Panel	
4.2.3 TERRA-FDX	
4.2.3.1 Front Panel	
4.2.3.2 Rear Panel	
4.3 TERRA-FXO	
4.3.1 Front Panel	
4.3.2 Rear Panel	
4.4 IERKA-IU	
4.4.1 Front Panel	
4.4.2 Rear Panel	
4.3 IERRA-DS	
4.5.1 Front/Rear Panel	
4.0 IERRA-N	
4.6.1 Control Panel	
4 .7 PPM-115	
4.7.1 Control Panel	
4.7.2 Side Panel	
4.7.3 LCD Menu	
4.7.3.2 Dial	
4.7.3.3 Message	
4.7.3.4 Setting	
4.8 Consoles and Accessories	
4.8.1 RAC5/RAC8	

	Contents	3
4.8.1.1 Wiring Connection with Terracom Device		40
Web Browser Configuration		41
51 Windows Layout		41
5.2 IP Address		41
5.3 Setup 1		42
5.3.1 Basic Setting		43
5.3.1.1 Network/Serial/System Time/Family Status/Serial Link/Third Party		
Controls/Codec Setting		43
5.3.1.2 SIP		46
5.3.1.3 Paging Setting/Audio Setting		
5.3.2 Device (List)		49
5.3.3 Function Libraries		50
5.3.3.1 Call Program (TERRA-DS)		
5.3.3.2 Device Group		
5.3.3.3 Command (String)		
5.3.3.4 LOGIC OUT		
5.3.5.5 310 Party Controls		
5.3.5 Call		
5.3.5 Hang Lin		
5.3.3.5 Monitor		
5.3.3.5 Monitor Cancel		
5335 Command (String)		
5.3.3.5 Logic Out		
5.3.3.5 Level Control/Level Read.		
5.3.3.5 ON/OFF Switch Control/Read		
5.3.3.5 Device Status		59
5.3.3.5 Multi Function		60
5.3.3.5 Scheduler		61
5.3.3.5 Netstream Select		61
5.3.3.5 Music Play/Music Stop		62
5.3.3.5 Line Hangup (TERRA-FXO)		62
5.3.3.5 Line Status (TERRA-FXO)		63
5.3.3.5 Logic Read		63
5.3.3.6 Multi Function		64
5.3.3.7 Macro (PPM-IT5)		64
5.3.3.8 Goto Button (PPM-IT5)		65
5.3.3.9 Locked Button (PPM-IT5)		65
5.3.3.10 External Variable (PPM-IT5)		
5.3.4 I/O Control		67
5.3.4.1 Local Control		
5.3.4.1 Logic-Call Button		
5.3.4.1 Logic-Command (String)		
5.3.4.1 Logic-Message Button		
5.3.4.1 Logic-Call Trigger & RAC-5/8 Call Target		
5.3.4.1 Logic-Iviessage Trigger & KAC-5/8 Iviessage Target		
5.3.4.1 Logic On/Off Switch		
5.3.4.1 Logic-Multi Eunction		
5341 RAC-Channel Select		
5.341 RAC-Play Target		
5.3.4.1 RAC Analog-Volume Control		
5.3.4.1 Edge Trigger Button		73

Terracom User Manual

4

5.3.4.1 Push To Talk	
5.3.4.1 Level Control	
5.3.4.2 Remote Control	
5.3.5 Audio Matrix	
5.3.6 Machine Windows (PPM-IT5)	
5.3.7 Media Setting	
5.3.7.1 File Access	
5.3.7.2 Recording Setting	28 دە
5.3.7.4 Play Setting	
5.3.7.5 David setting	
5.3.7.6 Internal/External Play List	
5.3.7.7 Disk Snace	
5.3.7.8 Play List Information	
5.3.8 LINE1/LINE2 (TERRA-FXO)	
5.3.9 IP Phone (TERRA-FXO)	
5.3.10 Telephone (TERRA-FXO)	
5.3.11 Output Volume	
5.4 Setup 2	89
5.4.1 Account Management	
5.4.2 Scheduler	
5.4.2.1 New Scheduler	
5.4.2.2 Internal Scheduler List	
5.4.2.3 In-Store Scheduler List	
5.5 Update	
5.5.1 Firmware	
5.5.2 Configuration	
5.5.3 GUI	
5.5.4 Update Reboot	
5.6 Status	
5.6.1 TERRA System	
5.6.2 Control Calibrate	
5.6.3 Serial Log	
5.6.4 Log File	
5.7 About	
5.8 Logout	
5.9 How-To	
591 Send (Sub Prest) Command to PPM-IT5	96
5.9.2 Use Logic Out to Activate Amplifier During Paging	
5.9.3 Make Telephone Call	
5.9.3.1 Using TERRA-FXO	
5.9.3.2 Using PPM-IT5	101
5.9.3.3 Using TERRA-FDX	101
5.9.4 Message Paging	102
5.9.5 Play Music/Message from Interna/External Play List	103
5.9.6 Calibrate the RAC and Push Button	104
5.9.6.1 Hotel Application	
Tools	108
6.1 SIP Server (Intercom)	
6.1 SIP Server (Intercom)6.2 Internet Paging Server (IPS)	108

	Contents	5
Maintenan	ce and Troubleshooting	118
Technical	Data	119
8.1	TERRA-EX/TERRA-EXU	119
8.2	TERRA-EXA	120
8.3	TERRA-IEX/TERRA-IEXU	121
8.4	TERRA-AMP	122
8.5	TERRA-FDX	122
8.6	TERRA-DS	123
8.7	TERRA-FXO	124
8.8	TERRA-IO	124
8.9	TERRA-K	125
8.10	PPM-IT5	126
8.11	Safety	126
Contact In	fomation	127

1 About This Manual

This manual is intended to provide with the necessary understanding of our system architecture as well as guide users through the configuration process.

1.1 Safety Instructions & Declaration

- Do not expose the device to extreme temperatures, direct sunlight, humidity, or dust, which could cause fire or electrical shock hazard.
- Keep away water or other liquids from the device. Otherwise fire or electrical shock may result.
- Connect the power cord only to an AC outlet of the type stated in this owner's manual or as marked on the unit. Otherwise fire and electrical shock hazard results.
- Avoid touching power plugs with wet hands. Doing so is a potential electrical shock hazard.
- Take care for correct polarity when operating the device from a DC power source. Reversed polarity may cause damage to the unit or the batteries.
- Avoid placing heavy objects on power cords. A damaged power cord is a fire and electrical shock hazard.
- Do not cut, scratch, bend, twist, pull, or heat the power cord. A damaged power cord is a fire and electrical shock hazard. Ask your TERRACOM dealer for replacement.
- Turn off immediately the unit, remove the power cord from the AC outlet and consult your TERRACOM dealer in any of the following circumstances:
 - o Smoke, odor, or noise getting out of the unit.
 - Foreign objects or liquids get inside the device.
 - $_{\odot}$ The unit has been dropped or the shell is damaged.
 - The power cord is damaged.
 - o If you continue using the device, fire and electrical shock may result.
- Do not drop or insert metallic objects or flammable materials into the unit as this may result in fire and electrical shock.
- Do not remove the device's cover, as there are exposed parts inside carrying high voltages that may cause an electrical shock. Contact your TERRACOM dealer if internal inspection, maintenance, or repair is necessary.
- Do not try to make any modifications to the device. This is a potential fire and electrical shock hazard.
- Avoid the device's ventilation slots to be blocked. Blocking the ventilation slots is a potential fire hazard.
- To prevent the unit from falling down and causing personal injury and/or property damage, avoid installing or mounting the unit in unstable locations.
- Leave enough space above and below the unit to provide good ventilation of the device. If the airflow is not adequate, the device will heat up inside and may cause a fire.
- Operate the device in an environment with a free-air temperature of between -5°C \sim 55°C (23°F \sim 131°F).

7

- Turn off all audio equipment when making any connections to the device, and make sure to use adequate cables.
- Do not use benzene, thinner, or chemicals to clean the device. Use only a soft, dry cloth.
- If the device is moved from a cold place (e.g., overnight in a car) to a warmer environment, condensation may form inside the unit, which may affect performance. Allow the device to acclimatize for about one hour before use.

1.2 Notice Signs

There are two types of signs can be used in this manual. The type is closely related to the effect that may be caused if it is not observed.

Note: Containing additional information.

Caution: The equipment or the property can be damaged, or persons can be lightly injured if the alert is not observed.

2 System Overview

• Why IP?

The advantages of audio over IP technology is to use the existing network and even cross the Internet.

• Where to Use It?

From the standard applications like shopping malls, hotels, museums, theme parks, hospitals, schools to more tricky and original applications, IP networks are everywhere.

Powerful Platform

The Terracom devices have a powerful processor. You will find a remarkable list of features like priority management, backup management, event management, scheduler, local channel and volume control, paging, echo cancellation, noise reduction.

Audio Streaming

Terracom offers the possibility to stream using the standard RTP protocol in unicast, multicast or broadcast. For some applications, like the In-store, the Terracom can stream using shoutcast/ icecast protocols.

SIP Benefits

All Terracom devices are using the SIP technology. It brings you the benefit to have a standard session protocol which can be compatible with IP PBX & soft phone.

PoE Benefits

All Terracom devices support the PoE (Power Over Ethernet). With PoE, the constraint of having AC power outlets is eliminated. This provides flexibility in placing Terracom devices in the most optimal locations instead of choosing locations where power is available. Optimal placement leads to more efficient network designs and better application performance. And if one day you want to change the location of your Terracom, it would be easier. The network installation can be accomplished easier, faster and for less cost. It is also safer because you can centralize the power management and protect it with an uninterruptible power supply (UPS). At last, use a manageable PoE network switch via web browser or SNMP allows the remote networking devices to be easily reset or shut down which saves the time and expense of dispatching a technician.

Management

Terracom embeds a web interface that enables you to control the Terracom through your favorite internet browser. For bigger system, you can use the SNMP protocol. For more complex system, the TerraServer will be your supervisor and the management solution of your installation.

etup1	Setup	2	Upd	late	Stat	Status About Logout																	
ssic Setting	Di	evice	F	unction	n Librari	anes Audio Matrix I/O Control Media Setting Output					ng Output Volume	ne											
INPUT	MOL	DE	PRIORITY		Mute	LINE OUT (AMP OUT)					STREAM	юл			CONT	ROL	OPT	ION	5			BUF	FER
						1 (A)	2(B)	S/PDIF	OU	r i	IP ADDRESS	PORT		SELE	ECT			INF	UT V	OLUM	4E		
SIP	Mono		1	-	23		1	N/A										IN2	-	35	+	RT	
MICIN	Mono	•	6	-			V	N/A	OFF	-	239,240,100,4	9012	IN1	•	1	-		IN2	-	35	+		
LINE IN	Mono		6	Ŧ	1	[V]	V	N/A	OFF	•	239,240,100,4	9012	IN1	•	2	•		IN2		35	+		
MESSAGE	Auto	•	6	-	[V]	[V]	V	N/A	OFF	-	239,240,100,4	9012	IN1	•	3	•		IN2	-	35	+		
HONITOR	Mono	•	2	•	100	1	1	N/A										IN2	•	35	Ŧ	RT	•
NET1	Auto	•	6	Ψ	$[\mathbb{Z}]$		V	N/A										IN2	+	35	τ	RT	3
NET2	Auto	٠	6	•	123	1	V	N/A										IN2		35	Ŧ	RT	*
N/W IN		MO	DE				51	OUTCAS	T/ICE	CAS	5T	STREAM MU	LTICAST	F									
0.000000000	_	-01886	1892	_				U	RL IGM			IGMP IP	POR	T			NET	1	_	_	NE	12	_
SOURCE 1	SHOU	Tcast	liceca	st 🕶	http:/	192.1	68.101	.32:9988							3	N1	•	4	٠	Fix	•	-	•
SOURCE 2	Strea	m Mult	licast	-								239.240.100.76	3005		100	N1		5		Fix		-	Ţ
SOURCE 3	Strea	m Mult	bcast	-								239.240.100.1	9012			ix	•	**	*	Fix			•
SOURCE 4	Stream	m Mult	licast	•								239.240.100.1	9012		F	ix	•	-		Fix	7	+	-
SOURCE 5	Stream	m Muli	licast	-								239.240.100.1	9012		F	ix	*	-	-	Fix	-	+	*
BOURCE 6	Stream	m Muli	bcast									239.240.100.1	9012		1	1X	•	-	•	Fix	•	-	7
BOURCE 7	Stream	n Mult	ocast	-								239.240.100.1	9012		F	1X	*	-		Fix	*		*
SOURCE 8	Strea	n Muli	licast	•		FDa	+ 9000	- 0000 ha	e basa		d hummon DO N	239.240.100.1	9012		1	ix	•	7		Fix		-	
							s 9000	-soou na	s under i	use	o ey system, bo n	or use areae policion (rour uest	8.9									

✤ Features

- 10/100MB Ethernet with RJ45 and CAT-5 connection.
- Power supplied via PoE or 24VDC power adapter.
- Simplify the installation, up to 9999 stations per system.
- Support TCP, UDP, SIP, RTP, IGMP, HTTP, DHCP, NTP and SNMP protocols management.
- G.711, G.722, G.726, G.727, G.729, MP3 audio codec and AAC+ decoder.
- Group calls, all call with or without chime.
- Manual and automatic call transfer from station to station and to telephone network.
- Multiple logic IO control.
- Integrated graphic user software-TerraManager for monitoring and fault reporting of all system components.
- TerraServer management software for site redundancy.
- · Web browser for device control and monitoring.
- Logic input: pre-defined call, a contact output activation. RS232 serial string generation, an alarm. fault display.
- Access control (remote door lock down).
- Full duplex with echo cancellation.

2.1 System Network

There are 3 ways for Terracom to communicate with each other.





2.2 Applications



2.2.1 In-Store

Use the Terracom devices to perform music and advertising messages at each shop. The Terracom device will receive the messages and schedule from TerraServer, and store them on the USB flash memory and play the messages on time.



3 Quick Start

Here is a simple demonstration showing how to connect to your Terracom device and perform an IP call. Each Terracom device comes with a default configuration.

1. Assign IP address to PC:

Each Terracom device is shipped from the factory with a default IP address of 192.168.102.10. For more information, see IP Address 41.

Then, your PC must have an IP address like 192.168.102.x (x is a value between 2 & 254).

Local Area Connection Properties	<u>? ×</u>	Internet Protocol (TCP/IP) Properties	<u>? ×</u>
General Advanced		General	
Connect using:	nfigure	You can get IP settings assigned automatically this capability. Otherwise, you need to ask you the appropriate IP settings.	f your network supports network administrator for
Cos Packet Scheduler S Caco Discovery Protocol Packet Driver S Caco Discovery Protocol Packet Driver S Themes Protocol (TCP/IP)		P address: 192 IP address: 192 Sybnet mask: 255 Default gateway: 192	. 168 . 102 1
Install. Uninstal Pro Description Transmission Control Protocol/Internet Protocol. The wide area network protocol that provides communica across diverse interconnected networks.	default	Orgitan BNS server address automatically Or Usg the following DNS server addresses Breferred DNS server:	
$\overleftarrow{\nu}$ Show icon in notification area when connected $\overleftarrow{\nu}$. Notify $\underline{m}e$ when this connection has limited or no co	nnectivity	Atemate DNS server:	Ad <u>v</u> anced
ОК	Cancel	[OK Cancel

2. Power Connection:

The Terracom device can be powered by PoE 48V via CAT-5 cable. For that you will need a PoE switch. Otherwise, the device can be powered by an external DC-JACK 24V-0.25A power supply. Once the unit is powered on, the Power LED on the device will light up.

3. Network Connection:

Use a straight CAT-5 cable to link your PC network card to the device. Open your favorite web browser (we recommend Mozilla Firefox). Type the IP address (By default: 192.168.102.10) into the address bar. You will be asked for a login. There are two default account settings, see as below. After login, you can start to operate the Terracom web inteface.

- Login: admin
- Password: admin
- 4. Assign IP address to Terracom Device:

 Change the IP address of your device at "Setup1 > Basic Setting > Network". After the settings has been saved, the Terracom unit will auto reboot.

Note: You might need to change the IP settings of your PC network card to be in the same network mask as the new IP address of your Terracom. To avoid the conflict issues when connecting multiple Terracom devices with the same IP address, be sure to only connect one Terracom device at a time to the Ethernet switch when assigning IP addresses.

Third Party Controls	
Serial Controls Service	C Enable Disable
Network Controls Service	Enable Disable Disable
+ Network Port	8010
+ Network IGMP Enable	🖲 Enable 🔘 Disable
++ Network IGMP address	239.240.100.101

- 5. SIP Server Setting:
- With SIP server:

The audio streaming can be done using a SIP Server. Go to "Setup >Basic Setting >SIP" and enter the settings of your SIP server.

Transfer Protocol	C TCP O UDP
Firewall Traversal Mode	SIP Server C TERRA Net
+ Username	ateis175
+ Password	
SIP Server IP	192,168.100.146
SIP Port	5060
RTP Port	6912

• Without SIP server:

If you don't have a SIP server, please follow the settings as below,

- Firewall Traversal Mode: TERRA Net
- o SIP Port: 5060
- o RTP Port: 6912
- 6. Device:

Add the Terracom device you want to call into the Address Book at "Setup1 > Device > Add New Device".

SIP

Transfer Protocol	C TCP O UDP
Firewall Traversal Mode	SIP Server
+ Username	ateis175
SIP Port	5060
RTP Port	6912

- Enter <u>name_device@XXX XXX XXX XXX YYYY</u> in the URI field.
 - For a SIP call: XXX XXX XXX = the SIP
 - server IP address.
 - $\circ\,$ For a direct call: XXX.XXX.XXX.XXX= the IP
 - address of the device we want to call.
 - $_{\odot}$ YYYY= the SIP port number you have

entered in the SIP settings.

7. Audio Output Matrix:

In the Terracom unit, there is a priority table. You can decide which inputs (SIP call, playlist stored on the USB key, IP streams, mic/line inputs) will be played on the output.

Always set the highest priority for SIP call.

ietup1	Setup	12.	Up	date	Sta	tus	Abo	ut L	ogout													
lasic Setting	De	evice		unctio	n Librari	es	Audio	Mabrix	1/0 0	Cont	rol Media Setti	ng Output Volume										
INPUT	MOL	DE	PRI	LINE OUT (AMP STREAM OUT OUT)								CONTROL OPTIONS							BUFFE		FER	
						1(A)	2(B)	S/PDIF	OU	т	IP ADDRESS	PORT		SELE	ст		IN	PUT	VOLU	ME.		
SIP	Mono		1	•	2		V	N/A									INC		- 35	+	RT	-
MICIN	Mono	-	6	-			3	N/A	OFF	-	239.240.100.4	9012	IN1	-	1	•	IN:	-	- 35	+		
LINE IN	Mono	•	6	Ψ	1		1	N/A	OFF	•	239.240.100.4	9012	DV1	•	2	•	INC		35	+		
MESSAGE	Auto	•	6	4	[V]	$ \Psi $	V	N/A	OFF	4	239,240.100,4	9012	1141	-	3	•	IN2		- 35	+		
MONITOR	Мопо	•	2	•	123	1	1	N/A									INC		35	+	RT	•
NET1	Auto		6	Ψ.	[V]		V	N/A									INC		- 35	τ	RT	•
NET2	Auto		6		123	1	1	N/A									ING		35	Ŧ	RT	٠
N/W TH		M	DE		_		51	HOUTCA	ST/ICE	CA	st	STREAM MU	ILTICAST	_	-							
		10.22			_			U	RL			IGMP IP	POR	T			NET1			NE	T2	_
SOURCE 1	SHOU	Tcas	;/iceca	ast 🔹	http:/	/192.1	68.101	.32:9988							1	N1	• 4	٠	Fix	•		٠
SOURCE 2	Stream	m Mu	ticast	•								239.240.100.76	3005		1	N1	• 5	•	Fix	•	-	٠
SOURCE 3	Stream	m Mu	ticast	•								239.240.100.1	9012		F	ix	•	٠	Fix	•		٠
SOURCE 4	Stream	m Mu	ficast									239.240.100.1	9012		F	ix	• -	•	Fix	-	-	•
SOURCE 5	Stream	n Mu	ticast	: ÷								239.240.100.1	9012		F	ix	+ -	•	Fix	-	-	+
SOURCE 6	Stream	m Mu	ticast	•								239.240.100.1	9012		F	ix	•	•	Fix	•		•
SOURCE 7	Stream	n Mu	ticast	•								239.240.100.1	9012		F	ίx	* -	٠	Fix	*	-	٠
SOURCE 8	Stream	m Mu	ticast									239.240.100.1	9012		F	ix	• -	٠	Fix		-	•
						* Po	rt 8000	-9000 ha	e been	l use	ed by system, DO N	OT use these ports on	your desig	174								

- 8. How to generate an IP Call:
- With the Terracom unit, you can also generate an IP stream. Here we use a simple example, one Terra-FDX call the other Terra-FDXs.



es: Setting Device	Furstion Librarian	Audo Matrix	1/C Carteral	Photo Setting	Output Volume	_
Device Name	FDX_118					
Product Type URI	TERRA FDX FDX_148@1	• 92. 168, 101. 1 18	:5060		1	
Zone	1,2				Max Zone: 2	

 Connect the Terra-FDX with the following: One mic to MIC-IN connector, one speaker to Line-Out connector and a push button to Control input (1 and GND) as shown in the picture below:



- Finished the step1-4 (IP setting) with two Terracom devices, now follow the steps below to perform an IP call:
- 1. Add Terra-FDX-2 into Terra-FDX-1's address book at "Setup1 > Device List", click the [Save] button.
- Add a Call function at "Setup > Function Libraries > Device Group".
 Choose the device and click the [Save] button.

asic Setting Device		Audio Matrix	I/O Control	Media Setting	Output Volume	
New - Device Group		1.0012586801055868000				
Name	Group1					
Intercom Mode	Call Next	-				
Device						
FDX_171 (FDX_171@192.	168, 101, 171: 5060)		^	F	X_171 (FDX_171@192.168.101.171:5060)	
			0	>)		
				<		
			0			
				>>		
				>>		

Save Cancel

3. Set the button control as shown in the picture below at "Setup > I/O Control" and save the setting.

Setup1	Setup2	Update	Status	About L	ogout					
Basic Sett	ing Device	Functi	on Libraries	Audio Matrix		Media S	Setting	Output Volume		
Local Co	ontrol						5,671			
INPUT	CONTROLLER		POSITION	FUNCTION		MODE	SECURITY	SOURCE	TARGET	
IN1	Logic	•		CallButton	*	Intercom 🕶	E	MIC IN	Device FDX_171	
1N2	12	-		-	•	Intercom =				CB
IN3	*	•				Intercom +				CB
OUTPU	T DEFAULT									
OUT1	NO-RC	ŝ	•							
OUT2	NO-RC	9	•							

- Controller: Choose "Logic".
- Position: N/A.
- Function: Choose "Call Button".
- Source: Choose "MIC IN".
- Target: Choose the target.

- Enable the "SIP Auto Answer" at the TERRA-FDX-2's "Setup1 > Basic Setting", here we choose "MIC" IN to fit the physical connection.
- Press the button and the Terra-FDX-1 will call Terra-FDX-2, now you can hear from the speaker and speak to the Terra-FDX-2 through the mic, and vice versa.
- During the SIP call, both two Terracom devices show the information at the upper-right part of the page.

SIP Auto Answer	🔘 Disable	Enable
SIP Auto Answer Input	MIC IN	$^{\odot}$ LINE IN

Version 3.0.2.46, 2044/12/14 06:25:20 TERRA-FDX, FDX_171@192.168.101.171 OUT-1: SIP / OUT-2: SIP

4 System Hardware

4.1 **TERRA IP Audio Decoder**

4.1.1 TERRA-EX



TERRA-EX is an IP audio decoder, it is equipped with an optional USB 2.0 interface for playlist backup or prerecorded announcement. The TERRA-EX has proposed as the most cost-effective output device which comes with 2 independent balanced line outputs, 1 contact output, 3 contact inputs, this makes TERRA-EX an ideal IP solution for any applications where you need a simple balanced audio output with some I/O contacts & relays.

The shoutcast/icecast decoding, USB backup, scheduler and the advertising management which make TERRA-EX is a perfect product for retail shops, too. The volume and the channel can be modified locally by connecting to a remote source selector such as RAC remote controller.

The TERRA-EX uses G.711, G.722, G.726, G.727, G.729, MP3 codec and AAC+ decoder. Network sources and volume controls can be implemented thanks to the analog inputs. Priority management, volume control, event management & scheduler can be easily setup via any of your favorite web browser.

Ordering Information					
Model	Description				
TERRA-EX	IP Audio Decoder (stereo line-OUT x1 or mono x2, input contact x3 & relay output contact(NO/NC)				
	each x1)				
TERRA-EX2	IP Audio Decoder (including all interfaces on TERRA-EX, plus RS232 x1)				
TERRA-EX4	IP Audio Decoder (including all interfaces on TERRA-EX, plus RS485 x1)				
TERRA-EXU	IP Audio Decoder (including all interfaces on TERRA-EX, plus USB2.0 x1)				
TERRA-EXU2	IP Audio Decoder (including all interfaces on TERRA-EX, plus RS232 x1, USB2.0 x1)				
TERRA-EXU4	IP Audio Decoder (including all interfaces on TERRA-EX, plus RS485 x1, USB2.0 x1)				

4.1.1.1 Front Panel



USB Type A Female Connector:

Optional 2.0 USB interface for music, message and recording (TERRA-EXU2 only).

Power LED:

The power LED lights up when the TERRA-EX is powered on.

Status LED:

The status LED will flash four times while the device is powered on. If there's a fault, the status LED will light up.

Headphone Connector:

A stereo line output (3.5 mm mini jack) for headphone.

24VDC Input:

24VDC power supply input (if no PoE available).

Ethernet/POE Connector:

Ethernet connector (RJ45) for PC configuration, monitoring and power supply.

IR Receiver [Not in Use]

4.1.1.2 Rear Panel



Audio Line Out (balanced audio output):

If you want to use unbalanced signal, connect the Cold (-) pin with the Shield (S) pin.

S: Shield, +: Hot audio signal, -: Cold audio signal.

Contact Output:

The contact output which can be programmed and send a pulse or a static closing/opening to an external device. When the device is powered on and working properly, the NC (normally open) contact is closed and the NO (normally open) contact is open.

Contact Input:

The contact input is designed to work with a simple contact, button and RAC5/RAC8. For example, when connecting a button to GND-pin and 1-pin, it can trigger the setting function which is configured on the web browser.

RS232 Connector:

A RS232 connector for 3rd party control.

The RS485 connector is also available depends on the user's need for 3rd party control.

4.1.2 TERRA-EXA



TERRA-EXA is an IP audio decoder with a built-in $2 \times 20W$ amplifier. It amplifies the IP terminal for 8 ohm speakers. It also comes with 3 contact outputs and 1 contact input.

Ordering Information				
Model	Description			
TERRA-EXA	Stereo OUT x1 or mono x2, input contact x3, relay output contact(NO/NC) x1			

4.1.2.1 Front Panel



Power LED:

The power LED lights up when the TERRA-EXA is powered on.

Status LED:

The status LED will flash four times while the device is powered on. If there's a fault, the status LED will light up.

4.1.2.2 Rear Panel



Ethernet Connector:

Ethernet connector (RJ45) for PC configuration and monitoring.

G AMP Out A/B:

2 x 8W amplifier outputs for the IP terminal for 8ohm speakers.

Contact Output:

The contact output which can be programmed and send a pulse or a static closing/opening to an external device. When the device is powered on and working properly, the NC (normally open) contact is closed and the NO (normally open) contact is open.

Contact Input:

The contact input is designed to work with a simple contact, button and RAC5/RAC8. For example, when connecting a button to GND-pin and 1-pin, it can trigger the setting function which is configured on the web browser.

24VDC Input:

24VDC external power supply.

4.2 TERRA IP Encode/Decoder

4.2.1 TERRA-IEX



The TERRA-IEX is a 2 channel audio over IP encoder/decoder which operates as an audio source for IP network such as a CD player or a sound card of a PC and be encoded in high quality MP3. A microphone can also be connected to the mic input and be encoded in G.722. An optional SPDIF input can also be used as a source. The TERRA-IEX streams its inputs in unicast or multicast. The same device also provides also 2 independent balanced outputs for full duplex communication or for local

outputs.

By using an optional USB 2.0 interface, the playlists can be used as a backup of the decoded stream or as a source for the IP streaming. The volume and the channel can be modified by connecting to a low-cost source selector such as RAC.

The contact inputs offers various kinds of implement such as a push button to connect to the TERRA-IEX will broadcast the background music in pre-defined zones. Another button will send the mic input for general announcement. The priority management, volume management, event management & scheduler can be easily setup via web browser.

Ordering Information				
Model	Description			
TEDDALIEY	IP Audio Encoder/Decoder (mic/line-IN x 2, stereo line-OUT x1 or mono x2, input contact x3, relay			
I ENNA-IEN	output contact(NO/NC)each x1, RS232 x1)			
TERRA-IEXU	IP Audio Encoder/Decoder (including all interfaces on TERRA-IEX, plus USB2.0 x1)			
	IP Audio Encoder/Decoder (including all interfaces on TERRA-IEX except change the RS232 x1 to			
IERRA-IEAU4	RS485 x1, plus USB2.0 x1)			

4.2.1.1 Front Panel



USB Type A Female Connector:

Optional 2.0 USB interface for music, message and recording (TERRA-IEXU and TERRA-IEXU4 only).

Serial Link:

Either a RS232 or a RS485 for 3rd part control.

 $\emph{10}$ If using the RS232 port, the connector B is as the RX pin and A is as the TX pin.

Power LED:

The power LED lights up when the TERRA-IEX is powered on.

Status LED:

The status LED will flash four times while the device is powered on. If there's a fault, the status LED will light up.

24VDC Input:

24VDC power supply input (if no PoE available).

Ethernet/PoE Connector:

Ethernet connector (RJ45) for PC configuration, monitoring and power supply.

IR Receiver [Not in Use]

4.2.1.2 Rear Panel



Mic/Line Input:

2 Mic/line balanced inputs. S: Shield, +: Hot audio signal, -: Cold audio signal.

Line Out (Balanced Audio output):

2 balanced line outputs (1 stereo or 2 mono). S: Shield, +: Hot audio signal, -: Cold audio signal.

Contact Input:

The contact input is designed to work with a simple contact, button and RAC5/RAC8. For example, when connecting a button to GND-pin and 1-pin, it can trigger the setting function which is configured on the web browser.

Contact Output:

The contact output which can be programmed and send a pulse or a static closing/opening to an external device. When the device is powered on and working properly, the NO (normally open) contact is opened, and RC (relay common) contact is closed.

Headphone Connector:

A stereo line output (3.5 mm mini jack) for headphone.

Image: Continual S/PDIF Transceiver/Receiver:

S/PDIF digital interconnect format.

4.2.2 TERRA-AMP



TERRA-AMP IP audio terminal comes with a built-in 2 x 15W amplifier on two independent balanced outputs, USB 2.0 interface for playlist backups or prerecorded announcement, 1 mic/line balanced input, 3 contact inputs and 2 contact outputs.

In many applications, the TERRA-AMP amplified IP terminal for 8 ohm speakers will be a cost-effective solution for commercial audio & public address systems. The mic & line inputs can be played locally or can be used as a source for a network stream.

The TERRA-AMP uses G.711, G.722, G.726, G.727, G.729, MP3 audio codec, AAC+ decoder and inbox scheduler. Local sources and volume control can be implemented using the analog inputs. The priority management, volume management, event management & scheduler can be easily setup via any of your favorite web browser.

	Ordering Information
Model	Description
TERRA-AMP	3.5mm stereo in x1, mic/line x1, stereo OUT x1 or mono x2, stereo line-OUT x1 or mono x2, input contact x3, relay output contact x2, RS232 x1
TERRA-AMP4	3.5mm stereo in x1, mic/line x1, stereo OUT x1 or mono x2, stereo line-OUT x1 or mono x2, input contact x3, relay output contact x2, RS485 x1

4.2.2.1 Front Panel



USB Type A Female Connector:

2.0 USB interface for music, message and recording.

Serial Link:

Either a RS232 or a RS485 for 3rd part control.

 $rac{1}{2}$ If using the RS232 port, the connector B is as the RX pin and A is as the TX pin.

Power LED:

The power LED lights up when the TERRA-AMP is powered on.

Status LED:

The status LED will flash four times while the device is powered on. If there's a fault, the status LED will light up.

24VDC Input:

24VDC power supply input (if no PoE available).

Ethernet/POE Connector:

Ethernet connector (RJ45) for PC configuration, monitoring and power supply.

4.2.2.2 Rear Panel



Stereo Line-in:

A stereo line output (3.5 mm mini jack) for headphone.

Mic/Line Input:

A Mic/line balanced input. S: Shield, +: Hot audio signal, -: Cold audio signal.

Line Output (Balanced Audio output):

2 balanced line outputs (1 stereo or 2 mono). S: Shield, +: Hot audio signal, -: Cold audio signal.

Control Input:

The contact input is designed to work with a simple contact, button and RAC5/RAC8. For example, when connecting a button to GND-pin and 1-pin, it can trigger the setting function which is configured on the web browser.

Contact Output:

The contact output which can be programmed and send a pulse or a static closing/opening to an external device. NC: normally close, RC: Relay common.

The NC (normally close) contact will be closed as soon as the device is powered on and working properly.

AMP Out A/B:

2 x 15W (8 ohm) independent amplifier outputs. +: Hot audio signal, -: Cold audio signal.

Note: 2 x 6W by PoE.

4.2.3 TERRA-FDX



The TERRA-FDX is design for paging and full duplex intercom system which offers the possibility to create bi-directional IP links for high audio quality and data transmission (G.711, G.722, G.726, G.727, G.729, MP3 audio codec and AAC+ decoder). Thanks to the standard SIP protocol, calls can be done by IP phones (AVAYA, CISCO, 3COM...).

The analog inputs, contacts and serial data are bi-directional and can be used in calling a device or a group of devices. The priority management, volume management, event management & scheduler can be easily setup via any of your favorite web browser.

Ordering Information										
Model	Description									
TERRA-FDX	Mic/linex2, s RS232x1	stereo	line-OUTx1	or monox2,	input	contactx3,	relay	output	contactx2,	USB2.0x1,
TERRA-FDX	Mic/linex2, s RS485x1	stereo	line-OUTx1	or monox2,	input	contactx3,	relay	output	contactx2,	USB2.0x1,

4.2.3.1 Front Panel



USB Type A Female Connector:

2.0 USB interface for music, message and recording.

Power LED:

The power LED lights up when the TERRA-FDX is powered on.

Generation Status LED:

The status LED will flash four times while the device is powered on. If there's a fault, the status LED will light up.

24VDC Input:

24VDC power supply input (if no PoE available).

Ethernet/POE Connector:

Ethernet connector (RJ45) for PC configuration, monitoring and power supply.

4.2.3.2 Rear Panel



Mic/Line Input:

2 Mic/line balanced inputs. S: Shield, +: Hot audio signal, -: Cold audio signal.

Line Out (Balanced Audio output):

2 balanced line outputs (1 stereo or 2 mono). S: Shield, +: Hot audio signal, -: Cold audio signal.

Serial Link:

Either a RS232 or a RS485 for 3rd part control.

If using the RS232 port, the connector B is as the RX pin and A is as the TX pin.

Control Input:

The contact input is designed to work with a simple contact, button and RAC5/RAC8. For example, when connecting a button to GND-pin and 1-pin, it can trigger the setting function which is configured on the web browser.

Contact Output:

The contact output which can be programmed and send a pulse or a static closing/opening to an external device. NO: normally open, NC: normally close, RC: Relay common. When the device is powered on and working properly, the NC contact is closed and the NO contact is open.

4.3 TERRA-FXO



In an IP intercom system, you may need to call a phone or a cell phone, the TERRA-FXO offers full duplex communication for IP intercom and telephone, it comes with 2 sets of telephone interfaces and

DTMF management for receiving calls or broadcasting.

Ordering Information					
Model	Description				
TERRA-FXO	Analog phone interface x2, RS232 x1				
TERRA-FXO4	Analog phone interface x2, RS485 x1				

4.3.1 Front Panel



Serial Link:

A RS232 interface for 3rd part control. The connector B is as the RX pin and A is as the TX pin.

Power LED:

The power LED lights up when the TERRA-FXO is powered on.

Status LED:

The status LED will flash four times while the device is powered on. If there's a fault, the status LED will light up.

24VDC Input:

24VDC power supply input (if no PoE available).

Ethernet/POE Connector:

Ethernet connector (RJ45) for PC configuration, monitoring and power supply.

4.3.2 Rear Panel



Handset:

2 sets of connectors to connect to handset.

Telephone Line-In:

2 LINE-In connectors to connect to telephone line.

4.4 TERRA-IO



The TERRA-IO is a Terracom device with contact outputs and inputs that are used in industrial & home automation applications or monitoring contact closures. The TERRA-IO is available for two options:

- TERRA-4IO 4 control contacts in and 4 control contacts out.
- TERRA-8IO 8 control contacts in and 8 control contacts out.

The serial link (RS232 or RS485 interface) can be used as a sensor for tele-monitoring in IP tunneling between a PC and a device. The contacts I/Os will be useful in industrial & home automation applications or contact closures monitoring. Thanks to the SNMP, the management is adapted to big systems.

Ordering Information				
Model	Description			
TERRA-4IO	Contact IN x4, relay contact OUT x4, RS232 x1			
TERRA-8IO	Contact IN x8, relay contact OUT x8, RS232 x1			
TERRA-4IO4	Contact IN x4, relay contact OUT x4, RS485 x1			
TERRA-8IO4	Contact IN x8, relay contact OUT x8, RS485 x1			

4.4.1 Front Panel



Serial Link:

Either a RS232 or a RS485 for 3rd part control.

 ${rac{1}{2}}$ If using the RS232 port, the connector B is as the RX pin and A is as the TX pin.

Power LED:

The power LED lights up when the TERRA-IO is powered on.

Status LED:

The status LED will flash four times while the device is powered on. If there's a fault, the status LED will light up.

24VDC Input:

24VDC power supply input (if no PoE available).

Ethernet/POE Connector:

Ethernet connector (RJ45) for PC configuration, monitoring and power supply.

4.4.2 Rear Panel



Contact Output Channel (4 or 8):

The contact output which can be programmed and send a pulse or a static closing/opening to an external device. +: normally open, -: Relay common.

When the device is powered on and working properly, the contact (+) is opened.

Contact Input (4 or 8):

The contact input is designed to work with a simple contact, button and RAC. For example, when connecting a button to GND-pin and 1-pin, it can trigger the setting function which is configured on web browser.

The TERRA-IO is available for two options:

- TERRA-4IO 4 control contacts in and 4 control contacts out.
- TERRA-8IO 8 control contacts in and 8 control contacts out.

4.5 TERRA-DS



The TERRA-DS wall-mount SIP/IP intercom station is an indispensable device for intercom solution, featuring high quality hands-free SIP/IP communication. Also, the contact inputs/outputs on TERRA-DS allows for electronic door/gates lock down. Thanks to an optional casing, it comes with IP54 vandal, water-proof and dust-proof standards.

Ordering Information				
Model	Description			
TERRA-DS1	Mic/line-INx1, speaker-OUTx1 & buttonx1, button ext. portx1, relay output contactx2			
TERRA-DS2	Mic/line-INx1, speaker-OUTx1 & buttonx2, button ext. portx1, relay output contactx2			
TERRA-DS3	Mic/line-INx1, speaker-OUTx1 & buttonx3, button ext. portx1, relay output contactx2			
TERRA-DS4	Mic/line-INx1, speaker-OUTx1 & buttonx4, button ext. portx1, relay output contactx2			

4.5.1 Front/Rear Panel



Ethernet/PoE Connector:

Ethernet connector (RJ45) for PC configuration, monitoring and power supply.

G Status LED:

The status LED will flash four times while the device is powered on. If there's a fault, the status LED will light up.

24VDC input:

24VDC power supply input (if no PoE available).

Built-in Condenser Microphone

Call Button:

A call button which performs the intercom call and can be set via web browser.

4.6 TERRA-K



The TERRA-K is a multi-function IP based microphone which is designed for full-duplex intercom and paging (Unicast/Multicast/Broadcast) over LAN/WAN. The TERRA-K can be used with the TerraManager to perform the recording function. Its pre-chime and post-chime can be congured via web browser.

4.6.1 Control Panel

Loudspeaker:

This built-in speaker to play chime and audio message when paging or monitoring signals from TerraManager and on web browser.

Power LED:

The power LED lights up when the TERRA-K is powered on.

Paging Button:

The "Push to Talk" button for paging.

Talk LED:

This LED lights up when the TERRA-K is in "talk mode".

Ethernet/PoE (RJ45) Connector:

Ethernet connector (RJ45) for PC configuration, monitoring and power supply.

24VDC Input

4.7 PPM-IT5





The PPM-IT5 console comes with a 5" TFT touch screen interface which allows intercom with all TERRACOM devices, call-paging, messages broadcasting and DSP matrix parameter control. Its back-

lit touch screen is designed for simple and user-friendly operation. Thanks to powerful echo cancellation, the PPM-IT5 delivers clear sound for full duplex communication. The 3 hardware keys can be freely assigned within the system control software.

All the paging parameters needed for site operation can be programmed such as assign zones to different buttons, name of zones, group of zones, messages triggering or event control. A total of 168 keys over 14 pages for zone or group of zones selections. The pre-recorded messages and chime are stored into the PPM-IT5 IP paging console. All the settings can be configured via web browser.

4.7.1 Control Panel



Microphone:

A 280mm flex microphone.

Power LED:

This LED lights up when the PPM-IT5 is powered on.

G Fault LED:

To display fault status of system, this LED will light up permanently if a fault state in the VACIE system has been engaged.

EVAC LED:

This LED lights up when system is under evacuation paging, this LED will light up permanently if a evacuation state in the VACIE system has been engaged.

Status	Frequency	Activity		
Permanent	3	System is under evacuation paging.		

GGG Button:

Push the button during the half-duplex conversation to activate the following commands below, this can be programmed via web interface.

Audio Source Select

- Audio Level -
- Audio Level +
- Push To Talk (Intercom)
- Push To Talk (Paging)
- Push To Talk (Evac Announce)
- Push To Talk (Vote Announce)

Loudspeaker:

A monitoring loudspeaker to play chime when paging or monitor the signal from audio processor.

Touch Screen:

A back-lit touch screen with 5" diagonal and 800 x 480 resolution, each buttons in the PPM-IT5 can be freely configured as a zone paging button or parameter adjustment in audio processor such as IDA8.

4.7.2 Side Panel



Microphone and Loudspeaker:

Use the internal speaker and microphone of PPM-IT5.

Phone Jack:

3.5mm headphone jack: To connect to a external headphone output.

3.5mm mic port (close to RJ9 connector): To connect to an external microphone input.

RJ9 Connector:

To connect to a RJ9 telephone handset.

4.7.3 LCD Menu

All the buttons displayed on the PPM-IT5 will be managed via Terracom web interface, the touch panel is for operation only. The PPM-IT5 supports multi-language, you can change the language shown on each button (default: English).



Drimary Horizontal Menu:

- MAIN: Display the device buttons, event buttons and function buttons.
- DIAL: For typing the telephone numbers such as SIP URI and so on.
- MESSAGE: Display the message list.
- CALLBACK: This function is applicable for EVCS system only.
- SETTING: Display the setting information.

Content area.

Operation:

SIP Call	Q Paging	Monitoring	Play message
Deselect All	তি Select all	Back to root menu (wo	b rks with Macro buttons)

Dage Up/Page Down.
4.7.3.1 Main



✤ Button Types:

When press the button displayed PPM-IT5, its color will be changed to a lighter color.

• Device Button (Blue): Display the device name on the button. There is an color indicator at the upper-middle corner of a button to display its status, see the picture below.



- o Green: Available
- o Red: Off-line
- o Gray: Busy

In case of changing a device button names, you can use Ateis Studio software to change the name of LAP, ECS and IDA8 and edit the names of Terracom device's on web interface.

- Command Button (Orange): Press to perform the Command (string) function which has defined on the web interface.
- Logic Out Button (Orange): Press to perform the Logic (Out) function which has defined on the web interface.
- Locked Button (Orange): Locked button to similar to Command button, but it holds the Up/Down status.
- Macro Button (Green): Manage the buttons like a folder. After create a Macro button, press to enter in its page. See how to create a Marco button from <u>Macro button</u> [64] chapter.



Switch between the Audio Input/Output Set:

Press the hardware button on the front panel, a pop-up window will be displayed for switching the audio source.

Please note the action of the three hardware buttons on CDM-T5 needs to be programmed via web interface >Steup 1 > Machine Windows > Parameter Setting > External buttons [78] first.

- Auto: Automatically detect the audio input/output set.
- Phone Jack: For plugging the external speaker and mic, the 1/8 inch (3.5mm) jack close to the RJ9 connector is the input.
- Mic: Use the internal speaker and microphone of PPM-IT5.
- RJ9 Connector: For plugging a RJ9 telephone handset.
- SIP Call:
- Call to other devices (one to one):
 - 1. Select a zone button which user wishes to call.
 - 2. Then press SIP Call button.
- The call from other devices (one to one):
 - When receiving the SIP call from external device, a confirmation window will display and ask whether to [Accept] or [Reject] the call.
 - 2. Click [Hang up] button to end this SIP call.
- Paging to multi-users (multi-zones):
 - 1. Select multiple zone buttons which user wishes to paging to.
 - 2. Then press Paging call button.

Paging Message to Multiple Devices:











- 1. Select multiple zone buttons (devices).
- 2. Select the message file.
- 3. Press Play Message button.

4.7.3.2 Dial

- BS: Backspace.
- CANC: Cancel all.
- CAPS: Caps lock.
- 🔛 SIP Call:



Now the 100 in the Device List and call "100@1 user doesn't have to spend much time on typing the entire URI on the touch panel. After enter

the name, and easily press the green button and the complete address will be dialed automatically if the name is existed.

For example, if you enter "100" and press the button, the PPM-IT5 will find the exact device named92.168.100.1:5060".

Telephone Call:

If you're going to dial a local phone or a cellphone, type the number and press button.

You can re-dial the last number by pressing P button.

4.7.3.3 Message

Play Audio Messages:

- 1. Select the audio file on Message page.
- 2. Select the devices, and press states button.
- 3. The audio files are stored in the device's flash. You can check the free disk space on the web interface. **Note:** The format currently supported is WAV (16k 16bit only).

4.7.3.4 Setting

Volume):

Use - button and + button to adjust the speaker volume.

• Brightness):

Use - button and + button to adjust the screen brightness.





4.8 Consoles and Accessories

4.8.1 RAC5/RAC8

The RAC can be used to adjust the source settings such as level control, parameters remotely. The two sets of 5/8 steps knobs on RAC can be programmed by using ATEÏS Studio software. The RAC5/8 is available for US and EU type, and is powered by 24VDC.



RAC5/RAC8 (EU Type)



RAC5/RAC8 (US Type)

- RAC5: Wall-mount level and 5 sources selectors
- RAC8: Wall-mount level and 8 sources selectors

4.8.1.1 Wiring Connection with Terracom Device

The RAC is using in analogue connection. It can be influenced by nearby power cables or 100V speaker lines. To avoid this use shielded cable to connect the device. The type of cable mostly used for this is the CAT5 cable.



Save Cancel

5 Web Browser Configuration

The Terracom devices can be programmed and controlled by Internet browser interface.

5.1 Windows Layout

	_				-	_		SIP-based	audio	and	control over local	network and interne	1	1	n.			O	л-1:	MIC	IN /	OUT-	2: N
etup1	Setup	12	Upd	late	Sta	tus	Abo	ut Lo	ogout	-		884.04			2	<u>.</u>							
asic Setti	B	evice	F	unctio	n Librari	es	Audio	Matrix	I/O C	Cont	rol Media Setti	ng Output Volum	e										
INPUT	MOL	DE	PRIC	RITY	Mute	LIN	IE OUT OUT	(AMP)			STREAM	JUT			CON	ITRO	L OP	TIONS	5			BUF	FEI
sectory of the	0.000000			2012-000-20		1(A)	2(B)	S/PDIF	OU	Т	IP ADDRESS	PORT		SE	LECT	ŝ		INP	UT V	OLU	ME		0245840
SIP	Mono	•	1	•	<u>[[]]</u>		V	N/A										IN2	•	16	*	RT	2.9
MIC IN	Mono	•	6				V	N/A	OFF	•	239.240.100.4	9012	IN	1 •	- 1	•		IN2	•	16	*		
LINE IN	Mono	•	6				V	N/A	OFF	•	239.240.100.4	9012	IN	1 •	2	•		IN2	•	16	*		
MESSAGE	Auto	•	6		1	1	V	N/A	OFF		239.240.100.4	9012	IN	1 •	• 3	•		IN2	•	16	-		
MONITOR	Mono	*	2	-		1	V	N/A										IN2	*	16	*	RT	33
NET1	Auto	*	6	-	1	1	V	N/A			B							IN2	*	16	*	RT	88
NET2	Auto	*	6	•		1	V	N/A										IN2	*	16	*	RT	197
NI /3A/ TRI			NDE .		-		5	HOUTCAS	ST/ICE	CAS	я	STREAM I	IULTICAS	т									
IN W TH	~	Più	JUE .					U	RL			IGMP IP	PO	RT			NET	Г1			NE	r2	
SOURCE 1	SHOU	Tcast	t/iceca	st 🔻	http:/	//192.1	68.10	1.32:9988								IN1		4		Fix		-	
SOURCE 2	Stream	m Mul	lticast									239.240.100.76	300	5		IN1		5		Fix		-	
SOURCE 3	Stream	m Mul	lticast	•								239.240.100.1	901	2		Fix		33		Fix		-	
SOURCE 4	Stream	m Mul	lticast	•								239.240.100.1	901	2		Fix	×		•	Fix	•		
SOURCE 5	Stream	m Mul	lticast	•								239.240.100.1	901	2		Fix			•	Fix	•	-	
SOURCE 6	Stream	m Mul	lticast	•								239.240.100.1	901	2		Fix		100	•	Fix			
SOURCE 7	Stream	m Mul	lticast	•								239.240.100.1	901	2		Fix			•	Fix	•	-	
SOURCE 8	Stream	m Mul	lticast	•								239.240.100.1	901	2		Fix	•		•	Fix		-	

- O Brimary Menu & Secondary Menu.
- C Display the current firmware version and the information of system time.
- Display the current device and URI (sip:x@y:Port) that user is using.
- Line Out (Display the information of the 2 channels Line Out).
- Content area.
- Save/Cancel/Done buttons.

5.2 IP Address

If you lose the IP address of your Terracom devices and cannot connect to the web browser, please read the following instruction.

- With only one device:
 - 1. Speak Out IP Address:

Most of the Terracom devices (TERRA-EX, EXA, IEX, AMP, FDX, DS.) have a "Speak Out IP

Address" function on web browser. The default is checked.

When the Status LED on the devices flashes four times while it is powered on:

- Short-circuit (close) the contact input 1-pin and G-pin will read the IP address through the speakers.
- o Short-circuit the contact input 2-pin and G-pin will reset to the default factory setting.



2. Using Packet Analyzer software:

Download the free Packet Analyzer software such as Wireshark and set the filter as "ip.addr == 239.240.38.25", a list of all Terracom units connecting to your LAN will be displayed.

Athe	eros L1C PCI-E Eth	ernet Controller [Wire	shark 1.6.7 (SVN Rev 41973 f	from /trunk-1.6)]
<u>F</u> ile <u>E</u>	<u>E</u> dit <u>V</u> iew <u>G</u> o	<u>Capture</u> <u>A</u> nalyze	<u>Statistics</u> Telephony <u>T</u>	ools <u>I</u> nternals <u>H</u> elp
		6 6×8 4	°, ¢ ¢ ∅ 7 ½	
Filter:	ip.addr == 239.2	40.38.25		Expression Clear
No.	Time	Source	Destination	Protocol
211	80 73.949788	192.168.100.13	0 239.240.38.2	5 IGMP
211	82 73.985037	192.168.101.17	8 239.240.38.2	5 IPv4
211	84 74.064949	192.168.101.21	6 239.240.38.2	5 UDP
211	85 74.099805	192.168.101.17	5 239.240.38.2	5 IPv4
211	86 74.103712	192.168.101.21	6 239.240.38.2	5 IPv4

Already have two or more devices on the web browser:

Open the Terracom web browser, click "Setup1 > Device" and find out the Terracom unit you want.

Setup1	Setup2	Update	Status	About	Logout		
Basic Settin	ng Device	Function	1 Libraries	Audio Matrix	I/O Control	Media Setting	Output Volume

5.3 Setup 1

Setup1	Setup2	Update	Status	About	Logout		
Basic Setti	ng Devi	e Functio	n Libraries	Audio Matrio	I/O Control	Media Setting	Output Volume

Under the "Setup 1" and "Setup 2" tabs, you can set how Terracom device connects to the network and performs functions such as Stream Out, Logic Control, 3rd party control, etc.

Mathe name of the tabs and their content is depending on the type of the Terracom device.

5.3.1 Basic Setting

5.3.1.1 Network/Serial/System Time/Family Status/Serial Link/Third Party Controls/Codec Setting * Network

- DHCP: Enable/disable the DHCP (Dynamic Host Configuration Protocol).
- IP Address: Click to change its IP to fit your network (The default IP address of Terracom device is 192.168.102.10).
- Subnet Mask: Depend on the LAN where the Terracom devices located.
- Gateway Server: The IP address of the gateway server.
- DNS: Tick the checkbox to enable the DNS server and IP address.
- Serial (for 3rd Party Control)
- Speed (baud), Date bits, Stop bits, Parity: The settings for 3rd Party Control and SERIAL LINK bypass.

DHCP	🔘 Enable 🔎 Disable
IP Address	192.168.101.171
Subnet Mask	255.255.252.0
Gateway	192.168.100.254
DNS	192,168,100,203

2400 💌
5 💌
1
None 💌

✤ System Time

- Date/Time: The time of device can be set manually.
- NTP Client Service: Once enable this, the NTP Server IP address is needed.
- Timezone: The timezone of your Terracom devices.
 - + NTP Server IP: Set the IP address of NTP Server.
 - + Retrieve Interval: Set the interval to update the system time.
- Daylight: Enable/disable the Daylight Saving Time function on Terracom device.
- Time Difference: Define the time to be an hour/a minute earlier or more.
- Type: Choose [Date] or [Week] option to define the period of Daylight Saving Time.
 - Start Date/End Date: Set the start/end date of Daylight Saving Time.
 - Start Time/End Time: Set the start/end time of Daylight Saving Time.
- ✤ Family Status
- Status Notify Service: Enable the Status Notify Service for allowing other Terracom devices which are not in the same local network to proceed the intercom or paging with others via IPS (Internet Paging Server). See <u>IPS</u> 110 chapter for details.

SERIAL LINK Bypass

ate/Time	From NTP Server.
ITP Client Service	Enable Disable
- Timezone	(GMT+08:00) Taipei
- NTP Server IP	time.stdtime.gov.tw
-Retrieve Interval	24 ¥ h: 0 ¥ m
aylight	● Enable ○ Disable
- Time Difference	1 v h: 0 v m
Туре	● Date ○ Week
+ Start Date	January 👻 / 1 👻
+ Start Time	0 v h: 0 v m
+ End Date	January 🗸 / 1 🗸
+ End Time	0 v h: 0 v m

Changes in the System Time area will affect the Scheduler and the Current Time display on the web page.

Status Notify Service	Enable O Disable
+ Server1 IP	192.168.100.165
+ Server1 Port	9000
+ Server2 IP	0.0.0
+ Server2 Port	9000

- Serial to Network Service: Enable/disable the bypass of 3rd party device from the serial link of Terracom device (RS232/RS485) to the Ethernet network.
- Network to Serial Service: Enable/disable the bypass of 3rd party device from Ethernet network to the serial link of Terracom device (RS232/RS485).
- Third Party Controls

There are two interfaces provided for 3rd Party Control:

- Serial Controls Service: Enable/disable the 3rd party control. Once enabled, the "Serial" setting area is required.
- Network Controls Service: If the Network Controls Service is enabled, the local network port is required.
- Network IGMP Enable: Enable/disable to use IGMP address, the default network port is 8010.
- Network IGMP Address: Set the IGMP address.
- Codec Setting

© 2019 Terracom, a member of PAX ProAV Group.

 MP3 Encoder Bit rate: Select 128k or 192k encoder bit rate of MP3 when streaming or recording.

SERIAL LINK Bypass	
Serial to Network Service	🖲 Enable 💿 Disable
+ Network IP	192.168.100.1
+ Network Port	8000
Network to Serial Service	enable
+ Network Port	8022
+ Receive IP	🔘 IGMP 🔘 Local

Third Party Controls		
Serial Controls Service	© Enable	Disable
Network Controls Service	🖲 Enable 🔇	Disable
+ Network Port	8010	
+ Network IGMP Enable	🖲 Enable 🤇	Disable
++ Network IGMP address	239.240.100.	101

Codec Setting	
MP3 Encoder Bit rate	192K 👻

5.3.1.2 SIP



- Transfer Protocol: Select either TCP or UDP for the communication protocol between the Terracom devices and SIP Server. Note: The transfer protocol of the Terracom devices and SIP Server should be the same.
- Firewall Traversal Mode: Use [TERRA Net] to relay the audio packet through TCP/UDP or use [SIP Server]. See <u>System Network</u> 10 for more details.
- Username (TERRA Net only): The SIP calling name can be user-defined in the text or telephone number.
- SIP Port: The network port for SIP protocol, set 5060 by default.
- RTP Port: The network port for RTP protocol for receiving and transmitting audio, set 6912 by default.
- Online Identification Way: The Terracom supports to paging to Terra device via Internet Paging Server (IPS). Here you can choose the URI or IP Address option as the identification way to know whether the Terra device is online/offline.
- Identification Send Interval: The time interval of sending IPS signal.

Please note if user set the time interval higher, it can decrease bandwidth occupy on network, but will cause the response time for IPS to detect Terracom device become slower.

- AGC Maximum Gain: The maximum gain of AGC supported by the mic audio during the intercom and paging.
 - Threshold (dB): Set the threshold level and the audio level is above, then the gain will be controlled.

Don't set the level too low, otherwise it will hear unexpected sounds such as ambient noise.

- Response Time (ms): Set a pre-delay time for automatic attenuation.
- Release Time (ms): Adjust the fade-out time of the signal when AGC is no longer working.

If the release time is too short, the audio slack will be heard during the intercom and paging.

- o Target Level (dB): Define which relative volume you want to target.
- Audio Codec: There audio codec for SIP, G.711, G.722, G.726, G.727, G.729, MP3, PCM16K and AAC+ decoder.
- Global Priority: The paging priority with IDA8, UAP G2, LAP G2T and ECS processors. For example, when multiple Terracom devices or TerraManager is paging to IDA8, the Global Priority will be used to define which Terracom devices can use the VoIP component in IDA8.

Once the SIP priority here is higher than the TerraManager's, this device's zone won't be able to paged by TerraManager.

- Time to Stop Ring: The SIP call will be hung up after the set time. If sets up as 0 second, it won't stop ringing.
- Ring Volume: The volume of ring tone.
- Chime Volume: The volume of pre-chime/post-chime.
- SIP Auto Answer: The SIP call will be automatically picked up, usually for monitoring usage.
- SIP Auto Answer Input: Choose the input source, MIC IN or LINE IN.
- Speak Out IP Address (CIN1): Open the control channel input 2 and power on the device, during the LED flashing, then close the input 2 and Ground. The TERRA-EX, EXA, IEX, AMP, FDX, DS will speak out its IP Address.
- Factory Setting (CIN2): Open the control input 2 and power on the device, during the LED flashing, then close the control input 2 and Ground. The devices will reset to the default setting (factory setting).

The Factory Setting allows to go back to the default IP address (192.168.102.10) in case you forget the IP address of your Terracom device.



- Pre-Chime/Post-Chime: The chime setting for paging.
- SIP Active/Inactive: To trigger an action before the SIP call and after the SIP call. The triggered action can be the Logic Out, Command (string) and Multi Function.

5.3.1.3 Paging Setting/Audio Setting

Paging Setting

You can only enable one setting at a time.

- TERRA Server Agent: Paging through Internet Paging Server, please note the "Family Status >Status Notify Service" needs to be enabled.
 - TEERA Server IP: Enter the IP address of your TerraServer.
- IGMP Fix Address: Enable to allow the fix IP address to use the specific IGMP address, otherwise, the system will use the random IGMP address during paging.

 $_{\odot}$ +IGMP Fix IP: Set the fix IGMP address.

TERRA Server Agent	🖲 Enable 🔘 Disable		
+ TEERA Server IP	192.168.100.146		
Paging setting			
TERRA Server Agent	🛇 Enable 🔘 Disable		
IGMP Fix Address	🖲 Enable 🔘 Disable		
+IGMP Fix IP	239.240.100.100		

Audio Setting

Audio Out 1 Active	1771	
Audio Out 1 Hold Time	2 sec 💌	
Audio Out 1 Inactive	(T)	17
Audio Out 2 Active		
Audio Out 2 Hold Time	2 sec 💌	
Audio Out 2 Inactive		8
MIC In Gate	Inable O Disable	
+ Threshold	-20 dB 🔹	
+ Hold Time	2 sec 🔻	
Line In Gate	Inable O Disable	
+ Threshold	-15 dB 👻	
+ Hold Time	2 sec 👻	

• Audio Out 1 & 2 Active: Trigger the action when output the Audio Out 1 & 2. The action can be the Command (String), Logic Out and Multi Function.

- Audio Out 1 & 2 Hold Time: The hold time to trigger the Inactive action from the timing of the audio starts to output to the audio stops to output.
- Audio Out 1 & 2 Inactive: Trigger the action when Audio Out 1 & 2 haven't been output. The action can be the Command (String), Logic Out and Multi Function.
- MIC in Gate/Line In Gate: Enable/disable the Gate function for MIC In/Line In audio source.
 - + Threshold: The threshold for triggering the Mic In Gate/Line In Gate.
 - + Hold Time: The period of time that the level of Mic In/Line is continuously less than Threshold, if this period of time greater than Hold Time, the Mic/Line In will stop to input.

When enables the [Mic In Gate] and [Line In Gate] setting on [Audio Setting], their [Threshold] and [Hold Time] setting will be displayed.

5.3.2 Device (List)

List the Terracom devices located in the same LAN or the devices that users add in manually. The different color on status of device will be indicated as below.

- Black: The devices that users manually add in.
- Grey: The devices are located in the same LAN, but they haven't been added into the Device List.

Name	URI	Туре	Zone	Tele Number	Status	Action
ПТ5	IT5@192.168.101.21:5060	PPM-IT5	1		online	<u>New / Edit / Delete</u>
TK14	TK14@192,168,101,14:5060	TERRA-PPMK			online	Add
MessengerPro 1	MessengerPro1@192.168.101.51:5060	Messenger Pro			offline	Add
1	1@192.168.100.6:5060	UAP-G2			online	Add
		I	New Device			

• Zone: The paging zone of the device.

The max. number of supported zones is 1024.

- Tele Number: The number will be displayed when the TERRA-FXO is connected.
- Status: The green button will indicate the device is in online status, and grey button indicates the device is in offline status.
- Action: Users can perform [New], [Edit] or [Delete] action on the device.
 - $\,\circ\,$ New: Add the device in the same LAN.
 - $\circ\,$ Edit/Delete: Edit/delete the device.
- New Device: Create a new device in a device list which the zone settings require to be different from other device. For example, the zone setting of TERRA-FDX on first device is Zone 1, and on the second device is Zone 2.

Device Name	AMP101115		
Product Type	TERRA-AMP 👻		
URI	AMP101115@192.168.101.115:5060		
Zone	1	Max Zone: 2	
			Save Cancel

5.3.3 Function Libraries

The [Function Libraries] allows to set the functions and action for managing/controlling the Terracom devices. Follow the steps to create an action.

- 1. The source path on the web is Terracom web interface > Setup 1 > Function Libraries.
- 2. Select the function from drop-down box, and click [Add] button.

Setup1	Setup2	Update	Status	About	Logout			
Basic Settin	g 📗 Device	Functi	on Libraries	Media Setti	ng Line1	Line2	Telephone	
Function:	Device Group]			you n	W 67	
	Device Group	5	1					
Name	Command (S	tring)	Device					Action
Logic Out Third Party Controls Multi Function						N	ULL	5

The 3 items in this chapter: <u>Locked Button</u> المحقة, <u>Goto Button</u> المحقة, <u>External Variable</u> المحقة and <u>Macro</u> المحقة are only supported by PPM-IT5, and <u>Call Program</u> المحقة is for TERRA-DS.

5.3.3.1 Call Program (TERRA-DS)

Set the call schedule and the TERRA-DS will call different devices with the assigned time.

Name	CP1															
Train Scheduler	1. Call	device EXA_124	•	at	5	•	:	0	•	N	6	٠	:	0	٠	
	2. Call		•	at	0	•	:	0	•	~	0	٠	:	0	*	
	3. Call		•	at	0	•		0	•	~	0	•	:	0	*	
	4. Call	device TK18	•	at	16	•	:	0	٠	~	17	•	:	0	•	
	5. Call	-	•	at	0	•	:	0	•	~	0	•	:	0		

- Name: The display name of this [Call Program] list.
- Train Scheduler & Time: Select the devices and set the time which the TERRA-DS wishes to call. The [Call-Program] function supports 5 different set, if there is a conflict between the train scheduler, the call schedule with earlier time will be used (called). The device can be any Terracom devices or device on the group list.
- Time (hour:minute~hour:minute): Set the assigned time to call the device.

5.3.3.2 Device Group

Create a device group with multiple Terracom devices.

Name	New Group			
Intercom Mode	Call Next 🚽			
Device				
FDX_171 (FDX_171@192.	168. 10 1. 171: 5060)		FDX_171 (FDX_171@192.168.101.171:5060)	
FDX_118 (FDX_118@192.	168, 101, 118: 5062)	×	FDX_118 (FDX_118@192.168.101.118:5062)	
		<	5	
		>>		
		<<		
		-		

Save Cancel

- Name: The display name of this [Device Group] function.
- Intercom Mode:
 - Call Next: When the first device does not answer the call, the call will transfer to the next device, and continue to call the devices in the device group until one of the device has picked up the call.
 - Broadcast All: Call all the devices in the [Device Group] until any device in this group has picked up the call.
- Device: Select the Terracom device which user wishes to add it in the [Device Group], click [>] and [>>] button to add one or all the devices or click [<] or [<<] button to remove one or all the devices from the left side to the right side.

5.3.3.3 Command (String)

Send command string to 3rd party devices.

Basic Setting Device	Function Lorgeles Audio Matrix I/O Control Media Setting Output Volume
Modify - Command (St	ring)
Name	ECS
String	%0Zh%49h%30h%30h%30h%31h%32h%2Eh%30h%03h%9Ah%0Dh
Interface	Network 🗸
+ Network IP	192.168.101.96
+ Network Port	19761
Mode	Time Interval 👻
+ Time Interval	1000 ms (Urit is 50ms)
+ Repeat	2

String: The code of the string will depend on the 3rd party devices. The picture above is an example of sending the command string in ASCII code to Ateis processors (IDA8, UAP G2, ECS, LAP G2T), the Ateis processors use Hex code, then users need to change the string in Hex code to ASCII code. The Hex code is %XXh, the XX indicates the character of Hex code.

Please note the Terracom only receive the command string in ASCII code.

- Interface: You can send the command string through the serial port (RS485/RS232) or network.
- Mode:

ode	Time Interval 💌	Mode	Time Out 👻
Time Interval	ms (Unit is 50ms)	+ Ans	
Repeat		+ Time Out	ms (Unit is 50ms)
		+ Repeat	

- o Time Interval: The period of sending the command string to 3rd party device.
- Time Out: The device will stop sending the command string after receiving the answer string from the 3rd party device.
- +Ans: The answer string which sends to Terracom device when 3rd party device has received the command string.
- +Time Out: Set the "period time" to resend the command string when not receiving the [+Ans] response.
- +Repeat: Set the "repeat time" to resend the command string when not receiving the [+Ans] response.
- Users can send the command using logic/Scheduler to 3rd party devices such as UAP G2, ECS, LAP G2T etc.

5.3.3.4 Logic Out

Use logic output to control the 3rd party devices.

Save Cancel

- Name: The display name of this [Logic Out] action.
- Remote Target: Select the device you wish to perform this [Logic Out] action.
- Channel: The channel is depending on the number of logic output channel of your Terracom device has. For example, the TERRA-IO has 8 relay outputs (channels).

The [Logic Out] action will not be activated if no channel is selected on [Channel] option.

• Value:

- NO-RC: Trigger the channel relay of contact output which is "NO RC" in rear panel (Normally Open).
- NC-RC: Trigger the channel relay of contact output which is "NC RC" in rear panel (Normally Close).
- TOGGLE: Trigger the relay switch of contact output between Normally Open and Normally Close. The default switch can be user-defined on I/O Control > Local Control > Output Default.
- $_{\odot}$ PULSE: Close during High period then open during Low period like a square wave.
 - NC-RC Period: The time which the contact output channel triggers the relay "Normally Close" (Range: 50~60000 ms).
 - NO-RC period: The time which the contact output channel triggers the relay "Normally Open" (Range: 50~60000 ms).
 - Times: Set how many times which the reply of contact output channel will be triggered (Range: 1~9999 times).
- o REVERSE: Reverse to the last value status after triggering.

How-to: Please refer to Use Logic Out to Activate Amplifier During Paging [99] chapter.

5.3.3.5 3rd Party Controls

Set the 3rd party commend to allow other device to control the Terracom devices.

Please enable [Network Controls Service settings] and set [+Network Port] on <u>Steup1 > Basic</u> <u>Setting > Third Party Controls</u> [43] first.



- Name: The [Name] field is the command string for triggering an action via 3rd party control.
- Function:

Inte	erface	Function
Connection	Settings	Function
Ethernet(UDP)	UDP Port = 8010	 Call [54] Message [55] Monitor [56] Hang Up [55] Command (String) [56] Logic Out [57] Monitor Cancel [56] Level Control/Read [57] ON/OFF Switch Control/Read [59] Device Status [59]

Inte	erface	Function
Connection	Settings	Function
RS232	Speed (baud) Data bits Stop bits Parity	 Multi Function โดป้ Scheduler โดป้ Netstream Select โดป้ Music Play/ Music Stop โดป้ Logic Read โดง้ Line Status (TERRA-FXO) โดง้ Line Hangup (TERRA-FXO) โดป้

- Target: Choose the Terracom device (target) which allows the 3rd party device to paging/SIP/ control the logic/monitor/control.
- Enable Status: To enable or disable this 3rd party command. If this field is set disable, the Terracom device will not execute the function even receives the command.

5.3.3.5.1 Call

Set the 3rd party commend to call a device or a device group.

Name	CMDSTR	
Function	Call 👻	
Source	MIC IN 👻	
Target	Device EX_127 ▼	
Mode	Intercom 💌	
Security		
Enable Status	Enable 👻	

- Source: The calling source (MIC IN or LINE IN).
- Mode: Choose the calling mode (Intercom, Paging, EVAC Announce and Vote Announce).
 - EVAC/Vote Announce: This two call modes are only applicable when using PPM-IT5 to paging to TERRA-RD. The paging priority: EVAC Announce > Vote Announce > Paging.
- Security: If the [Security] option is enable, the caller cannot hang up the call during paging unless the caller cancels the call itself.
- Command-Call:

From the example picture above, if you wish to call a device or a device group, please send a

commend string: CMDSTR. The TERRACOM device will send back in ASCII code as below.

- \circ **200** (ASCII Code) indicates OK (received).
- 400 (ASCII Code) indicates NG (the 3rd party command sent from 3rd party device is not the same as [Name] field).

5.3.3.5.2 Message

Set the 3rd party command to play multiple message/s to a device or a device group.

Name	CMDSTR		Prove 1		
Function	Message	٠	Internal msg	•	
Target	Device EX_127 ▼				
Mode	Evac Announce 💌				
Security					
Enable Status	Enable 💌				

- Function: Select the message file/folder which you create on Media Setting > Internal/External List.
- Mode: Choose the calling mode (Intercom, Paging, EVAC Announce and Vote Announce).
 - EVAC/Vote Announce: This two call modes are only applicable when using PPM-IT5 to paging to TERRA-RD. The paging priority: EVAC Announce > Vote Announce > Paging.
- Security: If the [Security] option is enable, the caller cannot hang up the call during paging unless the caller cancels the call itself.
- Command-Message Play:

From the example picture above, if you wish to play multiple message/s to a device or a device group, please send a commend string: CMDSTR. The TERRACOM device will send back in ASCII code as below.

- o 200 (ASCII Code) indicates OK (received).
- 400 (ASCII Code) indicates NG (the 3rd party command sent from 3rd party device is not the same as [Name] field).

5.3.3.5.3 Hang Up

Set the 3rd party commend to hang up a call (intercom/paging/EVAC Announce/Vote Announce) or a message.

	CHOSTR	
Function	Hang Up 👻	
Enable Status	Enable 👻	

• Command-Hangup:

From the example picture above, if you wish to hang up a call or a message, please send a commend string: CMDSTR. The TERRACOM device will send back in ASCII code as below.

- o 200 (ASCII Code) indicates OK (received).
- 400 (ASCII Code) indicates NG (the 3rd party command sent from 3rd party device is not the same as [Name] field).

5.3.3.5.4 Monitor

Set the 3rd party commend to monitor the source.

Name	CMDSTR	
Function	Monitor 👻	
Target	Device EX_127 ▼	
Source	SIP 🔸	
Enable Status	Enable 👻	

Source: Select which source you wish to monitor (SIP/MIC IN/LINE IN/MESSAGE/NET1/NET2/

LINE 1/LINE 2).

5.3.3.5.5 Monitor Cancel

Set the 3rd party commend to cancel the monitoring of SIP/MIC IN/LINE IN/MESSAGE/NET1/NET2/ LINE 1/LINE 2 source.

Name	CMDSTR	
Function	Monitor Cancel 🗸	
Enable Status	Enable 👻	

• Command-Monitor/Monitor Cancel:

From the example picture above, if you wish to cancel a source monitoring, please send a commend

string: CMDSTR. The TERRACOM device will send back in ASCII code as below.

- o 200 (ASCII Code) indicates OK (received).
- 400 (ASCII Code) indicates NG (the 3rd party command sent from 3rd party device is not the same as [Name] field).

5.3.3.5.6 Command (String)

Set the 3rd party commend to control other devices.

Name	CMDSTR	
Function	Command (String) 👻	
Target	CMD_String String1 👻	
Enable Status	Enable 👻	
		x). (328)

• Command-Command (String):

From the example picture above, if you wish the Terracom device to send a command string to control the other devices, please send a commend string: CMDSTR. The TERRACOM device will send back in ASCII code as below.

- o 200 (ASCII Code) indicates OK (received).
- 400 (ASCII Code) indicates NG (the 3rd party command sent from 3rd party device is not the same as [Name] field).

5.3.3.5.7 Logic Out

Set the 3rd party commend to control the logic output.

		- Baccalo	10	
ion	Logic out	▼ NC	12.	
e Status	Enable 👻			
e Status	Enable 👻			

Command-Logic Out:

From the example picture above, if you wish to control the logic output, please send a commend string: CMDSTR. The TERRACOM device will send back in ASCII code as below.

- o 200 (ASCII Code) indicates OK (received).
- 400 (ASCII Code) indicates NG (the 3rd party command sent from 3rd party device is not the same as [Name] field).

5.3.3.5.8 Level Control/Level Read

Level Control: Set the 3rd party commend to adjust the level of audio.

Function:

```
Select the source (SIP/MIC/LINE/MESSAGE/NET1/NET2/MONITOR/OUT1/OUT2/AMP1/AMP2/
```

AMP All/AGC Gain/SPEAKER/HEADSET/RJ9) you wish to adjust its level.

Name	CMDSTR				
Function	Level Control	•	MIC	•	
Enable Status	Enable 🔻				

Source Control & Range:

The table below indicates all the sources and their corresponded adjustable range. To adjust its level, add [:], [:Increase] or [:Decrease] command string and the specific range (level adjustment/ mute/bypass) behind the listed source.

Source	Command	Range (Level/Mute/Bypass)	Unit (dB)
	:	0~36	1
NET/MONITOR	:Increase :Decrease	1~100	1
		Mute / -45~0	1
SPEAKER/HEADSET/RJ9	:Increase :Decrease	1~100	1
AMP1/AMP2 (TERRA-EXA/AMP)	:	Mute / -45~12	1
AGC Gain	:	Bypass / 15~60	3

- Command-Level Control:
 - o 200 (ASCII Code) indicates OK (received).
 - 400 (ASCII Code) indicates NG (the 3rd party command sent from 3rd party device is not the same as [Name] field).
- Examples:

Assume the value of Name is "TARGET".

- To adjust the level of MIC input to 10dB, select MIC source from drop-down box. The command string is TARGET:10.
- To decrease 3 dB level on SPEAKER output, select SPEAKER source from drop-down box.
 The command string is TARGET:Decrease 3.
- To mute the AMP1 output, select AMP1 source from drop-down box. The command string is TARGET:Mute.
- To bypass the AGC Gain, select AGC Gain source from drop-down box. The command string is TARGET:Bypass.

Level Read: Set the 3rd party commend to read back the audio level of source.

Name	CMDSTR				
Function	Level Read	•	SIP	1	
Enable Status	Enable 👻				

• Command-Level Read:

Level Read: From the example picture above, if you wish to read the level of SIP, please send a commend string: CMDSTR, the TERRACOM device will send back the value of level.

5.3.3.5.9 ON/OFF Switch Control/Read

♦ ON/OFF Switch Control: Set the 3rd party commend to mute/unmute audio source (SIP/MIC/ MESSAGE/NET1/MONITOR). The audio sources are located at <u>Audio Matrix</u> [75] window.

Name	CMDSTR
Function	ON/OFF Switch Control 🔹 SIP 👻
Enable Status	Enable 👻

♦ ON/OFF Switch Read: Set the 3rd party commend to read back the mute/unmute status.

Name	CMDSTR
Function	ON/OFF Switch Read 👻 SIP 👻
Enable Status	Enable 👻

• Command-ON/OFF Switch Control/Read:

From the example picture above, if you wish to mute the SIP audio source, please send a commend string: CMDSTR. The TERRACOM device will send back in ASCII code as below.

- 200 (ASCII Code) indicates OK (received).
- 400 (ASCII Code) indicates NG (the 3rd party command sent from 3rd party device is not the same as [Name] field).
- Example ON/OFF Switch Control

Assume the value of Name is "TARGET".

- $\,\circ\,$ To mute/unmute the SIP audio source.
 - 1. Select SIP source from drop-down box. The command string is TARGET.
 - 2. If the current status is mute, the status will switch to unmute after received the 3rd party command. If the current status is unmute, the status will switch to mute after received the 3rd party command.
- o To mute/unmute the SIP audio source in a more direct way.
 - 1. Select SIP source from drop-down box. The command string is TARGET:ON.
 - 2. Select SIP source from drop-down box. The command string is TARGET:OFF.

5.3.3.5.10 Device Status

Set the 3rd party commend to read the device status (Ready/Paging/Phone/Online/Offline).

By adding string: Full command string behind the [Name] string, it will inform the 3rd party device that which Terracom device is paging/intercom with the target device.

	Name	CMDSTR	
	Function	Device Status 👻	
	Enable Status	Enable 💌	
mm <u>and:</u>			Save Cancel
mmand:	trol Action	Command	Save Cancel Result
mmand: Con	trol Action	Command :Full	Save Cancel Result Paging/Phone:Target

• Command-Device Status:

From the example picture above, if you wish to view the device status, please send a commend string: CMDSTR. The TERRACOM device will send back in ASCII code as below.

o Ready

- o Paging
- o Phone
- $\circ \ \textbf{Online}$
- \circ Offline
- Example:

Assume the value of Name is "TARGET".

To read the status (Paging/Phone) of a PPM-IT5 device, and know which Terracom target device is paging/intercom with this PPM-IT5, the command string is TARGET:Full.

5.3.3.5.11 Multi Function

Set the 3rd party commend to initiate a [Multi Function] function.

Name	CMDSTR	
Function	Scheduler	
Enable Status	Enable 🔻	

• Command-Multi Function:

From the example picture above, if you wish to initiate a Multi Function, please send a commend string: CMDSTR. The TERRACOM device will send back in ASCII code as below.

- 200 (ASCII Code) indicates OK (received).
- 400 (ASCII Code) indicates NG (the 3rd party command sent from 3rd party device is not the same as [Name] field).

5.3.3.5.12 Scheduler

Set the 3rd party commend to enable/disable the Scheduler. The Scheduler is located at Scheduler \geq Global Enable^[83].

Name	CMDSTR	
Function	Scheduler	V ON V
Enable Status	Enable 🔻	

- ON/OFF: Enable/disable the Scheduler.
- Command-Scheduler:

From the example picture above, if you wish to enable the Scheduler, please send a command string: CMDSTR. The TERRACOM device will send back in ASCII code as below.

- o 200 (ASCII Code) indicates OK (received).
- o 400 (ASCII Code) indicates NG (the 3rd party command sent from 3rd party device is not the same as [Name] field).

5.3.3.5.13 Netstream Select

Set the 3rd party commend, and choose to receive the network audio stream. Every Terracom device provides 8 sets of [NET SOURCE], the setting of every [NET SOURCE] can be configured on <u>Audio</u> <u>Matrix</u> [75].

lame	CMDSTR
Function	Netstream Select NET1 SOURCE 1
Enable Status	Enable 👻

• Command:

To choose to receive which network (NET1 or NET2) and which audio stream source channel (1~8) in a guicker way, send string:n-c commend string behind the [Name] string.

Command	Meaning	Range
	n indicates the number of network (NET)	1~2
.11-0	c indicates the source channel	1~8

• Command-Netstream Select:

From the example picture above, if you wish to receive the network audio stream, please send a commend string: CMDSTR. The TERRACOM device will send back in ASCII code as below.

- 200 (ASCII Code) indicates OK (received).
- 400 (ASCII Code) indicates NG (the 3rd party command sent from 3rd party device is not the same as [Name] field).

• Example:

If users do not wish to send the 3rd party commend from [NET 1 SOURCE 1~8] and [NET 2 SOURCE 1~8] one by one, send string:n-c command string.

1. Assume the value of Name is "TARGET".

2. To choose to receive the [NET 2 SOURCE 7], the command string is TARGET:2-7.

5.3.3.5.14 Music Play/Music Stop

Music Play: Set the 3rd party commend to play the music from Internal Play List/External Play List.

Name	CMDSTR			
Function	Music Play	•	Internal msg	
Enable Status	Enable 👻			

Music Stop: Set the 3rd party commend to stop the music.

Name	CMDSTR	
Function	Music Stop 👻	
Enable Status	Enable 👻	

• Command-Music Play/Music Stop:

From the example picture above, if you wish to play the playlist, please send a commend string:

CMDSTR. The TERRACOM device will send back in ASCII code as below.

- 200 (ASCII Code) indicates OK (received).
- 400 (ASCII Code) indicates NG (the 3rd party command sent from 3rd party device is not the same as [Name] field).

5.3.3.5.15 Line Hangup (TERRA-FXO)

Line Hangup: Set the 3rd party commend to hang up a telephone call (LINE 1 or LINE 2).

Name	CMDSTR	
Function	Line Hangup 👻	
Enable Status	Enable 👻	

• Command-Line Hangup:

From the example picture above, if you wish to hang up a telephone call (LINE 1 or LINE 2), please send a commend string: CMDSTR. The TERRACOM device will send back in ASCII code as below.

- 200 (ASCII Code) indicates OK (received).
- o 400 (ASCII Code) indicates NG (the 3rd party command sent from 3rd party device is not the

same as [Name] field).

• Example:

Assume the value of Name is "TARGET".

To hang up the LINE 1 telephone call, the command string is TARGET:1.

5.3.3.5.16 Line Status (TERRA-FXO)

* Line Status: Set the 3rd party commend to read the telephone line status (Call In/Ringing/Disconnect/

Ready/Online) of LINE 1 & LINE 2.

Name	CMDSTR	
Function	Line Status 👻	
Enable Status	Enable 🔻	

Command-Line Status:

From the example picture above, if you wish to read the Line Status, please send a commend string: CMDSTR. The TERRACOM device will send back in ASCII code as below.

- $_{\rm O}$ Call In
- Ringing
- \circ Disconnect
- \circ Ready
- \circ Online
- Example:

Assume the value of Name is "TARGET".

To read the status of LINE 2 telephone call, the command string is TARGET:2.

5.3.3.5.17 Logic Read

Set the 3rd party commend to read the status (NC-RC or NO-RC) of logic I/O.

lame	CMDSTR	
Function	Logic Read 🔻 IN1 👻	
Enable Status	Enable 👻	

- Function: Select the logic I/O (IN1/IN2/IN3/OUT1/OUT2) you wish to read its status.
- Command-Logic Read:

From the example picture above, if you wish to read the logic status, please send a commend string: CMDSTR. The TERRACOM device will send back in ASCII code as below.

- \circ NC-RC
- NO-RC

5.3.3.6 Multi Function

Create a group of action with multiple functions. There are four default function: [Call Function], [Hang up Function], [Message Function] and [Wait Device Status]. If users wish to use other functions such as [Logic Out], please create it on [Function Libraries] first, then the function you create will be listed on [Function] drop-down box.

lame		M1							
lumber	Function		Mode	Security	Source	Target	т	mer(Second)	
1	118_1_NC	+	Intercom +		MIC IN 👻	220		lay 1	
2	118_1_NO	Ŧ	Intercom 👻		MIC IN 👻	220		lay 2	
3	1 <u>10</u>	•	Intercom 👻		MIC IN 👻	225	⇒ De	lay 0	
4		÷¥	Intercom +		MIC IN 🛛 👻	228	≠ De	lay 0	
5	22	•	Intercom 👻		MIC IN 🛛 👻	223	⇒ De	lay 0	
6	2 <u>52</u> 8	÷	Intercom 👻		MIC IN 🛛 👻			lay 0	
7	-	÷	Intercom 👻		MIC IN -	57.0	⇒ De	lay 0	

Save Cancel

- Name: The name of this [Multi Function].
- Function: Select a function from the drop-down list, these functions will be triggered by the order of the list.
- Mode: Choose the calling mode (intercom/paging/EVAC Announce/Vote Announce).
 - EVAC/Vote Announce: This two call modes are only applicable when using PPM-IT5 to paging to TERRA-RD. The paging priority: EVAC Announce > Vote Announce > Paging.
- Security: If the [Security] option is enable, the caller cannot hang up the call during paging unless the caller cancels the call itself.
- Source: Choose the source (MIC IN or LINE IN) when the call has been initiated.
- Target: Choose the Terracom device as the target to paging/intercom/SIP/triggering logic etc.
- Timer (second): The delay time between the previous action and the next upcoming action in [Multi Function] list.

5.3.3.7 Macro (PPM-IT5)

Provide the management of the sub-page on PPM-IT5; Up to 14 pages can be saved at the main page window, and up to 2 pages can be saved at the sub-page window.

After created a new Marco button, go to <u>Steup1 > Machine Window > Windows & Page</u>^[78] and set the Marco button you have created. See the picture as below.

asic setting	Device P	unction Libraries Audio Matri	X MOUNTRE VINKA	viva Media Setar	g Out	put volum	e					
ame Settin	10											
IAIN	м	AIN		DIAL		DIAL						
MESSAGE	M	SSAGE		SETTING		SETTIN	G			1		
												Save
orameter !	Setting											
inter Sleep M	ode Time	0 🕶 h: 0 🔻 m										
evel Action		🖑 Enable 🔘 Disable										
xternal Butto	on(Left)	Push To Talk(Paging)										
xternal Butto	on(Center)	Push To Talk(Paging)	-									
xternal Butto	on(Right)	Push To Talk(Paging)	•									
		_										Save
		-										
Vindows: M	larco: Macro1 🔹	Page: 1 +										
Vindows: N	larco: Macro 1 ,	Poge: 1 +										
rindows N	larco: Macro1 🔹	Page: 1 + Button Name		All Admin L1	12	L3	14	L5	16	17	L8	19
Vindows M Key Buttor 01 Device	Harco: Macro1	Page: 1 - Button Name - - EX_162 - -	•	All Admin L1	12	L3	14	15	L6	17	L8	19
Vindows: M Key Buttor 01 Device 02	Function	Page 1 ▼ Button Name EX_162	-	All Admin L1 - -	12	L3	L4	LS	L6	.17	L8	19

- Button Function: There are Device, Paging Group, Command (String), Logic Out (Single) and Locked Button.
- Button Name: The name of each button appears on the touch screen of PPM-IT5.

There is no way to move buttons from one Macro to another, you need to add these buttons manually.

5.3.3.8 Goto Button (PPM-IT5)

Allow to create a jumping page button on the touch panel of PPM-IT5. Users can customize the pages which reduce the difficulties for switching pages on the touch panel.

After created a Goto button, select the customized function users intend to change via PPM-IT5, then press [Save] button, and the jumping page function will be displayed on PPM-IT5.

Modify Function		
Name	Main->2	
Windows	Main Page 💌	
Page	2 💌	

Save Cancel

- Name: The customized name of each button appears on IT5's touch screen.
- Window: Select which window will display (Main Page/Macros) when user press this Goto button on IT5's screen.
- Page: Select which page intending to switch to.

5.3.3.9 Locked Button (PPM-IT5)

The Locked Button allows to use the PPM-IT5 to send the command string to control the logic action and monitor the status of 3rd party device via LAN/WAN.

The diagram below is the example which shows how to combine those functions.



Send command string for asking status

Send status (+True) command string to Locked Button on PPM-IT5

- The PPM-IT5 will send command (string) to the 3rd party device through the logic output of TERRA-IO, here we use a light as an external device.
- To monitor the status of light on/off, it will send a Status (+True) command string to PPM-IT5, and will update on the Locked Button of PPM-IT5.
- The display settings of the Status (+True) command string can be set from External Variable [66] function. If received the Status (+True) command from 3rd party device in 200ms, the color of Locked Button on PPM-IT5 will light up; if not, the color of Locked Button will remain in dark.
- After completed the setting, press the Locked Button on PPM-IT5 to control the light on/off with the TERRA-IO.

Name	Lock1	
Down action	String_116_HP +	
Up action	String_116_Cal_014 💌	
Status	3rd_115_DS 🔹	
+True	Phone	

- o Name: The display name of this [Locked button], it will also appear on the touch panel of PPM-IT5.
- Down/Up Action: The action when pressing the Locked Button on PPM-IT5. For example, the Down/Up action can be used as a Logic Out (Single) action for trigger the light on/off etc..
- Status: Select which Command (string) action will be used on the Locked Button of PPM-IT5 to get monitoring status from 3rd party device.
- +True: If received the Status (+True) command from 3rd party device in 200ms, the color of Locked Button on PPM-IT5 will light up; if not, the color of Locked Button will remain in dark.

5.3.3.10 External Variable (PPM-IT5)

The External Variable function allows the PPM-IT5 to send the command (string) to read the status of 3rd party device.

Name	FXO 199	
Auto Update	str 1 🔻	
Display Offset	3	
End Rule	None 👻	
End Info	D	

- Name: The display name of this [External Variable].
- Auto Update: Select which Command (string) action will be sent to the 3rd party device to get status.
- Display Offset: Set the number/text of display offset when receiving the [Auto Update] command action from the 3rd party device.

For example, if the received status packet from 3rd party device is "ABCDE", the [Display Offset] is set as 2. The status will be "BCDE". Please note the display offset will also be based on the the setting of [End Rule] option.

• End Rule: There are three kinds of [End Rule] to display the received status command (string) from 3rd party device.

 Example 1: If the received status is "ABCDE": Set [Display Offset] as 3. Choose [None] option on [End Rule]. The display status will be "CDE". 	End Rule End Info	None 👻
 Example 2: If the received status is "ABCDE": Set [Display Offset] as 3. Choose [Offset of display] option on [End Rule], and set [Offset] as 2. The display status will be "CD". 	End Rule Offset	Offset of display 🔻
 Example 2: If the received status is "ABCDE": Set [Display Offset] as 3. Choose [End character] option on [End Rule], and set [Character] as 68, which 68 indicates the D character in ASCII code. The display status will be "CD". 	End Rule Character(Dec)	End character 👻

5.3.4 I/O Control

Assign the controller such as logic input, RAC-5/8 and RAC-Analog with a triggered action to each control input. Most of the control processes will be introduced in <u>Setup1 > Function Libraries</u> [50[°]] chapter, except for Message Button, Message Target/Trigger, On/Off Switch, Edge Trigger Button, RAC-

Analog and Push to Talk which don't need to work with a defined function.

5.3.4.1 Local Control

	Re Co														
asic Sett	ing Device	Function	on Libraries	Audio N	Matrix	I/O C	Control	Media Se	tting C	output Voli	ume				
ocal Co	ntrol														
INPUT	CONTROLLER	2	POSITIO	N FUNCT	TION		MODE		SECURIT	Y SOUR	Œ	TARG	iET		
IN1	RAC-8	-		Chann	nel Select	197	Interco	m 👻							CE
IN2	RAC-Analog			Volum	e Control	1975	Interco	m 👻							CE
IN3	Logic	•		Messa	ige Button		Interco	m 🔻		Intern	al MSG	▼ Devic	е IT5_169		▼ CE
OUTPU	T DEFAULT														
OUT1	NO-RC	8	•												
OUT2	NO-RC Control	28													
OUT2 Remote INPUT	NO-RC Control	CONTRO	DLLER P	OSITION	FUNCTI	ON		MODE	5	ECURITY	SOURCE		TARGET		
OUT2 temote INPUT IN4 (10)	NO-RC Control _183's IN1)	CONTRO Logic	DLLER P	OSITION	FUNCTI Call Butt	ON ton		MODE	5	ECURITY	SOURCE MIC IN		TARGET	18	▼ DEI
OUT2 temote INPUT IN4 (10)	Control 183's IN1) ADD IN5	CONTRO Logic	DLLER P	DSITION	FUNCTI Call Butt	ton	*	MODE Intercom Intercom	5 •		SOURCE MIC IN		TARGET	.18	▼ <u>DE</u>
DUT2 temote INPUT IN4 (10)	NO-RC Control 183's IN1) ADD IN5 ADD IN6	CONTRO	DLLER P	OSITION	FUNCTI Call Butt	ton	*	MODE Intercom Intercom Intercom	5 • •	ECURITY	SOURCE MIC IN		TARGET	.18	▼ DEI
OUT2 temote INPUT IN4 (10	NO-RC Control 	CONTRO Logic	VILLER P	DSITION	FUNCTI Call Butt	ton	*	MODE Intercom Intercom Intercom	* * *	ECURITY	SOURCE MIC IN		Device FDX_1	18	▼ DEI
DUT2 temote INPUT IN4 (10)	NO-RC Control 183's IN1) ADD IN5 ADD IN6 ADD IN7 ADD IN8	CONTRO Logic	V DLLER P V V V	OSITION	FUNCTI Call Butt	ton	*	MODE Intercom Intercom Intercom Intercom	5 * * *	ECURITY	SOURCE MIC IN	•	TARGET	.18	▼ DEI
OUT2 temote INPUT IN4 (10)	NO-RC Control 183's IN1) ADD IN5 ADD IN6 ADD IN7 ADD IN8 ADD IN8 ADD IN9	CONTRO Logic	V DLLER P V V V	DSITION	FUNCTI Call Butt	ton	*	MODE Intercom Intercom Intercom Intercom Intercom	5 * * *	ECURITY	SOURCE MIC IN	•	TARGET	18	▼ DEI
OUT2 temote INPUT IN4 (10)	NO-RC Control 	CONTR(Logic	VLLER P	DSITION	FUNCTI Call Butt	ton	* *	MODE Intercom Intercom Intercom Intercom Intercom Intercom	5 * * *		SOURCE MIC IN		TARGET	18	▼ DEI

Save Cancel

- Input: The control input which will be used to trigger an action, the IN1 means logic input channel 1.
- Controller: Choose a controller which will be used to control the action. The controller can be a logic, device (RAC-5/8, RAC-Analog) or other function, see the picture a below.
- Function:

.	
Logic	
RAC-5	
RAC-8	
RAC-Analog	
Edge Trigger Butto	on
Level Control	
Push to Talk	

Controller	Function				
Logic	Call Button69Command (String)69Message Button69Call Trigger70Message Trigger70Logic Out71ON/OFF Switch71				
	Multi Function 71				
RAC-5/RAC-8	<u>Call Target</u> م <u>Message Target</u> <u>Channel Select</u> Play Target 72				
RAC-Analog	Volume Control 72				
Edge Trigger Button	<u>Trigger Function</u> [73] <u>Message Call</u> [73] <u>Hang up</u> [73] <u>Music Play/Music Stop</u> [73]				

Controller	Function
	ON/OFF Switch 73
Level Control	Music Play/Music Stop 74
	ON/OFF Switch 74
Push to Talk	Call Button 73

- Source: Assign which source will be used to trigger this action. It can be a MIC IN, LINE IN or internal/ external playlist.
- Target: Assign which Terracom device, Device Group or Control Input 1/2/3 you wish to activate this action.

Please proceed the CB (control calibrate) on your device for adjusting the minimum/maximum logic value before setting the function, see <u>Control Calibration</u> 4.

5.3.4.1.1 Logic-Call Button

The Call Button allows to intercom or paging using the MIC IN/LINE IN as a source to a chosen Terracom device target when pressing (activated) the button which is connected to the control input (IN1 means logic input channel 1).

Press the connected button again to cancel intercom or paging.

Local Co	ontrol									
INPUT	CONTROLLER	POSITION	FUNCTION		MODE	SECURITY	SOURCE		TARGET	
IN1	Logic	•	Call Button	•	Intercom 👻		MIC IN	•	Device EX_162	▼ <u>CB</u>
IN2	-	•	1227	•	Intercom +					<u>CB</u>
IN3		*		*	Intercom 👻					<u>CB</u>

- Mode: Choose the calling mode (intercom/paging/EVAC Announce/Vote Announce).
 - EVAC/Vote Announce: This two call modes are only applicable when using PPM-IT5 to paging to TERRA-RD. The paging priority: EVAC Announce > Vote Announce > Paging.
- Security: If the [Security] option is enable, the caller cannot hang up the call during paging unless the call receiver cancels the call itself.

5.3.4.1.2 Logic-Command (String)

Send command (string) to control the devices via 3rd party control.

INPUT	CONTROLLER	POSITION	FUNCTION		MODE	SECURITY SOURCE	TARGET	
IN1	Logic	•	Command (String)	٠	Intercom +		ECS	★ <u>CB</u>
IN2	-	-		٠	Intercom +			<u>CB</u>
IN3		-	-	*	Intercom 👻]		CB

• Target: Select a commend (string) action which is added from [Function Libraries].

5.3.4.1.3 Logic-Message Button

The Message Button allows to play the messages directly to a chosen Terracom device target when pressing (activated) the button which is connected to the control input (IN1 means logic input channel 1).

Local Co	ontrol									
INPUT	CONTROLLER	POSITION	FUNCTION		MODE	1	SECURIT	Y SOURCE	TARGET	
IN1	Logic	•	Message Button	•	Intercom	•		Internal MSG	Device FDX_118	
IN2		•		•	Intercom	-				<u>CB</u>
IN3	<u>1</u> 22	-	122	•	Intercom	*				<u>CB</u>

 ${rac{1}{2}}$ Press the connected button again to stop the message playing.

 Source: Select the playlist source which you have created on Media Setting > Internal playlist or on external playlist if a USB flash is connected.

How-to: Please refer to Message Paging 102 chapter.

5.3.4.1.4 Logic-Call Trigger & RAC-5/8 Call Target

The Logic-Call Trigger function is used to assign a logic input channel such as RAC to trigger the call, and here you can choose the MIC IN/LINE IN as the input source and which logic input (IN1 means logic input channel 1). This function needs to work with the RAC-5/8-Call Target, allowing each selection knob of RAC can be assigned with different mode (intercom/paging) and to different Terracom target.

INPUT	CONTROLLER	POSITION	FUNCTION	MODE	-	SECURIT	Y SOURCE	TARGET	
IN1	Logic	*	Call Trigger	Intercom			MIC IN	IN2	▼ CE
IN2	RAC-5	▼ Channel 1	Call Target	Intercom				Device FXO_198	▼ CE
		Channel 2		Intercom		177		Device AMP_114	*
		Channel 3		Intercom				Device IT5_169	*
		Channel 4		Intercom		177		Device FXO_199	*
		Channel 5		Intercom		(00)		Device IDA8C1	

Once the settings are completed, user can switch the selection knob on RAC to the Terracom device target, and call the device.

5.3.4.1.5 Logic-Message Trigger & RAC-5/8 Message Target

The Logic-Message Trigger function is used to assign a logic input channel such as RAC to trigger the message play action and here you can choose the playlist source and which logic input (IN1 means logic input channel 1). This function needs to work with the RAC-5/8-Message Target, allowing each selection knob of RAC can be assigned with different mode (intercom/paging) and to different Terracom target.

The playlist source needs to be created on Media Setting > Internal playlist or on external playlist if a

INPUT	CONTROLLER	POSITION	FUNCTION	MODE		SECURITY	SOURCE	 TARGET		
IN1	Logic	.	Message Trigger	Intercom	٣		Internal MSG	IN2		<u>CB</u>
IN2	RAC-5	- Channel 1	Message Target	Intercom	•	(M)		Device IEX536_163	10 7 .)	CB
		Channel 2		Intercom	•			Device AMP_114	67 .	
		Channel 3		Intercom	•	(Device FXO_198	8.	
		Channel 4		Intercom	. •			Device IT5_169	8 .	
		Channel 5		Intercom				Device FXO_199		Ē

Once the settings are completed, user can switch the selection knob on RAC to the Terracom device target you set on IN2 and play the message.

USB flash is connected first.

5.3.4.1.6 Logic-Logic Out

Use a Logic Out action to control the target you set on [Function Libraries].

INPUT	CONTROLLER	POSITION	FUNCTION		MODE	SECURITY SOURCE	TARGET	
IN1	Logic	•	Logic Out	•	Intercom +		118_1_NC	▼ <u>CB</u>
IN2	Logic	*	Logic Out	+	Intercom 👻		118_1_NO	✓ CB
IN3	Logic	-	Logic Out	+	Intercom +		118_2_TO	

5.3.4.1.7 Logic-On/Off Switch

Switch on/off the mute function of source (SIP/MIC/MESSAGE/NET1/MONITOR) when pressing (activated) the button which is connected to the control input (IN1 means logic input channel 1).

The mute function of source is located at <u>Audio Matrix</u> 75.

INPUT	CONTROLLER	POSITION	FUNCTION	9	MODE	SECURITY SOURCE	TARGET	
IN1	Logic	*	ON/OFF Switch	•	Intercom 👻		MIC IN	▼ CB
IN2	-	*		•	Intercom 👻			<u>CB</u>
IN3		-	1220	•	Intercom 👻			CB

Once apply the setting, the MIC IN on Audio Matrix > Control Options > Select will change to the Control Input you set, see the picture below.

THEFT	MOR					LINE (OUT (A	MP OUT)		STREAM OUT			C	ONT	ROL	OPTI	ONS			BUE	rrn.
INPOT	MUL)E	PRI	ORITY	Mute	1(A)	2(B)	S/PDIF	OUT	IP ADDRESS	PORT		SELI	ест		INPL	JT V	olui	ME	BUFI	FER
SIP	Mono	•	1		1		V	N/A								IN2	•	24		RT	
MIC IN	Mono	•	6	×			0	N/A	OFF +	239.240.100.1	9012	IN1	•	1		IN2	•	24			
LINE IN	Mono	•	6	•			V	N/A	OFF +	239.240.100.1	9012	Fix	•			IN2	•	24			
MESSAGE	Auto	•	6			V	V	N/A	OFF +	239.240.100.1	9012	Fix	•			IN2	•	24			
	Mono	-	6	-		107	127	N/A								TNI2	-27	24	_	DT	Ţ

Please manually change the priority of MIC IN lower than the SIP calls. Even with the higher priority than LINE IN, the MIC only works when the button is pressed (SWITCH ON).

5.3.4.1.8 Logic-Multi Function

This function allows to trigger the Multi Function action which is stored in your Terracom device.

_ Local Co	ontrol								
INPUT	CONTROLLER	POSITION	FUNCTION		MODE	8	SECURITY SOURCE	TARGET	
IN1	Logic	*	Multi Function	٠	Intercom	w.		аа	▼ <u>CB</u>
IN2	-	3 -		٠	Intercom	-			<u>CB</u>
IN3		+		¥	Intercom	*			<u>CB</u>

5.3.4.1.9 RAC-Channel Select

The RAC-Channel Select allows to switch the channel selection knobs on RAC-5/8 and change the source of MIC IN/LINE IN/MESSAGE input which the input channel is connected to the control input (IN1 means logic input channel 1).

1. I/O Control: Set the Control Input.

Local Control

INPUT	CONTROLLER	POSITION	FUNCTION	М	10DE		SECURITY	SOURCE	ş	TARGET		
IN1	RAC-8		Channel Select	• It	intercom	Ŧ					į	<u>CB</u>
IN2	RAC-Analog	*	Volume Control	▼ It	intercom							<u>CB</u>
IN3	Logic	*	Message Button	▼ Ir	ntercom	•		Internal MSG		Device IT5_169		<u>CB</u>

2. Go to Audio Matrix page, and assign the source channels to the RAC knobs on [Select] function of [Control Option].

Basic Setting) De	evice		unctio	n Librari	es		Matrix	I/O C	Contr	ol Media Setting	Output Volume										
INPUT	мое	DE	PRI	DRITY	Mute	LIM	IE OUT OUT	г (АМР Г)			STREAM OUT	r		3	CON	TROL (OPTIONS	6			BUFI	FER
<u></u>			-			1(A)	2(B)	S/PDIF	OU	T	IP ADDRESS	PORT	33	SELE	ст		INPL	JT V	olui	ME		
SIP	Mono	•	1	•			V	N/A									IN2	•	35	Ŧ	RT	•
MIC IN	Mono	•	6	-	1	V	V	N/A	OFF	•	239.240.100.4	9012	IN1	•	1	-	IN2	•	35	Ŧ		
LINE IN	Mono	•	6	*	1	1	1	N/A	OFF	•	239.240.100.4	9012	IN1	•	2	•	IN2	•	35	Ŧ		
MESSAGE	Auto	•	6	-	4	V	V	N/A	OFF	•	239.240.100.4	9012	IN1	•	3	-	IN2	•	35	Ŧ		

5.3.4.1.10 RAC-Play Target

The RAC-Play Target allows to assign each channel on RAC to use the selected message sources and

intercom or paging to the Terracom device (s) target.

INPUT	CONTROLLER	POSITION	FUNCTION		MODE		SECURITY	SOURCE		TARGET	
IN1	RAC-5	← Channel 1	Play Target	•	Intercom	•		Internal FXO	•	Device FDX_118	
		Channel 2			Intercom	•		Internal MSG	•	Device IO_183	*
		Channel 3			Intercom	-	E	Internal schedu	8	Device FXO_198	*
		Channel 4			Intercom	•		Internal test	8	Device EXA_124	*
		Channel 5			Intercom	•	(iii)	Internal test		Device TMNet	÷

5.3.4.1.11 RAC Analog-Volume Control

Allow to control the volume of all audio outputs.

1. Go to [I/O Control] page and set one of the logic input with [RAC-Analog], and choose [Volume

Control] function, allowing to turn the volume knob on RAC-5/8

INPUT	CONTROLLER	POSIT	ION FUNCTION		MODE		SECURITY	SOURCE		TARGET	
IN1	RAC-5		Channel Select	•	Intercom	Ť					<u>CB</u>
IN2	RAC-Analog	· •	Volume Control	•	Intercom	÷					<u>CB</u>
IN3	Logic	87	Message Button	•	Intercom	•		Internal schedu	•	Device TMNet	▼ <u>CB</u>

2. Go to [Audio Matrix] page, and [Input Volume] will be dynamically changed via the volume knobs on RAC-5/8.

Basic Setti	ng	Devi	ce	Func	tion Libr	aries	Aud	dio Matrix	I/C) Cont	rol Media Settin	g Output Volume	1									
INPUT	MOL	DE	PRI	ORITY	' Mute	LII	NE OUT	г (амр T)			STREAM OUT	r)		C	ONTE	ROL O	PTIONS	1			BUF	FER
	_		-			1(A)	2(B)	S/PDIF	OU	Т	IP ADDRESS	PORT	8	SELEC	т		INPL	JT VO	DLUI	1E		
SIP	Mono	•	1	. 💌		V	V	N/A									IN2	•	35	v	RT	•
MESSAGE	Auto	•	6	Ŧ	3	V	V	N/A	OFF	▼ 2	239.240.100.4	9012	IN1	•	1	•	IN2	•	35	v		
MONITOR	Mono	•	2	•		V	V	N/A									IN2	•	35	v	RT	•
NET1	Auto	•	6	Ŧ		V	V	N/A									IN2	•	35	v	RT	•
NET2	Auto		6	•		1	V	N/A									IN2		35	-	RT	
5.3.4.1.12 Edge Trigger Button

To trigger a Hi to Low (Press trigger) or Low to Hi (Release Trigger) action which is set via logic input (IN1 means logic input channel 1).

			_	Pre Trig	ess ger		Release Trigger				
Local Co	ntrol	Time			1		1		•		
TNPUT	CONTROLLER	POSITION	FUNCTION		MODE		SECURITY	SOURCE		TARGET	
INPUT IN1	CONTROLLER Edge Trigger Button	POSITION Release trigger	FUNCTION Music Stop	•	MODE	×	SECURITY	SOURCE)	TARGET	<u>CB</u>
INPUT IN1	CONTROLLER Edge Trigger Button	POSITION ▼ Release trigger Press trigger	FUNCTION Music Stop Music Play	•	MODE Intercom	*		SOURCE		TARGET	<u>CB</u>
INPUT IN1 IN2	CONTROLLER Edge Trigger Button RAC-Analog	POSITION ▼ Release trigger Press trigger	FUNCTION Music Stop Music Play Volume Control	•	MODE Intercom Intercom Intercom	*		SOURCE		TARGET	<u>a</u>

Edge Trigger Button

- Release Trigger/Press Trigger:
 - Trigger Function: Set Hi to Low and Low to Hi action with the logic input action (Command String, Logic Out, Multi Function).
 - o Message Call: Make a message call when release/press the button.
 - Hang up: Hang up the intercom/paging call.
 - \circ Music Play: Play the music based on the internal/external playlist source.
 - $\,\circ\,$ Music Stop: Stop the music playing.
 - ON/OFF Switch: Switch on/off the Mute function of source (SIP/MIC/MESSAGE/NET1/ MONITOR).



Example Diagram: Edge Trigger Button-ON/OFF Switch

5.3.4.1.13 Push To Talk

Paging/Intercom by constantly push the button which is connected to the control input (IN1 means logic input channel 1). Once the button is released, the paging/intercom status will stop.

INPUT	CONTROLLER		POSITION	FUNCTION		MODE	-	SECURITY	SOURCE		TARGET	
IN1	Push to Talk	•	-	Call Button	٠	Intercom	•		MIC IN	•	Device IT5_169	▼ <u>CB</u>
IN2	Push to Talk	•	-	Call Button	Ŧ	Intercom	•		MIC IN	•	Device DS_12	
IN3	Push to Talk	*		Call Button		Intercom	•		MIC IN	ंच	Device EX_127	▼ <u>CB</u>
IN4	Push to Talk	*		Call Button		Intercom	+		MIC IN		Device IO 183	▼ CB

5.3.4.1.14 Level Control

Play/Stop the music or mute the audio source (SIP/MIC/MESSAGE/NET1/MONITOR) by Hi or Low level of logic input.



- Music Play: Play the music based on the internal/external playlist source.
- Music Stop: Stop the music playing.
- ON/OFF Switch: Switch on/off the mute function of source (SIP/MIC/MESSAGE/NET1/ MONITOR).

5.3.4.2 Remote Control

The Remote Control allows to expand the number of control inputs by TERRA-IO. See the diagram as below.



1. Go to [Device List] page and add a TERRA-IO device.

Device Name	IO_183
Product Type	TERRA-IO 👻
URI	IO_183@192.168.101.183:5060

2. Go to the [I/O Control > Remote Control] and click <u>ADD</u> INx button to select the Device and Control input, then click [Done] button. After that, set the controller, function, source and device target to the corresponded input.

29931 1 0020	CONTROLLE	POSITION	FUNCTION	MODE	SECURITY	SOURCE	TARGET	
N4 (30_183's 181)	RAC-5	•	Channel Select	• Intercom +				DE
INS (10_103's IN1)	RAC-Analog	*	Volume Control	• Intercom +				DE
(NG (10_183's TH1)	Logic	•	Call Button	r Intercom 👻		MIC IN	▼ Device AMP_101115	▼ <u>DE</u>
ADD IN7	-	*	-	Intercom +				
ADD INB	-	*	-	lintercom 👻				
ADD IN9	-	-		r Intercom 👻				
ADD IN 10		+	4	- Intercom -				
ADD IN11	-	*	-	Intercom 👻				

5.3.5 Audio Matrix

The Audio Matrix provides an interface to manage all audio in/output with the following functions as below.

- Audio routing with priority.
- Audio routing with RAC-5/8.
- Volume control depends on audio source.
- Announcement has different volume with music.
- Send network stream.
- Play network stream.

Basic Setting	De			unction	1 Librari	es		Aatrix	I/O Contro		4edia Setting C	output Volume										
A			(Muta	LINE	DUT (A	MP OUT)			E STREAM OUT	FX		c	ONT	ROL	OPTI	ONS	8		(9
INPOT	MOL	<i>/C</i>	PRIC	жит	mute	1(A)	2(B)	S/PDIF	OU	т	IP ADDRESS	PORT		SELE	σ		INP	υτ ν	OLUI	1E	DUF	TER
SIP	Mono	*	1	•		V		N/A									Fix	•	24	•	RT	•
MIC IN	Mono	•	6	*				N/A	OFF	80	239.240.100.1	9012	Fix	•	447	*	Fix	*	24	•		
LINE IN	Mono	-	6	*		V		N/A	OFF	8.	239.240.100.1	9012	Fix	•	-	۲	Fix	•	24	•		
MESSAGE	Auto	∵	6	•				N/A	OFF	8	239.240.100.1	9012	Fix	•	49	۲	Fix	•	24	•		
MONITOR	Mono	•	6	•				N/A									Fix	•	24	•	RT	•
NET1	Auto	•	5	•				N/A		-		-					Fix	•	24	•	RT	•
NET2	Auto	•	6	•				N/A									Fix	•	24	•	RT	•
N /14/ TM			DE					SHOUTC	AST/ICE	CAST		STREAM MUL	TICAS	F				0	2			
14/ VV 114	U	PR	JUC .						URL			IGMP IP	PO	RT		NE	т1	Y		NE	T2	
SOURCE 1	Stream	n Mul	ticast	•								239.240.100.147	6912		Fix		[•	Fix	•	-	•
SOURCE 2	Stream	n Mul	ticast	•								239.240.100.1	9012		Fix	- 83		•	Fix	•		•
SOURCE 3	Stream	n Mul	ticast	•								239.240.100.1	9012		Fix	8. *		•	Fix	•	-	•
SOURCE 4	Stream	n Mul	ticast	•								239.240.100.1	9012		Fix	•		•	Fix	*		Ŧ
SOURCE 5	Stream	n Mul	ticast	•								239.240.100.1	9012		Fix			•	Fix	*	-	Ŧ
SOURCE 6	Stream	n Mul	ticast	•								239.240.100.1	9012		Fix		-	•	Fix	*		Ŧ
SOURCE 7	Stream	n Mul	ticast	•								239.240.100.1	9012		Fix			•	Fix	*	-	•
	Stream	n Mul	ticast	•								239,240,100,1	9012	-	Fix	37	1	-	Fix		1	

Save Cancel

Input: The audio input sources.

- SIP: SIP calls.
- MIC IN/LINE IN: Input the audio from MIC IN or LINE IN.
- MESSAGE: Play message.
- NET1/NET2: Play network stream.

If the source priority of Input is the same, the priority order will be based on: SIP>MIC IN>LINE IN>MESSAGE>MONITOR>NET1>NET2.

Mode: Select Mono, Stereo or Auto depending on the input source.

- Stereo: If the mode is set as Stereo on MIC/LINE IN, the MIC IN will be as the left channel which outputs to the LINE OUT A; and LINE IN will be as the right channel which outputs to the LINE OUT B.
- Auto: The Auto mode will let the MESSAGE input be switched automatically among all kinds of audio codec (MP3, G.722, G.711, PCM16K, WAV, TM), depending on the format of message files which users have stored into the internal message storage of Terracom device or external USB flash drive.
- TM: The TM mode is to assign the Net 1 & Net 2 inputs as the audio routing output of TerraManager (TM).

Priority: Set the priority of the SIP/MIC IN/LINE IN/MESSAGE/NET1/NET2.

Always set the the priority of SIP as "1" (the highest priority), otherwise the call will be left aside. The SIP includes Call, Paging Group and Pre-define Message.

Please note when selecting the control inputs as RAC on I/O control page, the priority selection here will be locked, users can manually switch the source on RAC instead. See the pictures as below.

Setup1	Setup2	Update	Status	About Lo	gout		201			
Basic Sett	ing Device	Functi	on Libraries	Audio Matrix		X Media S		Output Volume		
Local Co	ntrol .			//						
INPUT	CONTROLLER		POSITION	FUNCTION		MODE	SECURIT	Y SOURCE	TARGET	
IN1	RAC-5	*		Channel Selec	t 🔻	Intercom 👻				<u>CB</u>
IN2	RAC-Analog	1		Volume Contro	▼ Ik	Intercom 👻				<u>CB</u>
IN3	1770				•	Intercom 👻				<u>CB</u>
					1/0	Contro	l nado			

I/O Control page

Back to the Audio Matrix page, the IN1 is RAC-5 sources selectors and IN2 is RAC's knob for volume control.

INPUT	MOE)E	PRIC	ORITY	Mute	ш	IE OUT OUT	г (АМР Г)			STREAM OU	т		9	CONT	TROL C	PTIONS	5			BUF	FER
					. <u> </u>	1(A)	2(B)	S/PDIF	ou	г	IP ADDRESS	PORT		SELI	ст		INP	UT V	OLUI	ME		
SIP	Mono	¥	1	-		V	V	N/A									IN2	٠	35		RT	8₩
MIC IN	Mono	٠	6	Ŧ	1	V	V	N/A	MP3	¥	239.240.100.4	9012	IN1	٠	1	-	IN2	*	35			
LINE IN	Mono	*	6	w	1	V	V	N/A	OFF	×	239.240.100.4	9012	IN1	٠	2	•	IN2	*	35			
MESSAGE	Auto	¥	6	Ŧ	1	V	V	N/A	OFF	¥	239.240.100.4	9012	IN1	٠	3	•	IN2	¥	35			
MONITOR	Mono	*	2	•		V	V	N/A					les.				IN2	¥	35	+	RT	
NET1	Auto	•	6	-		1	V	N/A									IN2	Ŧ	35	+	RT	-
NET2	Auto	•	6	•		1	V	N/A									IN2	*	35	+	RT	•

Audio Matrix page

Line Out (AMP Out): Tick the checkbox to enable the audio output channels. The current audio outputs will be shown at the upper-right of the Terracom web interface. For example, it will display MESSAGE during message play.

3	Version 3.0.3.1, 2016/11/11 10:05:49
TER	RA-AMP, AMP_114@192.168.101.114
	OUT-1: MESSAGE / OUT-2: MESSAGE

Stream Out: Send the network streams.

- Out:
 - MP3, G.722, PCM16K, G.711, WAVE: Choose the audio encoder of the MIC-IN, LINE-IN and MESSAGE input.
 - TM: Choose [TM] to use the MIC input, LINE IN input and MESSAGE input as the audio routing source of TerraManager (TM).
- IP Address: Set the IP address.
- Port: The RTP port should be an EVEN number.

Port 8000~9000 has been used by system, DO NOT use these ports on your system configuration.

Control Options:

- Select: Assign the channel of the RAC-5/8 to the audio control inputs (including the sources from network).
- Volume: Set a fixed volume or control it with the knob of RAC. See [<u>I/O Control > RAC Analog-Volume Control</u>] page.

Buffer: The buffer time (by second) before the receiving input sources. This function will be particularly helpful for a Terracom system which multiple Terracom devices are located in different area and lots of network switches are connected, this will cause a delay time for audio transmission for the devices located at remote area, then please set the Buffer in longer delay time. If user wants to play the message audio in real-time for example, please set RT Buffer.

Mode: Choose a received type of network stream on source 1~source 8.



SHOUTcast/ Icecast URL: Receive the network radio using Shoutcast or Icecast. Set the URL of Shoutcast or Icecast. It may cause the sound quality problem if the audio received from the SHOUT cast/Icecast isn't in 48k sampling. To use an Icecast Streaming Media Server, please go to Icecast [112] chapter.

Stream Multicast: Receive the network streaming using Stream Multicast. Set the IGMP IP and its port. The IDA8 or TerraManager will use the Multicast type.

Wet 1/Net 2: Assign the network stream to be switched by RAC5/8, there are two Net channels can be controlled by RAC5/8.

5.3.6 Machine Windows (PPM-IT5)

Allow to set the settings on the touch panel of PPM-IT5.

Name Setting

Function Libraries Audio Matrix	Machine Windows	Media Setting	Output Volume	14
ll. W	-1	1. 	W	74
1	-1 ¹²			
MAIN	DIAL	DIAL		
1ESSAGE	SETTING	SETTI	NG	
CALLBACK		- 1		
4	ESSAGE ALLBACK	ESSAGE SETTING ALLBACK	ESSAGE SETTING SETTING	ESSAGE SETTING SETTING

♦ MAIN/MESSAGE/DIAL/SETTING/CALLBACK:

The displayed name shown on the menu page of PPM-IT5.

MAIN	DIAL	MESSAGE	SETTING	•
1	2	3	@	85
4	5	6		CANC
7	8	9	:	CAPS
*	0	#		-
æ	9 6	5	_	_

LCD panel of PPM-IT5

Parameter Setting

Enter Sleep Mode Time	0 ▼ h: 1 ▼ m	
Select Zone Release Time	30 Sec 👻	
Level Action	🖲 Enable 🔘 Disable	
External Button(Left)	Audio Level -	10 -
External Button(Center)	Audio Level +	85.
External Button(Right)	Audio Source Select	1374

- Enter Sleep Mode Time: Set the time to enter sleep mode.
- Select Zone Release Time: The release time which is the time selected zone button lights off on PPM-IT5.
- Level Action: Enable or disable the authorized [Level Action] function of PPM-IT5.
- External Button (Left/Center/Right): Set the button functions including Audio Source Select, Volume Control (Level + -) and Push To Talk (Intercom).

Function Action (Level Action)

- Check Box: Enable or disable the user level (L1~L9) of each listed function on PPM-IT5, users need to enter the [User ID] and [Password] before making a call, paging, etc.
 - $_{\odot}$ All: Tick [All] checkbox to select L1~L9 authorized levels.
 - $_{\odot}$ L1~L9: The authorized level of L1~L9 can be user-defined.

Main	Function	All	Admin	L1	L2	L3	L4	L5	L6	L7	LB	19
01	6		-	V			m					1
02	0		82	V	V							17
03	P ⁻	V	17	V	V	The second se	17				10.1	-
04	P.P.		*	V								
Dial	Function	All	Admin	LI	LZ	L3	L4	L5	L6	L7	LB	L9
01	6		12									T
02	2	V	5	V	\mathbf{V}	175	(L)					P
lessage	Function	All	Admin	L 1	L2	L3	L4	L5	L6	L7	LB	L9
19465	6		-			177	1	100		回	177	in.

WYou can manage the accounts, user's ID and change the password on <u>Account Management</u> and chapter.

 $rac{1}{2}$ This section appears when users enable the [Level Action] on Parameter Setting.

♦ Windows & Page

100000

ey Button Functi	on	Button Name		All	Admin	L1	12	L3	L4	L5	L6	L7	L8	L9
1 Device		LAPG2T1	*		-	V	V		177		1			1001
Device	7	IT5_214	7		-	V		<u> </u>			1			
03 Device	٠	TerraFDX172	*	$\mathbb{C}^{(n)}$	-	V					177			177
04 Device	•	IEX536_163	*		-	V								E
05 Device		EX_127	*		-	J								
06 Device	+	EX536_162		(tert)		V	V			[[7]]	1000		1000	10
07 Device		EXA_124	*		-	V	V	<u></u>			1		[77]	
08 Device		D5_12			-	V			177		1			1
09 Device		IT5_169	*	100	-	1				177	1000			1000
10 Device	•	FXO_199	•	[P ⁴]	2	V	E	£771		((***)	177		[[77]	
11 Macro	¥	TEST2	÷.	107	-	V			<u></u>	1				10
2 Goto Button		p3	÷	1000	-	V					100		10	

- Windows: The current operation panel, including Main Page and Macro List.
- Page-Main & Marco Page: Support up to 14 pages of button setting on Main Page, and 2 pages on Marco Page.
- Key-Main & Marco Page: Support up to 168 individual keys setting on Main Page, and 24 keys on Marco Page.
- Button Function: Choose the triggering actions, including Device, Command (string), Logic Out, Schedule Control etc. The Device action here indicates as a device zone which allows to proceed intercom or paging.
- Button Name: The device to execute the triggering actions.
- All: Tick [All] checkbox to select L1~L9 authorized levels.
- L1~L9: The authorized level of L1~L9 can be user-defined. See the picture above as an example, all the checkboxes in L1 are enabled, which makes L1 is in the highest authorized level, in other words, all the Button Functions can be accessed on PPM-IT5. The button which is not in L1 will display as a light-off button which cannot be selected on PPM-IT5.

5.3.7 Media Setting

5.3.7.1

The management of the audio, files, messages list, recording setting and play list.

Setup1	Setup2	Update	Status	About	Logout				
Basic Settin	g Device	Function	Libraries	Audio Matri	ix Machin	e Windows	Media S	ietting (Dutput Volume
le Acces	s								
Basic Settin	g Device	Foreborites	diks Ap	dio Matrix	(/O Control	Media Setti	o Outpul	Volume	
File Acces	ry	c:/	-					7	
Please sele	ct a file to store	Ch	oose File No	file chosen	S	itore	Reverse	Delete	Create

• File Directory: The file path where you like to store the files.

- Please select a file to store: Click [Choose File] button to select the file you want to store, then click [Store] button. Click [Delete] button to delete the file listed on File Directory.
- Reverse: Download the file which is stored in the TERRACOM device to your PC/Laptop. First, click the icon of the file on [File Browser], see the picture as below. If the file has listed on [File Directory], then click [Reverse] button to download it.

File Brow	NSEF				
< Please	dick file name ti	add or remove l	ist >		
Open All	File Clase Al F	le			
-					
i e en d	isk C:				
1	Black Star.wa	IV.			
-	Alarm DE.wa	v			
	Chime 3 note	s.WAV			
-0	Charice - loud	der.mp3			
-0) REC161014 :	111242.mp3			
-0	REC 16 10 14 1	111453.mp3			
-62] REC151014	111704.mp3			
-0] REC161014 :	111915.mp3			
-0	REC161014 :	112121.mp3			
-6] REC151014	112648.g711u			
] Im yours Jase	on Mraz p2.wav			
E	aa aa				
	Temp.txt				
File Acce	-55				
File Direct	tory	2 [::/8	adk Star. wav 3		
		Store	Reverse	Delete	Create

• Create: Click to create a new file folder.

Please note that the specification of files (banners, logo, gif files) needs to be followed by the standard format in order to be read by the system.

1. Logo:

- o Size: 80*80
- o Format: bmp
- Name: logo.bmp

2. About:

- o Size: 348*232
- Format: gif
- Name: about.gif

3. Banner:

- o Size: 629*47
- Format: jpg
- o Name: banner.jpg



TERRACOM"

SIP-based audio and control over local network and internet

4. Message:

- $\circ\,$ Size: Less than 10MB
- o Audio Codec: WAV, MP3, G.711 and G.722.

5.3.7.2 Recording Setting

File Directory	c	:/					
Mode		Stop	*				
Audio Method		Local					
Audio Source	SIP MIC IN LINE IN MESSAGE NET1 NET2 MONITOR PAGING LINE OUT 1(A) LINE OUT 2(B)	* * *	SIP MESSAGE	*	Codec	G.711 alaw	• Save

- File Directory: The file path where you like to store the recording files. Please note the storage space is 2MB.
- Mode: When the recording file is too big to store or the storage capacity is not enough, users can choose to Rewrite/Stop.
 - o Rewrite: Rewrite the file from the first recorded file when the memory storage is full.
 - Stop: Stop recording if the memory storage is full.
- Audio Method: Choose which method to input the audio source either from Local Terrcom device or Network.
 - Local: Record the audio source by using the MIC IN, LINE IN etc. of local Terracom device. Select the sources which user wishes to add it in the [Audio Source], click [>] and [>>] button to add one or all the sources or click [<] or [<<] button to remove one or all the sources from the left side to the right side.
 - Codec: Set which audio codec (WAV, G.711 ulaw, G.711 alaw, G.722, MP3) the recording file will be saved as.
 - Network Recording: Record the audio source from the network. Please set the Network IP address and Network Port.

File Directory	C1/				
Mode	Stop	1			
Audio Method	Network	*			
Network IP	239.240.100.76		Network Port	3005	

5.3.7.3 File Browser

Display all the internal/external audio files that can be stored into the device.

File Brow	ser
< Please of	lick file name to add or remove list >
Open All F	ile Close All File
1	
	sk C:
Fo	Chime 3 notes.WAV
-0	Alarm DE.way
-0	Black Star.wav
-0	Im yours Jason Mraz p2.wav
	Charice - louder.mp3
	REC161014 111238.mp3
-0	REC161014 111449.mp3
	REC161014 111700.mp3
-0	REC161014 111911.mp3
-0	REC161014 112117.mp3
	REC161014 113357.g711a
	REC161114 110340.g711a
	REC161114 110357.g711a
3	
🖻 💮 Di	sk D:
	Terracom Fun.dat
-0	Terracom Dum.dat
	Test_File
D	05. All With You.mp3

When an USB device is connected to the Terracom device, it will automatically detect its file folder, and the files can be saved into a Internal/External Play List.

5.3.7.4 Play Setting

setting		
Play Mode	Normal 👻	
Play Target	Internal 💌	
	Internal	
	External Sav	e

- Play Mode: Select the play mode of your messages.
 - $_{\odot}$ Normal: Play all the audio files on [Play List Setting] once.
 - $_{\odot}$ Repeat all: Play the audio files on [Play List Setting] repeatedly in order.
 - $_{\odot}$ Random: Play the audio files on [Play List Setting] randomly.

In this area, your changes will be auto saved. Remember to set the Priority (right after the SIP) of USB at the "Audio Matrix" page if you want it auto-plays right after booting tone. Also, the Terracom device

will load the last setting after reboot.

- Play Target: Choose the target source (internal, external) of your audio files.
 - o Internal: Choose the internal storage as your play target.
 - $_{\odot}$ External: Choose the external USB as your play target.
 - Detect by External: Choose the external USB as the first priority, then auto choose the internal storage as the secondary one if external USB cannot be detected.

5.3.7.5 Play List Setting

Play List Name	Tes	ŧ	
Repeat Count	0		
c:/Chime 3 notes.WAV c:/REC161014 111238.mp	33		4
(3
			Course for Frederical

- Play List Name: Enter the name of your play list.
- Repeat Count: This function is only applicable when playing the message on SIP based.

If you set the [Repeat Count] as 0, this indicates the audio files listed on the [Play List Setting] will only play **once**, and set the [Repeat Count] as 1 indicates that the audio files will play twice, set as 65535 to play the list forever.

 $rac{1}{2}$ If no playlist exists, it will automatically create a new playlist of all supported files in the USB.

- New List: Click [New List] to add a new empty playlist.
- Remove: To remove the audio file from the playlist, click the file first, then click [Remove].
- Save to Internal/External: Once the files have been added into the playlist setting, click [Save to Internal] or [Save to External] to create a new playlist.
- ♦ If you would like to know how to play the messages on SIP based. Please refer to the Message button for chapter.

5.3.7.6 Internal/External Play List

- Function:
 - o Edit/Delete: Click the Edit/Delete button to edit/delete the playlist.
 - Copy to internal/external: Copy the same playlist you select to Internal/External Play List.
- Music Database Playlist: Tick the checkbox of the internal/external playlist you wish it to be played as background music. See <u>Play Music/Message from Internal/External Play List</u> 103 for more information.

PLAYLIST	FUNCTION
EXO EXO	Edit / Delete / Copy to external
MSG	Edit / Delete / Copy to externa
🔲 <u>schedu</u>	Edit / Delete / Copy to externa
IV test	Edit / Delete / Copy to externa
xternal Play List	vi: ~~
PLAYLIST	FUNCTION
Play List	Edit / Delete / Copy to internal

5.3.7.7 Disk Space

C -1	
ч 1	
Total: 80 MB	
Free: 70 MB	
	Forma
D:\	1.1.54
Total: 3863 MB	
Free: 1861 MB	
	Forma

- Total: Display the total memory capacity on the device.
- Free: Display the capacity of your device that has left for use.
- Format: Click to format the disk.

Please note that the data will be deleted after formatting.

5.3.7.8 Play List Information

Play List Information	
Name: 0	
Repeat: 1	
001, c:/02. Je Veux.mp3	

• Click the file listed on [Internal Play List] and the file information such as file name, etc. will be listed here.

5.3.8 LINE1/LINE2 (TERRA-FXO)

The LINE1/LINE2 page can create the DTMF call setting, set the pre-tone etc., allowing traditional telephone to call TERRA-FXO.

The LINE1/LINE2 will appear in the Setup menu of TERRA-FXO only.

DTMF-Add New DTMF

tion Select: DTMF 🔹		
-Tone	c:/îm yours Jason Mraz p2.wav 👻 -10dB 💌	
		Sav
MF Number	DTMF Action	Action
18*	Call Device - FDX_118	Edit / Delete
7*	Coll Device - EX_127	Edt / Delete
27*	Call Device - EX_127	Edit / Delete
3*	Call Device - IEX_213	Edt / Delete
Basic Setting Devic	e Function Libraries Media Setting Ling Line Line Telephone	
Basi: Setting Devic Modify #111* DTMF Number	# 111	
Basic Setting Device Modify #111* DTMF Number Action	Function Libraries Media Setting Line Line Line Line Line Line Line Line	
Basi: Setting Devic Modify #111* DTMF Number Action Password	te Function Libraries Media Setting Libraries Telephone # 111 * Call • -10dB • # • -10dB •	
Basic Setting Devic Modify #111* DTMF Number Action Password Target	te Function Libraries Media Setting Libraries Telephone # 111 * Call • -10dB • # ± + • -10dB • Device - IT5_217 •	
Basic Setting Devic Modify #111* DTMF Number Action Password Target Mode	E Function Libraries Media Setting Line Telephone # 111 * Call ▼ -10dB ▼ □ # ▼ -10dB ▼ Device - IT5_217 ▼ Intercom ▼	

- DTMF Number: Type the DTMF telephone numbers.
- Action: The action that the TERRA-FXO will perform. Click the drop-down list to select the action.
- Password: Enable the password function by typing the numbers, and select a message file as an indication message before typing the password numbers.
- Target: Select which Terracom device (device group) target to receive the call from the traditional telephone.
- Mode: Choose the calling mode (intercom/paging/EVAC Announce/Vote Announce).
 - EVAC/Vote Announce: This two call modes are only applicable when using PPM-IT5 to paging to TERRA-RD. The paging priority: EVAC Announce > Vote Announce > Paging.

DTMF-Add Pre-Tone

When calling the DTMF number using TERRA-FXO, a pre-tone will be played.

Telephone	Line2	Line1	Media Setting	on Libraries	Function	Device	Basic Setting
		n			¥.	DTMF	Action Select:
	3 	▼ 0dB	.wav	c:/Alarm DE			Pre-Tone
		▼ 0dB	.wav	c:/Alarm DE			Pre-Tone

 Pre-Tone: User requires to upload your audio files [WAV (16k 16bit)] for pre-tone on [Media Setting] page first. Please note the storage space is 100 MB.

✤ Call Program

Set the call scheduler to call Terracom devices in group. There are 24 sets of setting time periods in total.

Action 5	elect: Call Prog	iram 🔻														
ai Mess	age	c:/Ai	arm DE. wav		← OdB ←											
															Sa	we
No.		Target			Enable/Disable	8	Start	Time				End T	îme		Volu	me
		10000000		1000 CONTRACT		Hou		Mir	nute		Hour	-	Mir	ute	10,200	852
01. Cal	1771		٠	Scheduling	<u>15</u>	0	*	0	*	~	0	*	0	*	0.45	
12. Cal	-		*	Scheduling	101	0	-	0		~	C	- :	0		0d8	
03. Cal	43		X	Scheduling	回	0	- :	0	-	~	Ø	+ :	Ū.	-	0d8	
04. Cal	177			Scheduling	<u>E1</u>	Ű.	-	0	1.00		0	- 1	0		0.49	
05, Cal	-		•	Scheduling	E71	0	Ψ.	0	- w.	~	0	+ =	0		0dB	
05. Cal	<u>.</u>		-	Scheduling	2	Ū.	-	0	+	~	0	-	0	-	0dB	
07. Cal	100		•	Scheduling	12	0	-	0		~	0	+ 4	0	+	8b0	
08. Cal	140) 140)		¥	Scheduling	E	0	Ψ.	0	÷.	~	0	* 3	0		0dB	
19. Cal	-		•	Scheduling	同	6	-	0	*	~	0	-	0	*	OdB	
to. Cal	(+);		*	Scheduling	123	0	+	0	+	~	0	- 1	0	-	0d8	
11. Cal	40		•	Scheduling	100	0	*	0		~	0	+ :	0	+	0.48	
12. Call	-			Scheduling	<u>m</u>	0	*	۵		N	0	* 3	ñ		Bb0	
13. Cal			*	Scheduling	10	0	-	0	-	~	0	- 3	0	-	Bb0	
14. Cal	<u>1</u> 2			Scheduling	E 21	0	+	0	-	~	0	+ :	0	-	0dB	
15. Cal			•	Scheduling	<u></u>	0	*	0	1.0	N	0	* :	0	(W)	0d8	
16. Cal	-		•	Scheduling	10	0	+	0		N	0	+	0	-	OdB	
17. Cal	70			Scheduling	問	0	-];	0		~	0	+ 2	0	-	0d9	
18. Cal	(+)		٠	Scheduling		0	*	0	. *	N	0	* 3	0	+	OdB	
19. Cal	-		÷	Scheduling	100	G	-	0	*	N	٥	+	0	-	OdB	
20. Cal	-			Scheduling	回	6	-	0		~	0	- 1	IJ	-	Ode	
21. Cal	H4.		¥	Scheduling	E1	G	-	0		~	0	+ :	0	+	Bb0	
22. Cal	22		•	Scheduling	20	G		0	÷	iv.	0	+ =	0		0.dB	
23. Cal	÷			Scheduling	团	C	-	0	-	N	0	- :	0		OdB	
24 Cal	· 440			Scheduling	177	C	-1:	0		~	0	- ;	0	4	0d8	

Fail Message: There will be a tone sound to indicate if the call message is unable to dial. Please check whether users have set the time of dialing or whether either no one answers the phone or the telephone line is busy can occur this issue.

5.3.9 IP Phone (TERRA-FXO)

Users can use the IP phone and traditional telephone to call the TERRA-FXO via Ethernet or landline, and dial the specific DTMF keys to assign an Intercom/Paging/Command String/Multi Function action.

isic Setting Device	Function Libraries Media Setting Line1 Line2	1P Phone Telephone
TPHE		
idge Type	O Telephone Ethernet	
		Save
OTMF Number	DTMF Action	Action
127*	Call Device - EX_127	Edit / Delete
0127*	Call Device - EX_127	Edit / Delete
213 [*]	Call Device - IEX_213	Edit / Delete
0213*	Call Device - IEX_213	Edit / Delete
124*	Call Device - EXA_124	Edit / Delete
163 [*]	Call Device - 1EX536_163	Edit / Delete
162*	Call Device - EX536_162	Edt / Delete
0163*	Call Device - 1EX536_163	Edit / Delete
0162*	Call Device - EX536_162	Edit / Delete
111*	Logic Out - Logout8	Edit / Delete
0124*	Call Device - EXA_124	Edit / Delete
165 [*]	Call Device - TMNet	Edit / Delete
0118*	Call Device - FDX_118	Edit / Delete
000*	Command String - String1	Edit / Delete
222*	Multi Function - MF1	Edit / Delete
118*	Call Device - FDX_118	Edit / Delete
114 [*]	Call Device - AMP_114	Edit / Delete
0114*	Call Device - AMP_114	Edit / Delete
	New DTM	F

• Bridge Type: Choose to use the traditional telephone or IP phone to call the TERRA-FXO.

5.3.10 Telephone (TERRA-FXO)

The [Line 1 Hangup] and [Line 2 Hangup] function can be manually operated via web browser.

ine Control .		
	Line 1 Hangup	Line2 Hangup

Users can define when the device will hangup the call device by the frequency of [Busy tone]. See the picture as below.

Enable	Item	
	480Hz + 620Hz	
[P]	440Hz	
	400Hz	
	425Hz	
	450Hz	
	350Hz + 440Hz	
	270Hz + 320Hz	
	DC	
		Save

5.3.11 Output Volume

This function allows to control, modify the volume of output 1, output 2, speaker output (TERRA-DS and PPM-IT5), AMP1/AMP2 (TERRA-AMP), RJ (PPM-IT5), Handset (PPM-IT5).

Setup1	ietup2	Update	Status	About L	ogout		
Basic Setting	Device	Function	Libraries	Audio Matrix	I/O Control	Media Setting	Output Volume
Output Volu	me				A		
Output 1 Volu	me		-10.0-dB 🔻				
Output 2 Volue	me		-10 0-dB -				

• Volume: Set the output volume.

5.4 Setup 2

5.4.1 Account Management

Manage the accounts such as add/delete a user's ID and change the password.

Account Management	Scheduler		
Management		User Information	
Select Function	Change a user's setting 👻	ID	Level
		a	Level 1
Change a user's set	ting	b	Level 2
User's ID		c	Level 3
Old Password		b	Level 4
New Password		8	Level 8
Re-enter to Confirm			
User's Level	Admin 👻		

The default account is [User Name]: admin, [Password]: admin

- 1. ateis / ateis
- 2. user1 / user1
- 3. user2 / user2
- 4. user3 / user3
- Management-Selection Function: If you want to change an existing account, the old password is required.
 - User's ID: Enter your ID.
 - o Old/New Password: Enter your old/new password.
 - Re-enter to Confirm: Enter your new password again for confirmation.
 - User's Level: Set the current ID's permission. The authorized level of L1~L9 can be user-defined.

5.4.2 Scheduler

The Scheduler function allows to schedule the actions such as messages/music playing, command (string) triggering, logic out (single) in an assigned time, and these actions will be triggered in the assigned time.

• Setting:

.ccount Management	Scheduler	
etting		
ítem	Value	
ilobal Enable	Enable	2
		Cours

Global Enable: Enable or disable to trigger all the Scheduler actions.

5.4.2.1 New Scheduler

Name:	Music P	lay1				
Start Time:	2016-10	-15				
	14 💌	00	• 00	-		
	Add	Re	move]		
Time:	10:00:0 11:00:0 12:00:0 13:00:0 14:00:0			*		
Enable:	Enable					8
Command	Music P	ay				03 .
command.	Interna	MSG				10
Repeat Mode:	Daily					10
End Time:	Nev On	er		1		
Summary:						
	201				[<u> </u>

- Name: The display name of this scheduler.
- Start Time: The start time of this scheduler.
- Time: Set a sequence of trigger time from 00:00 to 23:59.
- Command: Select the command action Logic Out, Command (String) and Message Routing etc.
- Repeat Mode (YYYY/MM/DD):
 - \circ Daily/Monthly/Yearly: Trigger this Scheduler action every day/every month/every year.
 - $_{\odot}$ Weekly: Trigger this Scheduler action weekly, you can choose the weekdays.

If you want to repeat two or more days monthly or yearly, please set another scheduler.

- End Time: Set the ending time of this scheduler.
- Summary: Memo area.

5.4.2.2 Internal Scheduler List

internal Scheduler Lis	
Ь	Internal schedu(Message Routing) Command
c	(Stop Message Routing) Command
а	127 p(Logic out) Command
Example Scheduler	NC(Logic out) Command

Here you can check the scheduler events you have created. Click the content for editing or to delete.

5.4.2.3 In-Store Scheduler List

playmessage (-repeat: 0)	2016/10/25 10:0:0 SUN. MON. TUE. WED. THU. FRI. SAT.
playmessage (-repeat: 0)	2016/10/27 10:0:0 SUN, MON, TUE, WED, THU, FRI, SAT,
playmessage (-repeat: 0)	2016/10/26 10:0:0 SUN. MON. TUE. WED. THU. FRI. SAT.
playmessage (-repeat: 0)	2016/10/28 10:0:0 SUN, MON, TUE, WED, THU, FRI, SAT,

Display the scheduler events which are sent from TerraServer.

5.5 Update

Setup1	Setup2	Updat	e Statu	is About	Logout
Firmware	Configura	tion G	UI Rebo	ot	

5.5.1 Firmware

Firmware: Click [Browse] button to upload a firmware file.

5.5.2 Configuration

- Reverse Settings: Click [Reverse] button to download the configuration backup file to your PC/Laptop.
- Store Settings: Click [Browse] button to select a configuration file and store into the current configuration.

5.5.3 GUI

GUI (PPM-IT5): Allow to change the font size and language of the main buttons. The new settings on PPM-IT5 will be changed after rebooting.



• Font Setting: Set the font style on PPM-IT5. The PPM-IT5 supports multi-languages.

Please note the font you have stored into your PPM-IT5 requires to support multi-languages as well.

• UI File: Click [Browse] button to select the custom UI background settings on PPM-IT5.

5.5.4 Update Reboot

Reboot: Click to reboot the Terracom device.

5.6 Status

Setup1	Set	up2	Update	Status	About	Logout
TERRA Sys		Con	trol Calibrate	Serial Log	Log Fi	e

TERRA System: Show the general information of the Terracom unit.

Control Calibrate: Display the calibration result of control input.

Serial Log: Display the history data sent through the serial port (RS232/RS485) of Terracom device.

Log File: Display the logs, it supports to load up to 3000 data.

5.6.1 TERRA System

Stream Out: Display the STREAM OUT at "Setup1 > Audio Matrix 75". The numbers and items are depending on the Terracom unit you're using, N/A means the item is not supported for now. The status will switch to "ON" when the Stream Out has streamed out and successfully received by other devices.

Name	MODE	IP ADDRESS	PORT	
MIC IN	N/A	N/A	N/A	
MESSAGE	N/A	N/A	N/A	

MIC Status

STREAM OUT

Name	Status	Value	
MIC	Normal	36	СВ

Device Information:

Display the status of device.

Device Information	
DHCP	DISABLE
MAC Address	00-19-84-ca-01-16
IP Address	192.168,101,116
Subnet Mask	255.255.252.0
Gateway	192.168.100.254
DNS	DISABLE
Serial Port	RS485

SIP		i
Username	FDX_101170	
SIP Port	5060	
RTP Port	6912	
Audio Codec	G.722	

Audio

MIC IN Volume

LINE IN Volume

-48 dB

-28 dB

Audio:

SIP:

Display the status of audio.

Display the SIP information.

Basic Setting > SIP 46".

✤ Fault:

 Nand Flash Error: The FLASH problem of sending/ receiving in hardware device.

The SIP settings can be changed from "Setup1 >

- AIC3X Error: The IC AIC3X problem of communication in hardware device.
- ADS7830 Error: The IC ADS7830 problem of communication in hardware device.
- PCF8574 Error: The IC PCF8574 problem of communication in hardware device.
- TAS5709 Error: The IC TAS5709 problem of communication in hardware device.
- SPI Flash Error: The SPI FLASH problem of sending / receiving in hardware device.
- SI3050 1 ERROR: The IC SI3050 1 problem of communication in hardware device.
- SI3050 2 ERROR: The IC SI3050 2 problem of communication in hardware device.



When the fault occurs, the fault will display on the Fault List on the [Status] window of web interface and the Fault LED on the Terracom device will light up.

5.6.2 Control Calibrate

Display the calibration status of contact input.

• Control Input: Display the type of control input and its function.

Control Input	
CONTROL INPUT 1	btn-
CONTROL INPUT 2	RAC5-Channel Select
CONTROL INPUT 3	RAC-Analog-Volume Control

From the picture above, the Control Input 1 displays the "btn-" which indicates no logic input is connected. The Control Input 2 "RAC-Channel Select" indicates the Control Input 2 is connected to the selection channel of RAC5/RAC8. And the Control Input 3 "RAC-Analog-Volume Control" indicates the Control Input 3 is connected to the volume channel of RAC5/RAC8.

• Logic: Display the minimum and maximum value (between 0~255), it is commonly used for a push button or a analog knob on RAC5/RAC8.

Name	Maximum	Minimum	Now
Channel 1	241	8	9
Channel 2	241	9	242
Channel 3	242	9	243
Channel 4	241	9	242
Channel 5	241	9	242
Channel 6	242	9	242
Channel 7	241	9	241
Channel 8	242	9	9

 RAC: The RAC5 and RAC8 are the remotes which feature the wall-mount volume display and source selection for Terracom system. This function indicates the range of each input channel of RAC5/ RAC8.

Name		Level	1		Le	vel2		te	vel3			Level4			Level	5
Channel 1		0~0			0	~ 0		0	~0	1	0	~ 0]	[0 ~0	
Channel Z		0 ~ 0			U	~0		Q	~0	1	D	~ 0	1	[0 ~0	
Channel 3		0~0			0	~ 0		0	~0]	0	~ 0]		0~0	£
C-8																
Name	1	level1	1	Level2		Level3	i	.evel4	0	Level5	1	Level6	1	evel7	1	Level8
Channel 1	۵	~0	0	~ 0	0	~ 0	۵	~ 0	0	~ û	٥	~0	0	~0	Ω	~0
Channel 2	σ	~ 0	0	~ 0	0	~ 0	0	~ 0	0	~ 0	0	~ 0	0	~0	O	~0
	10	0	0	~ 0	0	~ 0	0	~ 0	0	~ 0	0	~ 0	0	~0	0	~0

 Mode: Users can define whether to auto detect or manually enter the level value of each channel of RAC5/RAC8. If the level value are too close or overlap with other level value, please switch to Manual mode and set the value manually. To set the correct values, please see the example picture as below.

- Channel 1: The Level1 (17~22) on Channel 1 does not overlap the Level2 (51~59), and so does other values on Channel 1.
- Channel 2: The Level1 (16~20) on Channel 2 is overlapped the Level2 (20~39), and so does other values on Channel 2, therefore, please adjust the level values again.

Name	Leve	11	L	evel2	L	evel3	L	evel4	Le	evel5
Channel 1	17 ~	22	51	~ 59	60	~ 87	99	~ 107	118	~ 122
Channel 2	16 ~ .	20	20	~ 39	38	~ 69	69	~ 109	108	~ 129

• How-to: Please refer to Calibrate the RAC and Push Button 1041 chapter.

5.6.3 Serial Log

istory Offset	Data	History	Offset	Data	
1 1		1	1		
2 1		2	1		
3 1		3	1		
4 1		4	1		
5 1		5	1		
6 1		6	1		
7 1		7	1		
8 1		8	1		
9 1		9	1		
10 1		10	1		

↔ History: Each section of history data (Serial TX and Serial RX) can be recorded with a max. log of 10.

The order of item number listed upper among them indicates the newer data.

- ♦ Offset: Display the position of offset record of each recorded data.
- Data: Display the content of each recorded data.
- ♦ Clear: Clear all the Serial Tx/Serial Rx Port.

5.6.4 Log File

Click the Log File to open a new window displaying the "log content". The webpage can be saved to a single html file.

10	view-source:1	192.168.101	×	the loss of lot of the lot of the loss
-	-> C [j view-sc	ource:192.168.	.101.171/goform/Log_File?1418800065746?141880006
1	2044/12/15	07:28:23	3rd ETH:Public	c Level Read OUT1 Trigs:1 From:2044/12/15 7:28:21
2	2044/12/15	07:25:53	3rd ETH: Public	c Level Control OUTAIl Trigs:25 From:2044/12/15 7:25:40
з	2044/12/15	07:25:29	3rd ETH: Public	ic Level Read OUT1 Trigs:1 From:2044/12/15 7:25:27
- 4	2044/12/15	07:21:47	3rd ETH:Public	c Level Control OUTAIl Trigs:2 From:2044/12/15 7:21:45
5	2044/12/15	07:21:41	3rd ETH: Public	ic Level Control OUTAll Trigs:2 From:2044/12/15 7:21:39
6	2044/12/15	07:21:38	3rd ETH: Public	Lc Level Read OUT1 Trigs:1 From:2044/12/15 7:21:36
7	2044/12/15	06:27:10	3rd ETH:Public	ic Level Control OUTAIL Trigs:3 From:2044/12/15 6:27:5
8	2044/12/15	06:27:05	3rd ETH: Public	ic Level Control OUTAll Trigs:2 From:2044/12/15 6:27:2
9	2044/12/15	06:26:58	3rd ETH: Public	ic Level Control OUTAll Trigs:2 From:2044/12/15 6:26:56
10	2044/12/15	06:26:50	3rd ETH: Public	ic Level Control OUTAll Trigs:4 From:2044/12/15 6:26:46
11	2044/12/15	06:26:46	3rd ETH: Public	ic Level Control OUTAll Trigs:2 From:2044/12/15 6:26:44
12	2044/12/15	06:26:09	3rd ETH: Public	ic Level Control OUTAll Trigs:3 From:2044/12/15 6:26:6
13	2044/12/15	06:25:16	3rd ETH: Public	Lc Level Read OUT1 Trigs:1 From:2044/12/15 6:25:14
14	2044/12/15	05:23:08	3rd ETH:Public	c Level Control OUTAIl Trigs:5 From:2044/12/15 6:23:2
15	2044/12/15	06:22:51	3rd ETH: Public	ic Level Control OUTAll Trigs:2 From:2044/12/15 6:22:48
16	2044/12/15	06:22:48	3rd ETH: Public	ic Level Control OUTAll Trigs:2 From:2044/12/15 6:22:45
17	2044/12/15	06:22:40	3rd ETH: Public	Ic Level Control OUTAll Trigs:2 From:2044/12/15 6:22:37
18	2044/12/15	06:22:32	3rd ETH:Public	ic Level Control OUTA11 Trigs:2 From:2044/12/15 6:22:30
19	2044/12/15	06:22:29	3rd ETH: Public	ic Level Control OUTAll Trigs:2 From:2044/12/15 6:22:26
20	2044/12/15	06:22:04	3rd ETH; Public	ic Level Read OUT1 Trigs:1 From:2044/12/15 6:22:2
21	2044/12/15	06:20:17	3rd ETH: Public	Ic Level Control GUTAll Trigs:2 From:2044/12/15 6:20:15
22	2044/12/15	06:20:05	3rd ETH: Public	ic Level Control OUTAll Trigs:1 From:2044/12/15 6:20:3
23	2044/12/15	06:19:47	3rd ETH: Public	ic Level Control OUTAll Trigs:1 From:2044/12/15 6:19:45
24	2044/12/15	06:19:43	3rd ETH: Public	Ic Level Control OUTAll Trigs:14 From:2044/12/15 6:19:34
25	2044/12/15	06:19:29	3rd ETH: Public	ic Level Read OUT1 Trigs:1 From:2044/12/15 6:19:27
28	2044/12/15	06:17:03	3rd ETH:Public	ic Level Control OUTAll Trigs:5 From:2044/12/15 6:17:0
27	2044/12/15	06:16:59	3rd ETH: Public	ic Level Control OUTAll Trigs:7 From:2044/12/15 6:16:54
28	2044/12/15	06:16:46	3rd ETH:Public	ic Level Control OUTAll Trigs:1 From:2044/12/15 6:16:44
29	2044/12/15	06:16:44	3rd ETH: Public	ic Level Control OUTAll Trigs:9 From:2044/12/15 6:16:37
30	2044/12/15	06:15:24	3rd ETH: Public	ic Level Control OUTAll Trigs:2 From:2044/12/15 6:15:21
31	2044/12/15	06:15:15	3rd ETH: Public	ic Level Control OUTAll Trigs:2 From:2044/12/15 6:15:12
32	2044/12/15	06:15:07	3rd ETH: Public	Ic Level Control CUTAll Trigs:3 From:2044/12/15 6:15:4
33	2044/12/15	06:14:59	3rd ETH: Public	ic Level Control CUTAll Trigs:1 From:2044/12/15 6:14:57
34	2044/12/15	06:14:55	3rd ETH: Public	ic Level Control OUTAll Trigs:24 From:2044/12/15 6:14:45

5.7 About



After log in the web interface successfully, the About page will be displayed as the start-up window.

5.8 Logout

Setup1	Set	up2	Update	Status	About	Logout
TERRA Sys	stem	Cont	trol Calibrate	Serial Log	Log Fi	e 🛖

Click [Logout] button, there will be a pop-up window for logout confirmation.

5.9 How-To

5.9.1 Send [Sub Prest] Command to PPM-IT5

Please create the commands on Ateis Studio software first, and set the settings via Terracom web interface.

✤ Ateis Studio Interface:

1. Copy the [Sub preset] command string data (Hex code) received by the target on Ateis Studio

software. The string should be changed to ASCII code on Terracom web interface.

2. The [Sub preset] commands in [Picture 1] come from the internal command of Ateis processor, not from the external commands.

💷 3rd Party Control Command	🕎 3rd Party	Control L	.ist 冒	Device Man	agement				
Carlad	Туре								
Control		STX	OP	ID	Value	EXT	CS	CR	Command Data
Single	Read	0x02	R	0005		0x03	0x17	0x0D	02 52 30 30 30 35 03 17 0D
Single	Write	0x02	W	0005	1.0	0×03	0xAB	0x0D	02 57 30 30 30 35 31 2E 30 03 AB 0D
Single	Increase	0x02	1	0005	1.0	0×03	0x9D	0x0D	02 49 30 30 30 35 31 2E 30 03 9D 0D
Single	Decrease	0x02	D	0005	1.0	0×03	0x98	0x0D	02 44 30 30 30 35 31 2E 30 03 98 0D
		Command							
	Type	STX	OP	Number	Value	EXT	CS	CR	
1	Sub Preset	0x02	S	0001		0x03	0x14	0x0D	02 53 30 30 30 31 03 14 0D



[Picture 1]

3. [Picture 2] indicates the different codes listed on the 3rd party command on Ateis Studio software

which corresponds to the command string that can be read from the PPM-IT5.

-	Command									
STX	OP	ID	Value	EXT	CS	CR				
%02h	w	C005	1	%03h	\$02,07h	%0dh				

= %02hWC0051%03h\$02,07h%0dh

[Picture 2]

- \circ **02**: This is an initial code which is a fixed value and cannot be changed.
- \circ **WC0051**: This number is created by Ateis Studio.
- %xxh: Convert xx into hexadecimal values.
- $\circ\,$ 0D: This is an end code which is fixed value and cannot be changed.
- \$xx: This is the initial code which starts counting from "W".
- o ,xxh: This is the end code which starts counting from the first string number.

Kormally, you will need to change the "WC0051" once.

If the number "WC0051" adds up and changes to "WC0051x" for example, the following ,0xh needs to be added up, too.

Example: If the original string is %02hWC0051%03h\$02,07h%0dh, users need to change the string to %02hWC00511%03h\$02,08h%0dh.

Terracom Web Interface:

1. Create a new 3rd party command on [Function Libraries]. Follow the steps from the pictures as below.

Remember to set the string as %02hWC0051%03h\$02,07h%0dh, which Terracom can only received the ASCII code.

asic Setting Device	Function Libraries Audio Matrix Machine V	Windows Media Setting Output Volume	
iodify - Command (Strin	g)		
lame	ECS_Element\nWrite		
String	%02hW00051%03h\$02,07h%0dh		
interface	Network -		
+ Network IP	192.168.100.176		
+ Network Port	8002		
Mode	Time Interval 👻		
+ Time Interval	0 ms (Unit is 50ms)		
+ Repeat	D		
setup1 Setup2 U	odate Status About Logout		Seve Cancel
asir Setting Device	Function Libraries: Audio Natrix Machine	Windows Media Setting Culture Volume	
Function: Command (String			
Function: Command (String	3.		
Function: Command (String	3. String	Interface	Action

2. Go to [Machine Window] and select [Command String] on the drop box of [Button Function] and select the command you create on [Button Name]. See the picture below.

Setup1 Setup2	Upda	te Status	About	Logout									
Basic Setting Device	Fur	ction Libraries	Audic Matrix	Machine Wind	iows Media Settir	ig Out	put Volum						
Name Setting				2.	No.								
MAIN	MAIN	4			DIAL		DIAL						
MESSAGE	MES	SAGE			SETTING		SETTIN	G					
													Save
Parameter Setting													
Enter Sleep Mode Time		0 🔹 h:	0 👻 m										
Level Action		© Enable	Disable										
Setup1 Setup2	Upda	te Status	About	Logout									
Basic Setting Device	Fur	ction Libraries	Audio Matrix	Machine Wind	dows Media Settr	ug Out	put Volum	e					
Name Setting				2.									
MAIN	MAIN	4			DIAL		DIAL						
MESSAGE	MES	5AGE			SETTING		SETTIN	G					
												0	Save
Parameter Setting													
Enter Sleep Mode Time		0 🔻 h:	0 🕶 m										
Level Action		© Enable	Disable										
External Button (Left)		Audio Source	e Select 🛛 🔻										
External Button(Center)		Audio Level											
External Button(Right)		Audio Level	+ •										
													Save
Windows: Main Page	• : Pag	ge: 1 👻											
Key Button Function		Button Name			All Admin L1	L2	L3	L4	15	L6	17	LS	L9
01 Device	÷	AMP114		÷	3								
02 Device	*	EX_127		٠	-								

3. After that, the configuration will be uploaded into the PPM-IT5 device. See the picture below.



5.9.2 Use Logic Out to Activate Amplifier During Paging

Here is an example using a microphone which is connected to the TERRA-FDX to trigger the relay of

TERRA-IO for waking up the power switch of the amplifier during paging.



- 1. First, connect a device such as power switch which allows the relay of TERRA-IO to control this power switch. Then connect a logic input (button) on TERRA-FDX for triggering the relay of [Logic Out] action.
- 2. Create a [Logic Out] action from Terracom web interface > Function Libraries > Logic Out. See the picture as below, here we name this [Logic Out] action as Power_On. After completed the setting, click [Save] button.

Setup1	Setup2	Update	Status	About	Logout			
Basic Setting	Device	Function	Libraries	Media Settir	ig Line1	Line2	Telephone	
New - Logi	c Out							
Name			Power_On					
Remote targ	pet		Device IO_1	183 👻				
Channel		1	1 💌					
Value		1	NC-RC					

3. Go to [I/O Control] page, and complete the following settings as below.

Setup1	Sctup2 U	pdate Status	About Logout				
Basic Sett	tng Device	Function Libraries	Audio Matrix I/O Co	nirol Media	Setting Output Volume		
Local Co	antrol			n fa			
INPUT	CONTROLLER	POSITION	FUNCTION	MODE	SECURITY SOURCE	TARGET	
1111	Logic		Logic Out	+ Intercom +] 🗆		• 😅
IN2	-	÷		+ Intercom +] 🗉		<u>CB</u>
1N3	-	*	-	▼ Intercom +] 🗆		9
OUTPU	T DEFAULT						
OUT1	NORC						
OUT2	ND-RC	÷					

 $_{\odot}$ Input: Select the control input which the button is connected to, the IN1 means logic input

channel 1.

- $\circ\,$ Controller: Select [Logic].
- Function: Select [Logic Out].
- o Target: Select the [Logic Out] action you set, here we choose [Power_On].
- 4. Then click [Save] button to activate this action.
- 5. Now the [Logic Out] action will be activated when pressing the control input button.

5.9.3 Make Telephone Call

5.9.3.1 Using TERRA-FXO

Add a TERRA-FXO with telephone card from [Setup1 > Device] as the picture below, then click [Add] button to set the telephone number on [Add Device] window.

FXO_198	FXO_198@192.168.101.198:5060	TERRA-FXO		online	Add	Add			
ateis	ateis@192, 168, 101, 169; 5060	PPM-IT5		online	Add				
FDX_118	FDX_118@192,168.101,118:5062	TERRA-FDX	TERRA-FDX						
		Add Device				\sim			
		Device Name	FXO_198			V			
		Product Type	TERRA-FXO 👻						
		URI	FXO_198@192.168.101.19	98:5060					
		Telephone Number	123456789	ň -					
			di d						

- Device Name: The name of this TERRA-FXO device.
- Telephone Number: Enter the telephone number which will be called.

5.9.3.2 Using PPM-IT5

♦ Use PPM-IT5 to call a telephone line by adding a TERRA-FXO on [Steup1 > Machine Window].

Setup1 Set	tup2 U	pdate Status	About I	.ogout				
Basic Setting	Device	Function Libraries	Audio Matrix	Machine Window	s Media Setting	Output Volume		
Name	URI			Туре	Zone	Tele Number	Status	Action
LAPG2T-1	LAPG2	T1@192.168.101.117	:5060	LAP-G2T	1		offline	<u>New / Edit / Delete</u>
LAPG2T-2	LAPG2	T1@192.168.101.117	:5060	LAP-G2T	2		offline	New / Edit / Delete
LAPG2T-3	LAPG2	T1@192.168.101.117	:5060	LAP-G2T	3		offline	New / Edit / Delete
LAPG2T-123	LAPG2	T1@192.168.101.117	:5060	LAP-G2T	1,2,3		offline	New / Edit / Delete
RADIO	RADIO	@192.168.100.4:506	i0	Other	1		offline	New / Edit / Delete
IEX_163	IEX_1	63@192.168.101.163	:5060	TERRA-IEX536	1		offline	New / Edit / Delete
RADIO_1014	RADIO	0_1014@192.168.101	.4:5060	Other	1		offline	New / Edit / Delete
RADIO_1015	RADIO	0_1015@192.168.101	.5:5060	Other	1		offline	New / Edit / Delete
EX_162	EX_16	2@192.168.101.162;	5062	TERRA-EX536	1,2		online	<u>New</u> / Edit / Delete
ATEISGAL 189	ATEIS	GAL 1@192, 168, 101, 1	89:5060	LAP-G2T	1		offline	<u>New / Edit / Delete</u>
FXO_198	FXO_	198@192.168.101.198	3:5060	TERRA-FXO		201	online	<u>New</u> / <u>Edit</u> / <u>Delete</u>

Windows: Main Page 👻 : Page: 1 💌

Key	Button Function		Button Name		Ali	Admin	LI	L2	L3	L4	L5	L6	L7	L8	L9
01	Device	¥	RADIO_1014	÷		120									
02	Device	¥	RADIO_1015	*		141									
03	Device Group	¥	PR	*		141									
04	Device	*	EX_162	5	14	123									
05	Device	٠	FXO_198			123									
06	-	٠	- 1	*		123									
07		•	<u>181</u>			0201									
08	22	•	1 <u>88</u>	•		5291									
09		•	1 <u>88</u> 1	•		3291									
10		•		•		55.91									
11		•	1781)	÷		(175)									
12	Device	•	ATEISGAL 189	5		(75)									

• Choose the target (Terracom device) on the [Button Name] grid of Machine Window.

5.9.3.3 Using TERRA-FDX

• By using a logic:

After connecting a trigger device such as a "push button", you can perform the function with the setting listed below.

Setup 1	Setup2	Update	Status	About L	ogout						
Basic Sett	ing Device		ion Libraries	Audio Matrix		ol Media	Setting	Output Volume			
Local Co INPUT	ontrol CONTROLLER		POSITION	FUNCTION		MODE	SECURITY	' SOURCE	_	TARGET	
IN1	RAC-5	¥	Channel 1	Call Target	•	Intercom 👻				Device IT5_168	
			Channel 2			Paging 💌				Device EX_127	•
			Channel 3			Intercom 👻				Device IT5_215	•
			Channel 4			Intercom 👻				Device DRS_61	-
			Channel 5			Intercom 👻				Device TMNet	*
IN2	Logic	÷		Call Trigger	•	Intercom +		MIC IN	•	INI	
IN3		×			*	Intercon 👻					<u>CB</u>

- I/O Control: Select the input which the button is connected to, the IN1 means logic input channel 1.
- Controller: Select Logic.
- Function: Select Call Trigger.
- $_{\odot}$ Source: Select the source, MIC IN or LINE IN.
- o Target: Select the target, here we use "IN1".
- By using a RAC-5 or RAC-8:
 - 1. After connecting a RAC with a button, you can perform the function with the setting listed below.

5etup 1	Setup2	Update Status	About L	ogout	_				
Basic Sett	ina Device	Function Libraries	Audio Matrix		ol Media	Setting	Output: Volume		
Local Co INPUT	ntrol CONTROLLER	POSITION	FUNCTION	1	MODE	SECURI	TY SOURCE	TARGET	
IN1	RAC-5		Call Target	Ŧ	Intercom 🔻			Device IT5_168	▼ CB
		Channel 2			Paging 👻	1 🗉		Device EX_127	*
		Channel 3			Intercom 👻] [[]		Device IT5_215	*
		Channel 4			Intercom 👻			Device DR5_61	•
		Channel 5			Intercom 👻			Device TMNet	-
INZ	Logic	•	Call Trigger	*	Intercom *		MIC IN	IN1	▼ <u>CB</u>
ING		¥		*	Intercom =] 🗆			CB

- I/O Control: Select the input which the RAC5/RAC8 is connected to, the IN1 means short 1pin and G-pin.
- o Controller: Select RAC5 or RAC8.
- o Position: The channels of the RAC.
- Function: Select Call Target.
- o Target: Select the target, you can set 5 or 8 different targets.
- 2. Now, set a button (as mentioned before) to trigger the RAC.
 - I/O Control: Select the input which the RAC5/RAC8 is connected to, the IN2 means short 2pin and G-pin.
 - Controller: Select Logic.
 - Function: Select Call Trigger.
 - $_{\odot}$ Source: Select the source, MIC IN or LINE IN.
 - \circ Target: Select the target, here we use "IN1" where the RAC is connected to.
- 3. Easily switch the knob to the target you want and press the button to perform a telephone call.

5.9.4 Message Paging

1. Create a new audio list with the selected audio files on [Play List Setting], and choose the folder on [Internal Play List] as the input source.

File Browser1	Play List Setting	
< Please dick file name to add or remove list >	Play List Name	Test
Open All File Close All File	Repeat Count	0
 Disk C: Alarm DE.wav Black Star.wav Chime 3 notes.WAV Im yours Jason Mraz p2.wav 02. My Love .mp3 02. Je Veux.mp3 REC140911 181541.mp3 	c:/Alarm DE.wav c:/Black Star.wav c:/02. Je Veux.mp3	*
REC140911 181821.mp3 REC140911 181850.mp3 REC140911 182411.g711a REC140911 182440.g711a	Disk Space	New List Remove Save to Internal
Satting	Total:	80 MB
Play Mode Repeat All Save	Free:	54 MB
Totavoal Diav Lict	_ Play List Information	
2 PLAYLIST FUNCTION	Name: Test	
	Repeat: 0	
I Test Edit / Delete Save	001. c:/Alarm DE.wav 002. c:/Black Star.wav 003. c:/02. Je Veux.mp3	

 Go to [Setup1 > I/O Control] and set [Paging] as the Mode, then choose the internal folder on [Source] as the input Source.

INPUT	CONTROLLER	POSITION	FUNCTION		MODE	SECURITY	SOURCE		TARGET		
IN1	Logic	2.	Message Button	•	Paging •		Internal Test	•	Device EX_162	•	<u>CB</u>
IN2	1-	1.		•	Intercom ¬						<u>CB</u>
IN3		•		*	Intercom -						<u>CB</u>

5.9.5 Play Music/Message from Interna/External Play List

1. Tick the checkbox of the playlist you

wish to be played.

PLAYLIST	FUNCTION
EXO	Edit / Delete / Copy to externa
MSG	Edit / Delete / Copy to externa
🔲 <u>schedu</u>	Edit / Delete / Copy to externa
₩ <u>test</u>	Edit / Delete / Copy to externa
External Play List	
PLAYLIST	FUNCTION
Play List	Edit / Delete / Copy to internal

- 2. Set the Play Mode (Normal/Repeat All/ Random) and Play Target (By internal source/external source/external source as priority).
- 3. Go to [Audio Matrix] page, and set the priority of MESSAGE Input higher than MIC IN, LINE IN, MONITOR, NET1 and NET2.
- 4. Then click [Save] button.
- 5. If the music/message playlist has been played successfully, the information of 2 CH Line Out will display as MESSAGE on the top right corner.

			NE OLET CAME			
Device	Functo	on Libraries	Audio Matrix	I/O Control	Media Setting	Output Volume
tup2	Update	Status	About L	ogout		
	244,2,5,5	Play Targ	et Detec	t by Exterr	nal 👻	Save
	8	Play Mode	e Repe	at All 🔻		
	1.0					1

Setting

INPUT	MOD	E	PRIC	RITY	Mute	LIN	IE OUT	(AMP)			STREAM OU	г
						1(A)	2(B)	S/PDIF	ou	г	IP ADDRESS	PORT
SIP	Mono	•	1	•		V	$[\mathbf{v}]$	N/A				
MIC IN	Mono	•	6	•	10	V	V	N/A	OFF	•	239.240.100.4	9012
LINE IN	Mono	٠	6	•		V		N/A	OFF	•	239.240.100.4	9012
IESSAGE	Auto	٠	3	•	Ē.	V	V	N/A	OFF	•	239, 240, 100, 4	9012
IONITOR	Mono	•	2	•	E	J	7	N/A				
NET1	Auto	+	6	-		J	J	N/A				
NET2	Auto	+	6	+		1	1	N/A				

Version 3.0.3.1, 2000/01/06 19:24:53 TERRA-FDX, FDX_118@192.168.101.118 OUT-1: MESSAGE / OUT-2: MESSAGE

5.9.6 Calibrate the RAC and Push Button

Calibrate RAC

1. Connect the RAC-5/RAC-8 to your Terracom device, make sure which pin is short with GND-pin.

For example here we use IN1 which means logic input channel 1.

0

2. Click the [CB Control Calibrate] button at [I/O Control] page.

Analog Input	CONTROL IN1 -	_ CONTON CONDICION	
	Contraction and the second	Control Input	CONTROL IN1 -
Controller	Minimum 👻	Controller	Maximum 👻

- 3. Switch the knob of RAC-5/RAC-8 to the channel 1 and click [Calibrate] button for receiving the [Minimum] data.
- 4. Switch the knob of RAC to the channel 5/channel 8 and click [Calibrate] button again for receiving the [Maximum] data.
- 5. Then switch each knob of RAC-5/RAC-8 again for receiving the calibration (from CH1~5 or from CH1~8). The data will automatically be recorded.
- 6. After all calibration (from CH1~5 or from CH1~8) is done, go back to "Status > Control Calibration" page and check if the values are correct. If they're too close or overlap with other level value, please switch to Manual mode and set the level value manually. Please refer to Control Calibrate 94 to manually set the correct level values.
- Calibrate the Push Button (Logic Input)

- 1. Connect the push button to your Terracom device, make sure which pin is short with GND-pin. For example here, we use IN1 (short G-pin and 1-pin).
- 2. Click [CB Calibrate] at the I/O Control page, a pop-up window will appear as the picture below.

Analog Input	CONTROL IN1 👻
Controller	Minimum 👻

- 3. Open the drop down list, select "Minimum", press the button and click [Calibrate].
- 4. Open the drop down list, select "Maximum", release the button and click [Calibrate].
- 5. After calibration (down and up button) is done, go back to "Status > Control Calibration" page and check if the values are correct. If they're too close or overlap with other level value, please switch to Manual mode and set the level value manually. Please refer to <u>Control Calibrate</u> 4 to manually set the correct level values.

Calibrate an Analog Knob

- 1. The first 2 steps are the same as calibrating a push button.
- 2. Open the drop down list, select "Maximum", turn up the knob to max. volume and click [Calibrate].
- 3. Open the drop down list, select "Minimum", turn down the knob to min. volume and click [Calibrate].
- 4. After the calibration is done, go back to "Status > Control Calibration" page and check if the values are in the correct range. If they're too close or overlap with other level value, please switch to Manual mode and set the level value manually. Please refer to <u>Control Calibrate</u> 14 to manually set the correct level values.

5.9.6.1 Hotel Application

How to use the RAC for music/source selection and how to make an announcement.

From the picture below, the TERRA-AMP is located in each hotel room which is connected to a

wall-mounted RAC for source selection, and makes the announcement using the PPM-IT5 console.

After the wiring connection between the Terracom devices and RAC are finished, go to the Terracom web interface.



- 1. Go to the web interface of TERRA-AMP to set the RAC and calibrate both channel selectors and the analog knob for volume control.
 - Go to "Setup1 > I/O Control" and set the controller to the correct control input. Here we assign the Channel Select to IN1 and Volume Control to IN2.

Basic Sett	ing Device	Function Libraries	Audio Matrix	I/0 (Control	Media Set	ting O	utput Volume			
Local Co	ntrol										
INPUT	CONTROLLER	POSITION	FUNCTION		MODE		SECURIT	Y SOURCE		TARGET	
IN1	RAC-8	•	Channel Select		Intercom	~					CB
IN2	RAC-Analog		Volume Control	-	Intercom	*					CB
IN3	Logic		Call Button	•	Intercom		(tur)	MIC IN	•	Device IT521	- <u>CB</u>

- Click the "CB" and a control input's calibration window will pop-up.
 - How to calibrate a channel selection on RAC is mentioned in the previous chapter, see <u>Calibrate the RAC and Push Button</u> 104 chapter.

) 192.168.101.118/ar	alog_calibrate.html	
Control Calibration		
Control Input	CONTROL IN1 👻	
Controller	RAC-8 CH1 👻	

 Similar to calibrate a button, an analog knob has the Min/Max value. Turn up to the max volume on RAC and click [Calibrate] button and turn down to the min volume on RAC and click [Calibrate] button. After all calibration is done, check the values at "Status > Control Calibration" to confirm the consoles are working.

192.168.101.118/ana	alog_calibrate.html	俞
Control Calibration		Ĩ
Control Input	CONTROL IN2 👻	
Controller	Minimum 👻	

- 2. The next part is to assign the input source priorities to RAC (except the SIP priority).
 - Go to the Audio Matrix page and set as the picture below, the number of channel is depending on the steps the RAC unit.
 - Open the drop-down list of "Select" under the "Control Options" and choose IN1 where the RAC is connected to. Next, change the volume from Fix to IN2 as well.

Now the priority of all the audio source and its volume are assigned to the RAC control as shown in the picture below.

	-					LINE	DUT (A	MP OUT)			STREAM OUT			C	ONT	ROL	ортј	ONS	1			
INPUT	MOD	E	PRIC	RITY	Mute	1(A)	2(B)	S/PDIF	τυο	Ē	IP ADDRESS	PORT		SELE	α		INP	UTV	OLUI	ME	BOF	FER
SIP	Mono	+	1	•	囲			N/A									Fix		36	-	RT	•
MIC IN	Mono	•	6	Ŧ		V	V	N/A	OFF	•	239.240.100.1	9012	IN1	•	1	•	IN2	•	32	Ψ.		
LINE IN	Mono	•	6	Ŧ	$\overline{\mathbb{V}}$	1	V	N/A	OFF		239.240.100.1	9012	IN1	•	2	•	IN2	•	32			
MESSAGE	Auto	•	б	w	$[\underline{\mathbb{V}}]$	V	V	N/A	OFF		239.240.100.1	9012	IN 1		3	•	IN2	•	32	*		
MONITOR	Mono	•	6	•	E	V	V	N/A									IN2	•	32	*	RT	•
NET1	Auto	•	6	Ŧ	$[\mathcal{T}]$	V	V	N/A									IN2	•	32	+	RT	•
NET2	Auto	•	6	•	123	V		N/A									IN2	•	32	*	RT	•
			nr.					SHOUTC	I AST/ICEC	AST		STREAM MUI	TICAST			_				_		
N/W IN		PIC	DE						URL			IGMP IP	POR	т		NE	T1			NE	T2	
SOURCE 1	SHOUT	cast	/iceca	st 🔻	http:	//192.1	68.100	1:9988							IN1	•	4	٠	Fix	•		•
SOURCE 2	Stream	n Mul	ticast	•								239.240.100.1	9012		IN1	•	5	•	Fix	•		•
SOURCE 3	Stream	n Mul	ticast	•								239.240.100.1	9012		IN1		6	•	Fix	•	-	
SOURCE 4	Stream	n Mul	ticast									239.240.100.1	9012		IN1	•	7		Fix	•		
SOURCE 5	Stream	n Mul	ticast									239.240.100.1	9012		IN1		8		Fix		-	
SOURCE 6	Stream	n Mul	ticast									239,240,100,1	9012		IN1	+	1	•	Fix	•		•
SOURCE 7	Stream	n Mul	ticast	•								239.240.100.1	9012		IN1	•	1	•	Fix	•	-	•
SOURCE 8	Stream	n Mul	ticast	-								239.240.100.1	9012		IN1	-	1	-	Fix	-	1-	+

Always set the volume of SIP in "FIX" and is sufficient for the safety requirements.

6 Tools

6.1 SIP Server (Intercom)

Use PPM-IT5 to call an IP phone over internet by using a SIP Server. The following guide how to setup the Server, IP phone and PPM-IT5.



- 1. The SIP server will redirect the RTP stream directly, here we use the Asterisk VOIP server.
- User Extension: The user name is required in PPM-IT5's web setting page.
- Display Name: Set the display name.
- Secret: Set the password which is required in PPM-IT5's setting page.
- Canreinvite: Re-Invite the policy for this device.
- nat: Set "Yes" for both internal and external devices. If the device will always as an internal device, select "No".

User Extension	1000		٦
Display Name	1000		1
CID Num Alias			
SIP Alias			
Decision Phase and			
- Device Options			
This device uses sip ter secret	chnology pv1000		
This device uses sip ter secret dtmfmode	pv1000 FFC 2833		
This device uses sip ter secret dtmfmode canreinvite	pv1000 RFC 2833 Yea -		
This device uses sip ter secret dtmfmode canreinvite context	pw1000 RFC 2833 Yes - Boon-intenal	1	
This device uses sip ter secret dtmfmode canreinvite context host	pre1000 RFC 2833 Yes - Brom-internal dynamic		
- uevice uppents This device uses sip ter secret dtmfmode canreinvite context host trustrpid	pre1000 RFC 2833 Yes - Brom-internal dynamic Yes -	3 - 3	
- uevice uppents This device uses sip ter secret dtmfmode canreinvite context host trustrpid sendrpid	chnology pv1000 RFC 2833 Yes - from-intenal dynamic Yes - No		

2. Set the IP phone, here we use the Yealink IP Phone.
- Register Name: The extension number you want to associate with this IP phone will be required in PPM-IT5's web setting page later.
- User Name/Password: Set the registered user ID and password of the specific Terracom device.
- SIP Server: Set the IP address and port of SIP Sever. In this example, it's the Asterisk VOIP server.

Account		Account 1	-
Basic >>			
	Register Status	Register Fail	
	Account Active	🥘 On 🛛 🔿	Off
	Label	1003	0
	Display Name	1003	0
	Register Name	1003	0
	User Name	1003	0
	Password		0
	STP Server	111,252,72,157	Port 5060

- 3. Go to the PPM-IT5 web interface to assign the SIP Server at "Setup1 > Basic Setting" and choose "Other" on Product Type at "Setup1 > Device > Edit".
- Set the SIP Server:
 - Firewall traversal Mode: Choose SIP Server.
 - Username/Password: Set the registered user ID and password of the specific Terracom device.
 - SIP Server IP: Set the IP address of SIP Sever.
 - SIP Port: Network port for SIP protocol, set 5060 by default.
 - RTP Port: Network port for RTP protocol, set 6912 by default.
- Add the device into Device:
 - Name: The extension number of IP phone.
 - Product: Choose "Other" and enter the product type, here we use "IP-Phone".
 - URI: The URI of the IP phone.
 - o Zone: Choose 1.

Setup1	Setup2	Update	Status	About	L	ogout	
Basic Setti	ng Device	Function	n Libraries	Audio Mal	trix	Machine Windows	Media Settir
_ Edit Devi	ce						ð.
Device N	ame		1003				
Product T	/pe		Other				
URI			1003@111.2	252.83.160:	5060		
Zone			1				

4. Go to the Main Window and add a Device button to get the function going with a click of mouse.

TCP O UDP
SIP Server O TERRA Net
IT5_215
192.168.100.176
5060
6912

6.2 Internet Paging Server (IPS)

Support to paging to Terracom device via TerraServer-Internet Paging Server (IPS) software.



- 1. SIP Server IP: Set the IP address of SIP Sever.
- 2. TerraServer IP: Set the IP address of Internet Paging Server (IPS).
- 3. SIP Account/SIP Password: Set the SIP account and password used for IPS.
- SIP Users: Set the registered user ID and password of your Terracom device for paging.
 Note: Users need to create the [SIP Account] and [SIP Users] from SIP Server first.
- 5. Start: Click to activate the IPS software.
- 6. Save/Reset: Click to save/reset the settings. Please note once the Reset button will clear all the data.
- TERRACOM Web Browser

512	
Transfer Protocol	TCP UDP
Firewall Traversal Mode	SIP Server TERRA N
+ Username	3001
+ Password	•••••
SIP Server IP	118.163.216.15
Identification Target	3000
SIP Port	5060
RTP Port	6912
Online Identification Way	O URI I IP Address
Identification Send Interval	2 💌 s

Go to Setup1 > Basic Setting >SIP 46 on TERRACOM web browser and set the IPS settings.

- Firewall Traversal Mode: Choose [SIP Server] option.
 - Username/Password: Set the registered user ID and password of the specific Terracom device for paging.
 - $_{\odot}$ SIP Server IP: Set the IP address of SIP Sever.
 - o Identification Target: Set the SIP Account used for IPS.
- SIP Port: Network port for SIP protocol, set 5060 by default.
- RTP Port: Network port for RTP protocol, set 6912 by default.
- Online Identification Way: Choose [URI] option as the identification way to know whether the Terracom device is online/offline.
- Identification Send Interval: The interval of sending the IPS signal.

♦ Using the TerraManager/PPM-IT5 to paging via Internet Paging Server (IPS) software and SIP server:

Source	IPS	SIP Server	Local Net Paging	Local Net Intercom	VPN Paging	VPN Intercom	Internet Paging	Internet Intercom
TerraManager	No	No	V	V	х	х	Х	Х
TerraManager	Yes	No	V	V	V	Х	Х	Х
TerraManager	No	Yes	V	V	Х	х	Х	х
TerraManager	Yes	Yes	V	V	V	х	V	х
PPM-IT5	No	No	V	V	Х	х	Х	х
PPM-IT5	Yes	No	V	V	V	V	Х	Х
PPM-IT5	No	Yes	V	V	Х	V	Х	V
PPM-IT5	Yes	Yes	V	V	V	V	V	V

- V: TerraManager/PPM-IT5 supported
- X: TerraManager/PPM-IT5 unsupported

6.3 Icecast

This chapter shows how to use Icecast server, Edcast and Winamp to stream audio to Terracom. Program Installation

• Icecast Server:

You can find the newest version on <u>Icecast website</u>. Here we use Icecast 2 for Windows (32bit) and follow the steps of setup wizard to install.

j⊡ Setup - Icecast2 Win32	
	Welcome to the Icecast2 Win32 Setup Wizard
	This will install loecast 2.3.2 on your computer.
	it is recommended that you close all other applications before continuing.
a icecast.org	Click Next to continue, or Cancel to exit Setup,
	Next > Crossel

• Winamp Media Player:

You can find the newest version on <u>Winamp website</u>, follow the steps to install.

Vinamp Installer	
@WINAMP	Welcome to the Winamp installer
	Winamp allows you to listen, watch and manage music, videos, podcasts and internet rado.
	Features indude:
	Wirelessly sync media to the Winamp for Android app
	Control playback in the browser with Winamp Toolbar
	Clean up media metadata with the Auto-Tag feature
	Build playlists using the Automatic Playlist generator
	Listen and subscribe to over 30,000 podcasts
	Next > Cancel

EdCast:

EdCast supports 48k sample rate and it's exactly what we need for Terracom. Here we use EdCast DSP for Winamp.

🖳 EdCast DSP For Winamp Setup: License Agreement	
EdCast DSP is released under the GNU Public License	
OddcastV3 DSP Plugin uses the following software :	
Ogg Vorbis	
http://www.vorbis.com - BSD License	
LAME	
http://lame.sourceforge.net/ - LGPL License	
BASS	*
Cancel Nullsoft Install System v2.40	I <u>A</u> gree

Hide To Systemy

Server Status

Value

If you want to stream MP3, tick the checkbox of LAME encoder dll (for MP3 recording).

🖫 EdCast DSP For Winamp Setup: Installation Options 🛛 🖃 💽 This will install EdCast DSP Winamp Select components to install: EdCast DSP plugin for Winamp BASS Audio DLLs OggFLAC DLLs
 OggFLAC DLLs
 Vorbis 1.1 DLLs
 LAME encoder dil (for MP3 encoding)
 AAC encoder dil (for AAC encoding) Space required: 2.0MB < Back Cancel Nullsoft Install System v2.40 Next > 🚇 EdCast DSP For Winamp Setup: Completed Completed JF BERREN ktract: bass.dll... 100% utput folder: C:\Program Files (x86)\Winamp ktract: libOggFLAC.dll... 100% ktract: libFLAC.dll... 100% act: ogg.dll... 100% act: vorbis.dll... 100% Shell: open http://www.rarewares.org/mp3.html pleted Nullsoft Install System v2.40 Close

Setting the Icecast Server: After installing the Icecast, double click its icon to open the server.

To set the port and password, click the "Configuration > Edit Configuration" to open a text file.

 Find the line <port>9866</port> and choose a port which should be an even number and NOT in the range 8000~9000.

Icacast2 Version 2.x

File Configuration About

Server Status | Source Level State | Global Statistics Server Has Been Running For

Stat Type

Start Server _____ Start Server on Application Startup

Not running

Name

• Find the text between the section <authentication>ID and password</authentication>, this will be required in EdCast's setting fields.

Once the setting is done, click the [Start Server] button, the server will start running as shown in the picture on the right.

• You can click the [Hide To Systray] button to hide the window.

Configuration	About		
-	-		
icecastor	B		
NHONOUS CONTRACTOR			1111 m d i
	Start Server on Server	Status	Hite ID System
Stop Server	Application Startup Runn	ling	
ver Status Source Le	velStatz		
Global Statistics			
erver Has Been Runni	ing For 0 Days, 0 Hours, 0 Minute	s, 23 Seconds	
Stat Type	Name	Value	
Stat Type Global Stat	Name stats connections	Value O	*
Stat Type Global Stat Olobal Stat	Name stats_connections stats	Value O O	^
Siat Type Global Stat Global Stat Global Stat	Name stats_connections stats sources	Value O O O	-
Sint Type Global Sint Global Sint Global Sint Global Sint Global Sint	Name stats_connections stats sources source total_connections	Value 0 0 0 0	
Stat Type Global Stat Global Stat Global Stat Global Stat Global Stat	Name stats_connections stats sources source_total_connections source_tats_connections	Value O O O O O	A
Sint Type Global Sint Global Sint Global Sint Global Sint Global Sint Global Sint	Name stats_connections stats sources source_tata_connections source_intexy_connections	Value 0 0 0 0 0 0 0	×
Sint Type Global Sint Global Sint Global Sint Global Sint Global Sint Global Sint Global Sint	Name stats_connections stats source_total_connections source_total_connections source_client_connections server_if	Value 0 0 0 0 0 0 0 0 0 0 0 0 0	¥
Siat Type Global Stat Global Stat Global Stat Global Stat Global Stat Global Stat Global Stat Global Stat	Name stats_connections stats source_tota_connections source_tota_connections source_cleant_connections server_id	Value 0 0 0 0 0 0 0 1 0 0 0 0 0 0 0 0 0 0 0	E
Sat Type Gobal Sat Obbal Sat Gobal Sat Gobal Sat Gobal Sat Gobal Sat Gobal Sat Gobal Sat	Name stats_connections stats source_total_connections source_relay_connections source_clind_connections server_id location lictance	Value 0 0 0 0 0 0 10ecest 2 3 2 Earth 0	E
Sht Type Gobal Sht Gobal Sht Gobal Sht Gobal Sht Gobal Sht Gobal Sht Gobal Sht Gobal Sht Gobal Sht	Name stats_connections stats sources source_total_connections source_intay_connections source_client_connections server_id location listeners listeners	Value 0 0 0 0 0 0 1 0 0 1 0 2 3.2 Earth 0 0	*
Sat Type Gobal Sat Gobal Sat Gobal Sat Gobal Sat Gobal Sat Gobal Sat Gobal Sat Gobal Sat Gobal Sat Gobal Sat	Name state_connections source_total_connections source_total_connections source_clicnt_connections server_idd location listeners listeners listener_connections	Value 0 0 0 0 0 0 1 cecast 2.3.2 Earth 0 0 0 0 0 0 1 cecast 2.3.2 Earth 0 0 0 0 0 0 0 0 0 0 0 0 0	E
Sat Type Gobal Stat Gobal Stat	Name stats_connections stats source_total_connections source_total_connections source_client_connections server_id location listeners listeners host tits_connections	Value 0 0 0 0 0 1 Cecast 2.3.2 Earth 0 0 1 Cocolhost 0	E
Sat Type Gobal Sat Gobal Sat	Name state_connections source_total_connections source_total_connections source_total_connections server_idd location listances listance_connections host file_connections	Yalue 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	E

- Set Winamp Media Player and EdCast plug-in:
- Assign the DSP plug-in of Winamp media player and set the parameters of EdCast.
- Right click on the Winamp panel and choose "Options > Preferences"

-	WINAMP	0		24	
	Nullsoft Winamp		y Fa		
	Play View file info Bookmarks	Alt+3	See.		
/ / /	Main Window Playlist Editor Equalizer Video	Alt+W Alt+E Alt+G Alt+V	ETS	ŕ	
	Options	•	105	Preferences	Ctrl+P
	Playback Visualization Skins	+ + +	 Image: A start of the start of	Skins Time elapsed Time remaining	Ctrl+T toggles Ctrl+T toggles
	Winamp Help	F1		Always On Top	Ctrl+A
100	Exit	Alt+F4	V	Double Size EasyMove	Ctrl+D Ctrl+E
			\checkmark	Repeat	R

♦ Once the Winamp Preference window opens, choose the item "edcast DSP v3 [dsp_edcast.dll]" in the "DSP/Effect" under the "Plug-ins" section.

Winamp Preferences	
Winamp Pro General Preferences - File Types 	DSP[Effect plug-in The plug-in selected below will be active, and will usually modify the sound being played. Select (none) if you do not wish to use a DSP[Effect plug-in. (none) <u>Constants (none) advasted[]</u> hullsoft SHCUTCast Source DSP v2.3.2 [dsp_sc.dl]
	Plug-in module: edcast DSP v3
dime.	Configure active plug-inUninstall plug-inGet plug-in

 Now double click the item to open the EdCast's setting window, it appears as shown in the picture on the right.

out etadata Edit		
L R		Peak Meter
dB -60 -45	-30 -15	-0
Live Recording	~ ~	
AutoConnect	*] [
Connect Add Encoder		
ncoder Settings	Transfer Rate	

- Click the [Add Encoder] button and set the encoder, only the Basic Setting matters the stream.
 - Samplerate: The sample rate must be 48k or the Terracom would not play the files.
 - Encoder type: Choose MP3. Here we use the MP3 Lame encoder found on a website.

Copy the file into the Winamp program directory.

• Server IP: Use the default value "localhost" if you're running the

Basic Settings YP Settings Ad	vanced Setting:	OK Cancel
General Seitings Bitrale	320	Use bitrate
Quality	0	
Sampleraie	48000	
Channels	2 * 1 for M	ano, 2 lor Sterea 🛛 🕅 Jaint Sterea
Encoder Type	MP3 Lame 💌	
Server Type	Icecasi2 💌	
Server IP	localhost	
Server Part	3866	
Encade: Password	ped0000	
Mountpoint	Aest	* Required for Idecast servers
Becomect Seconds	10	

server on your PC.

- Server Port: Set the port in the lcecast server's configuration window.
- Encoder password: Set the password in the lcecast server's configuration window.
- Mountpoint: This item is required for icecast, so we assign a "/test" for it.
- Click the [Connect] button to start the encoder, the stream will start after few seconds.
- You can right-click to disconnect, configure or delete the encoder as shown in the picture on the right.

pout	
Metadata Edit	
Dream	i Theater - Vacant
L	Peak Meter
dB -60 -45	-30 -15 -0
Live Recording	
9/	
AutoConnect	
AutoConnect Disconnect Add Encoder Encoder Settings	Transfer Rate
AutoLonnect Disconnect Add Encoder Encoder Settings MP3: 320kbps/48000Hz/Stereo	Transfer Rate 171 Kbps (/test)
AutoLonnect Add Encoder Encoder Settings MP3: 320kbps/48000Hz/Stereo	Transfer Rate 171 Kbps (/test) Disconnect
AutoLonnect Disconnect Add Encoder Encoder Settings MP3: 320kbps/48000Hz/Stereo	Transfer Rate 171 Kbps (Aest) Disconnect Configure
AutoLonnect Disconnect Add Encoder Encoder Settings MP3: 320kbps/48000Hz/Stereo	Transfer Rate 171 Kbps (/test) Disconnect Configure Delete

Icecast Web Interface:

You can direct your browser to

http://192.168.xxx.xxx:9866/ (replace

192.168.xxx.xxx with your own IP address when it's localhost) and browse through the web interface.

The Current Song showing the dynamic changes with your Winamp player.



Receiving stream from Icecast Server:

Go to Terracom's "Auido Matrix" webpage and set as shown in the picture below, remember to add the "Mountpoint" which is set in the EdCast plug-in setting window.

In the "Setup > Basic Setting" page as mentioned before, you can set the "Stream Buffer" time.

NI /1A/ TRI	MODE	SHOUTCAST/ICECAST	STREAM MUL	TICAST	3
N/W IN	MODE	URL	IGMP IP	PORT	
SOURCE 1	SHOUTcast/icecast	http://192.168.100.130:9866/test			IN1 💌 4 💌
SOURCE 2	SHOUTcast/icecast	http://192.168.100.61:9878/jms			IN1 💌 5 💌
SOURCE 3	Stream Multicast	0	239.240.100.2	4444	IN1 💌 6 💌
SOURCE 4	Stream Multicast		239.240.100.3	4444	IN1 💌 7 💌

7 Maintenance and Troubleshooting

This chapter will help you diagnose and troubleshoot common problems. If none of these solutions work, please contact your Terracom dealer.

♦ Update Fails

- 1. Proceed the Update action again.
- 2. Remove all the settings (compatible problem).
 - Function Libraries.
 - Control Input.
 - Recording.
- 3. Enable the "Factory Setting (CIN2)" at the "Basic Setting > SIP" page and perform the restoration.
 - Reverse your configuration.
 - If the IP address is lost, try the factory IP address: 192.168.102.1 to open the web interface.

Can't Access the USB

- 1. Make sure the file system on the USB is FAT32.
- 2. If the USB driver has not been safely removed, there might be a file with .db-journal extension created. Delete that file and insert the USB key to the Terracom device again.

8 Technical Data

8.1 TERRA-EX/TERRA-EXU

Electrical

Item	Voltage	Max Power Consumption	Connect Type	
		2)//	RJ45	
24VDC transformer	>19VDC	2 V V	DC Jack	

✤ Audio Characteristics-Line Out

- EIN @ gain 0 dBu = -83 dBrA
- THD+R (20Hz~20kHz)@ gain 0dBu , input 0 dBu = 0.09%
- FR(20Hz ~ 20kHz)@ gain 0dBu , input 0 dBu = 1 dBu
- Max Line out level @ gain 0dub ,input 0 dbu = 4.9dBu (1.38V)

✤Logic Input

ltem	Condition	Min.	Тур.	Max.
Logical Input	Low Active	-	-	1VDC
Logical input	High Active	4VDC	-	

Audio Characteristics

ltem	Condition	Min.	Тур.	Max.	Comment
Output Level (Headphone out)	20Hz ~ 20kHz	-	-	+5dBu	Electrically Balanced
Output Level (Audio Line out)	20Hz ~ 20kHz	-	-	+5dBu	Electrically Balanced
Input Impedance (input mix attenuation = 0 dB)	20Hz ~ 20kHz	-	20k Ohm	-	Electrically Balanced
Output Impedance	20Hz ~ 20kHz	-	50 Ohm	-	Electrically Balanced
Resolution	-	-	16Bit		-
Sensitivity	-	-59dBu	-	0dBu	-
Sampling Rate	-	-	48kHz	-	-
EIN	20Hz ~ 20kHz	-	<₋ 84dBu	-	-
T.H.D	20Hz~20kHz, @ gain 0dBu	-	-	<0.5% <0.02%	<0.5% @<20~20kHz <0.02%@ 1kHz

Mechanical & Environmental

Dimensions (W x L x H):	110mm x 104mm x 32mm
Weight:	0.4kg
Colour:	RAL7016
Operating temperature:	-5°C~55°C (23°F~131°F)
Storage temperature:	0 to +50°C (32°F ~112°F)
Relative humidity:	0% to 70% (non-condensing)

8.2 TERRA-EXA

* Electrical

	ltem	Voltage	Max Power Consumption	Connect Type
2	24VDC transformer	>19VDC	48W	DC Jack

- Max AMP OUT RMS @ gain 29 dBu, input -6 dbu, 8 Ω -load= 15W (11.1Vrms)
- Max AMP OUT @ gain 29 dBu, input -4.7 dbu, 8Ω-load= 20W (12.8Vrms)

Audio Characteristics-AMP Out

- EIN @ gain 29 dBu, 8Ω-load = -81 dBrA
- THD+R (20Hz~20kHz) @ gain 29dBu, input -7.5 dBu, 8Ω-load, AMP OUT is 10W < 1%
- FR (20Hz ~ 20kHz) @ gain 29 dBu, input -7.5 dBu, 8Ω-load, AMP OUT is 10W: +/- 1dBu

✤ Logic Input

ltem	Condition	Min.	Тур.	Max.
Logical Input	Low Active	-	-	1VDC
Logical input	ut Condition Low Active High Active	4VDC	-	

✤ Audio Characteristics

Item	Condition	Min.	Тур.	Max.	Comment
Resolution			16Bit	-	-
Sampling Rate	-	_	48kHz	-	_
EIN (Input Noise)	20Hz ~ 20kHz	_	<- 80dBrA		-
TUD	20Hz~20kHz,@ 7.5W	-	-	<1%	Half- power@1kHz 20~20kHz
ι.π.υ	20Hz~20kHz, @15W	-	-	<1%	Full- power@1kHz 20~20kHz
Frequency	20Hz~20kHz, @7.5W	>₋ 3dBu	-	< +3 dBu	Half- power@1kHz 20~20kHz
Response	20Hz~20kHz, @15W	>₋ 3dBu	-	< +3 dBu	Full-power @1kHz 20~20kHz

Mechanical & Environmental

Dimensions (W x L x H):	102mm x 110mm x 32mm
Weight:	0.45kg
Colour:	RAL7016
Operating temperature:	-5°C~55°C (23°F~131°F)
Storage temperature:	0 to +50°C (32°F ~112°F)
Relative humidity:	0% to 70% (non-condensing)

♦ Support paging by using ATEÏS IDA8, ECS, LAP G2T, UAP G2 processors.

8.3 TERRA-IEX/TERRA-IEXU

* Electrical

		ltem		Vol	tage	Max P	ower Co	nsump	tion	Connect Type	
	PoE 24VDC transformer		>10			2 1014/			RJ45		
			>19VDC		3.1200			DC Jack			
⊹ Au	idio Charact	teristics									
14			LINE IN	То	LINE	IN To	LINE IN	l To	SPDI	F IN To	SPDIF

ltem	LINE IN To Line out	LINE IN To SPDIF out	LINE IN To headphone	SPDIF IN To headphone	SPDIF IN To LINE Out
EIN @ gain 0 dBu	-83 dBra	-83 dBra	-83 dBra	-83 dBra	-83 dBra
THD+R (20Hz~20KHz)@ gain 0dBu input 0 dBu	0.09%	0.23%	0.10%	0.10%	0.10%
FR(20Hz ~ 20KHz) @ gain 0dBu input 0 dBu	1 dBu	-	1.6 dBu	0.3 dBu	1.3 dBu
FR(20Hz ~ 20KHz) @ gain 20dBu input -20 dBu	-	1 dBu	-	-	-

• Max Line in input level @ gain 0 dBu = 4.9 dBu

• Max Line out level@ gain 0dub ,input 0 dBu = 4.9dBu (1.38V)

✤Logic Input

ltem	Condition	Min.	Тур.	Max.
	Low Active	-	-	1VDC
Logical input	High Active	4VDC	-	

Audio Characteristics

ltem	Condition	Min.	Тур.	Max.	Comment
Sampling Rate	-	-	48kHz	-	-
Serial Clock Frequency	20Hz ~ 20kHz	-	3.08Hz	-	-

✤ Memory:

Туре	Memory size	Туре	TOTAL Memory size
SDRAM	64M Byte	-	64M Byte
FLASH	128M Byte	-	128M Byte
SPI flash	4M BIT	_	4M Bit

Mechanical & Environmental

Dimensions (W x L x H):	110mm x 104mm x 32mm
Weight:	0.4kg
Colour:	RAL7016
Operating temperature:	-5°C~55°C (23°F~131°F)
Storage temperature:	0 to +50°C (32°F ~112°F)
Relative humidity:	0% to 70% (non-condensing)

Support paging by using ATEÏS IDA8, ECS, LAP G2T, UAP G2 processors.

8.4 TERRA-AMP

✤ Electrical:

ltem	Voltage	Max Power Consumption	Connect Type
PoE		5.7W	RJ45
24VDC transformer	>19VDC	28.8W (max: 30W)	DC Jack

Audio Characteristics

- Audio inputs: maximum level + 5 dB, bandwidth 20 Hz 20 kHz
- Audio outputs: maximum level + 5 dB, bandwidth 20 Hz 20 kHz
- ✤ Logic Input

Item	Condition	Min.	Тур.	Max.
	Low Active	-	-	1VDC
Logical input	High Active	4VDC	-	

Mechanical & Environmental

Dimensions (W x L x H):	110mm x 104mm x 32mm
Weight:	0.44kg
Colour:	RAL7016
Operating temperature:	-5°C~55°C (23°F~131°F)
Storage temperature:	0 to +50°C (32°F ~112°F)
Relative humidity:	0% to 70% (non-condensing)

♦ Support paging by using ATEÏS IDA8, ECS, LAP G2T, UAP G2 processors.

8.5 TERRA-FDX

* Electrical

ltem	Voltage	Max Power Consumption	Connect Type	
PoE	>10V/DC	2.66	RJ45	
24VDC transformer	>19VDC	2.64 W	DC Jack	

Audio Characteristics

- EIN @ gain 0 dBu = -83 dBrA
- THD+R (20Hz~20kHz)@ gain 0dBu, input 0 dBu < 0.1%
- FR(20Hz ~ 20kHz)@ gain 0dBu, input 0 dBu: +/- 1 dBu
- Audio inputs: maximum level + 5 dB, bandwidth 20 Hz 20 kHz
- Audio outputs: maximum level + 5 dB, bandwidth 20 Hz 20 kHz
- Max Line in input level @ gain 0 dbu = 4.6 dBu
- Max Line out level@ gain 0dub ,input 0 dBu = 4.6dBu (1.31Vrms)
- ✤ Logic Input

Item	Condition	Min.	Тур.	Max.
Logical Input	Low Active	-	-	1VDC
Logical input	High Active	4VDC	-	

Mechanical & Environmental

Dimensions (W x L x H):	110mm x 104mm x 32mm
Weight:	0.4kg
Colour:	RAL7016

Operating temperature:	-5°C~55°C (23°F~131°F)
Storage temperature:	0 to +50°C (32°F ~112°F)
Relative humidity:	0% to 70% (non-condensing)

Support paging by using ATEÏS IDA8, ECS, LAP G2T, UAP G2 processors.

8.6 TERRA-DS

Electrical

ltem	Voltage	Max Power Consumption	Connect Type
PoE		2.12.14	RJ45
24VDC transformer	>19VDC	3.12 W	DC Jack

✤ Audio Characteristics

ltem	Condition	Min.	Тур.	Max.
EIN	1500hm input	-	-68 dBu	-
THD+R	20Hz~20kHz, 0dBu input	-	0.05%	1.00%
Frequency Response	20Hz ~ 20kHz, 0dBu input	-0.5 dBu	-	2.5dBu

Memory

Туре	Memory size	Туре	TOTAL Memory size
SDRAM	64M Byte	-	64M Byte
FLASH	128M Byte	-	128M Byte
SPI flash	4M BIT	_	4M Bit

Mechanical & Environmental

Dimensions (W x D x H):	110mm x 43mm x 220mm (with steel plate and outer case)	
Weight:	0.8kg	
Colour:	RAL7016 and Hairline Steel	
Operating temperature:	-10 to +55°C (14°F ~112°F)	
Storage temperature:	0 to +50°C (32°F ~112°F)	
Relative humidity:	0% to 70% (non-condensing)	

✤ Outer Case



8.7 TERRA-FXO

* Electrical

ltem	Voltage	Max Power Consumption	Connect Type
PoE		2.66 W	RJ45
24VDC transformer	>19000	2.64 W	DC Jack

✤ Sample Rate

Parameter	Symbol	Min	Тур.	Max.
Sample Rate	Fs (LRCK)	8 kHz	-	16 kHz
PCLK Input Frequency	PCLK (SCLK)	256 kHz	-	8192 kHz

Memory

Туре	Memory size	Туре	TOTAL Memory size
SDRAM	32M Byte	-	32M Byte
FLASH	128M Byte	-	128M Byte
SPI flash	4M BIT	_	4M Bit

Mechanical & Environmental

Dimensions (W x L x H):	110mm x 104mm x 32mm	
Weight:	0.43kg	
Colour:	RAL7016	
Operating temperature:	-5°C~55°C (23°F~131°F)	
Storage temperature:	0 to +50°C (32°F ~112°F)	
Relative humidity:	0% to 70% (non-condensing)	

Support paging by using ATEÏS IDA8, ECS, LAP G2T, UAP G2 processors.

8.8 TERRA-IO

Electrical

Item	Voltage	Max Power Consumption	Connect Type
PoE		2.88.14	RJ45
24VDC transformer	>19VDC	2.00 W	DC Jack

<u>ج</u>		Ini	nut
•	Logio		pui

Min.	Тур.	Max.
-	-	1VDC
4VDC	-	
4	Min. - VDC	Min. Typ. VDC -

Memory

	Туре	Memory size	Туре	TOTAL Memory size			
	SDRAM	32M Byte	IS42S83200D- 7TL	64M Byte			
	FLASH	128M Byte	HY27UF081G2A	128M Byte			
	SPI flash	4M BIT	W25X40VSSIG	4M Bit			
Mechanical & Environmental							
Dimensions (W x L x H) [.]			110mm x	104mm x 32mm			

Dimensions (W x L x H):	110mm x 104mm x 32mm
Weight:	0.42kg
Colour:	RAL7016
Operating temperature:	-5°C~55°C (23°F~131°F)
Storage temperature:	0 to +50°C (32°F ~112°F)
Relative humidity:	0% to 70% (non-condensing)

8.9 TERRA-K

Electrical

ltem	Voltage	Max Power Consumption	Connect Type
PoE			RJ45
24VDC transformer	>19VDC	3.12 W	2Pin EURO Block@3.81mm

Analog Audio Specification

Item	Condition	Min.	Тур.	Max.
Sensitivity	-	0 dBu	20 dBu	-
Equivalent Input Noise	20 dB gain,20~20kHz@15 0Ω	-	-80 dbra	-80 dBu
THD+N	20 dB gain,-20 dB input,50Hz~7kHz	-	< 1%	-
Frequency Response	20 dB gain,-20 dB input, 50Hz~7KHz	-	1dBu	-
Sampling rate	8kHz	_	8KHz	_
Phantom power	-	1.5VDC	2VDC	2.5V

Mechanical & Environmental

Dimensions (W x D x H):	135mm x 125mm x 350mm (with gooseneck mic)
Dimensions (W x D x H):	135mm x 125mm x 95mm
Weight:	0.8kg
Colour:	RAL7016
Operating temperature:	-10 to +55°C (14°F-112°F)
Storage temperature:	0 to +50°C (32°F ~112°F)
Relative humidity:	0% to 70% (non-condensing)

8.10 PPM-IT5

* Electrical

ltem	Voltage	Max Power Consumption	Connect Type
DeC	44~57VDC		RJ45
POE	250mA	6 W	
24VDC transformer	18~30VDC		DC Jack

Microphone Output

Maximum level	6dBu
Output Impedance	100 Ohm
THD	@ 1kHz < 1%
Bandwidth	@ -3dB = 100Hz ~ 18kHz
Noise Gate Threshold	-84dBu ~ -24dBu
Target Output Level	0
Max Output Level	-54dBu ~ 6dBu
Attack Time	8ms
Release Time	100ms

✤ Front Panel Speaker

Impedance:	4Ohm
Maximum Power:	1 W @ 1kHz
THD:	< 1% @ 1kHz
Bandwidth:	200Hz ~ 12kHz @ -3dB

Connection & Touch Panel

Maximum Cable Length	100m on Category 5 cable
Coroon	Diagonal: 5"
Screen	Resolution: 800 x 480

Mechanical & Environmental

Dimensions (W x L x H):	250mm x 140mm x 80mm
Microphone Length:	275mm
Weight:	1.1kg
Colour:	RAL7016
Operating temperature:	-5°C~55°C (23°F~131°F)
Storage temperature:	0 to +50°C (32°F ~112°F)
Relative humidity:	0% to 70% (non-condensing)

8.11 Safety

CE/EMI	EN 55013/CISPR13		
CE/EMS	EN 61000-4-2 (ESD)		
UL EMC			
TUV (TERRA-K)			
IP67 (TERRA-K)			

9 Contact Infomation



A member of PAX ProAV Group

Europe & Africa

ATEÏS Europe B.V. Celsiusstraat 1 - 2652 XN Lansingerland (Rotterdam Region), Netherlands Tel: +31 (0)10 2088690 info@ateis-europe.com UK & Ireland Penton UK Ltd.

Unit 2, Teville Industrials, Dominion Way, Worthing West Sussex, BN14 8NW, United Kingdom Tel: +44 (0)1903 215315 Fax: +44 (0)1903 215415 sales@pentonuk.co.uk

USA, Canada & Latin America Penton Audio USA

21 Sabin St. Pawtucket, RI 02860, USA Tel: 401-727-1600 Fax: 401-727-0003 <u>info@penton-usa.com</u>

China

Room 610, No. 255 Wubao Road, Minxing district, Shanghai, China Tel: 021-54495191/92 Fax: 021-54495193 sales@ateis.com.cn

South-East Asia

Blk 5002 Ang Mo Kio Avenue 5, #03-01B TECHplace II. Singapore 569871 Tel: +65 6481 1968 Fax: +65 6481 1960 <u>info@ateis-se.com.sg</u>

www.paxproavgroup.com/terracom

Switzerland & South-East Europe ATEÏS Sussie SA

Avenue des Baumettes 9, 1020 Renens VD, Switzerland Tel: +41 (0) 21 881 25 10 Fax: +41 (0) 21 881 25 09 info@ateis.ch

ATEÏS France

8, rue de l'Europe - ZA de Font Ratel - 38640 Claix, France Tel: 33 (0) 4 76 99 26 30 <u>contact@ateis.com</u>

> Middle East & India ATEÏS Middle East FZCO.

Light Industrial Unit 11 Dubai Silicon Oasis, Dubai United Arab Emirates Tel: +971 4 3262730 Fax: +971 4 3262731 info@ateis.ae

Far-East Asia

No.60, Xinghua 2nd Rd, Tanzi, Taichung 427, Taiwan Tel: +886-4-25333820 Fax: +886-4-25333830 sales@ateis-fareast.com